



ALLEGRI.

BY KALCO LIGHTING™

Assembly & Installation Instructions for 034221 Wall Sconce



Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.


Fixture Assembly

Step 1. Screw part #2 to part #1.

Step 2. Fix part #4 to part #1 by using #5.

Step 3. Fix part #3 to part #1 by using part #2.

Step 4. Install E12 bulbs, do not use bulbs that exceeds 60W.

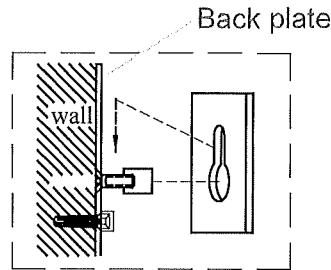


1-Back plate

2-Metal lathe A

3-Crystal shade

4>Main body

5-Nut

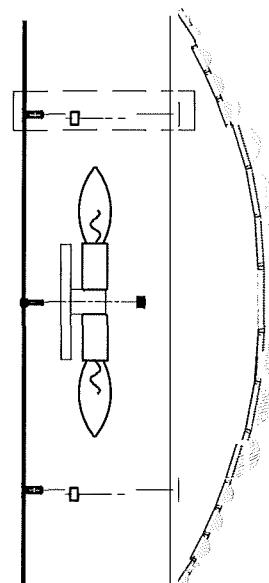



Assembly & Installation Instructions for 034221 Wall Sconce

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

Fixture Assembly

Step 5. Fasten 2 screws into mounting plate so that they extend away from wall when mounting plate is installed.

Step 6. Attach the mounting plate to the outlet box with screws.

Step 7. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.

Step 8. Carefully tuck in all wires. Attach the back plate with the mounting screw on the crossbar. Secure fixture with shell knobs.

