



ALLEGRI.

BY KALCO LIGHTING™

Customer Service: (702) 361-4345, (800) 525-2655, customer.service@kalco.com

Fixture Assembly

Step 2. Install Mounting Block to outlet box with outlet box original screws.

Step 3. Bring fixture a few inches close to outlet box to make wire connections. Have another set of hands hold the fixture while making wire's connections.



Step 4. Refer to wiring diagram.
Splice the ribbed side of fixture cord and connect to the white supply wire from outlet box.
Splice the smooth side of the fixture cord and connect to black supply wire from outlet box.
Connect fixture bare copper wire to green ground wire of outlet box.

Step 5. Use wire connectors and black electrician tape to secure all wire connections or as advised by your local electric code. Tuck excess of wire inside outlet box.

Step 6. Align fixture Back Plate holes to Mounting Block holes and screw the flat head screws in only a few threads. (Once all screws are in a few threads then tighten all).


Clean a damp with a microfiber or cotton cloth, do not use any chemicals or abrasives to avoid damaging the polished finish.

Turn lights on.

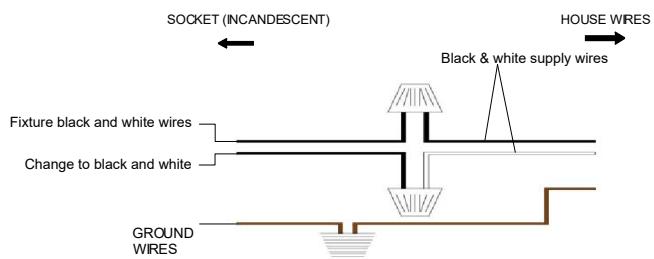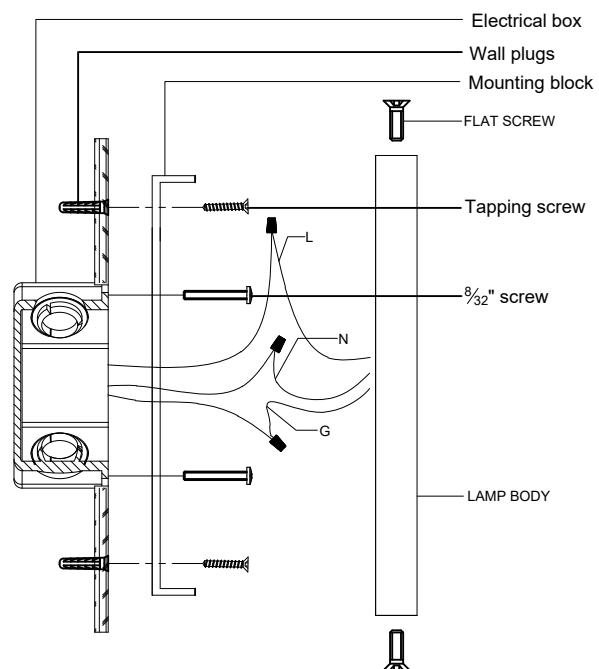



Assembly & Installation Instructions for:
034832-046-FR001



Customer Service: (702)361-4345, (800) 525-2655, customer.service@kalco.com

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

Fixture Assembly

Step1. This fixture comes fully assembled. Use this instructions only to identify parts if needed.

Go to page 2 to install fixture on outlet box.

