




# ALLEGRI.

BY KALCO LIGHTING™

Assembly & Installation Instructions for:  
035233 3 Light Bath



Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

**WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:**

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, so make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.



### Fixture Assembly

Step 1. Complete the mounting and wiring steps before the crystal installation steps.

Step 2. Assemble crystal tray to the lamp body as shown. Align holes in the crystal tray with holes in fixture and secure it to the fixture using headless screws.

Step 3. Attach the crystal tray to the lamp body using screws

Step 4. Install G9 base bulbs. Do not use bulbs that exceed LED/3W.

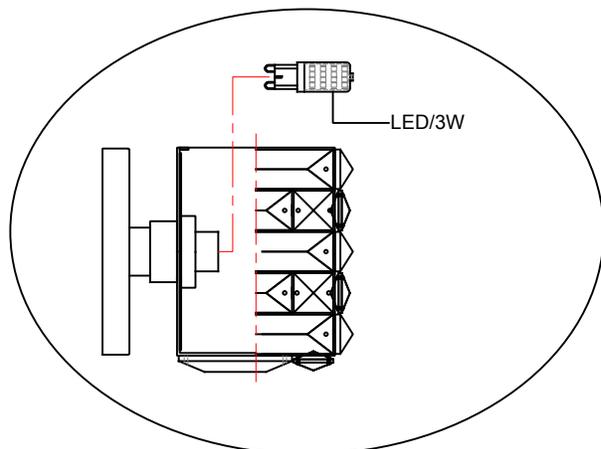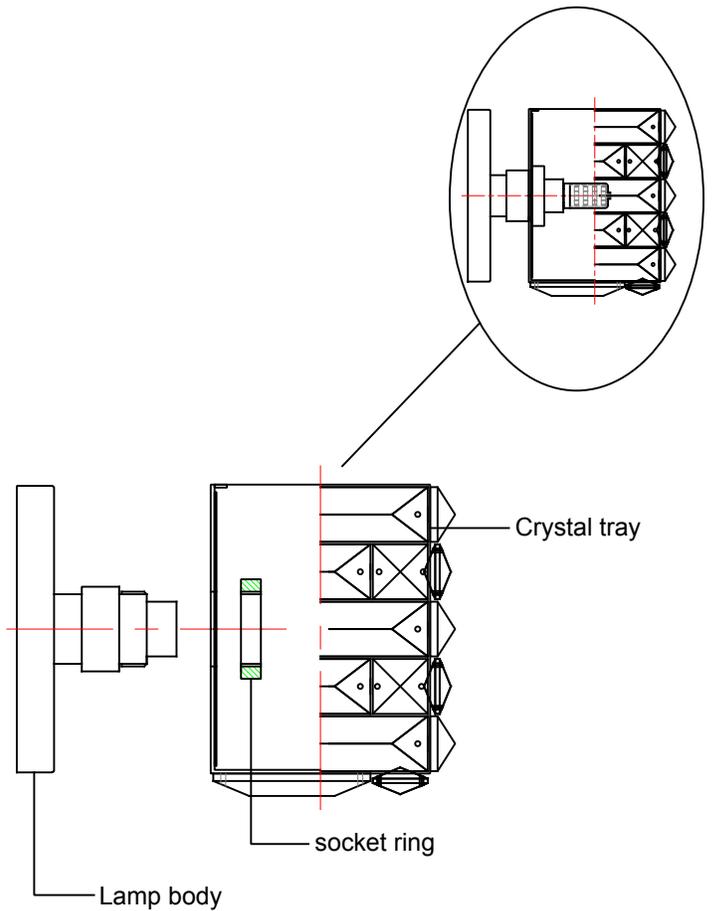



# ALLEGRI.

BY KALCO LIGHTING™

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

## Fixture Assembly

Step 5. Fasten 2 screws into mounting plate so that they extend away from wall when mounting plate is installed.

Step 6. Attach the mounting plate to the outlet box with screws.

Step 7. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 8. Carefully tuck in all wires. Attach the backplate to the crossbar with screws. Secure the fixture to the wall with the flat screws.

