



Fixture Assembly:

Step1. Attach mounting plate to outlet box with the provided 8/32 screws.




Step2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.

Step3. Carefully tuck in all wires. Attach the backplate to the crossbar with mounting screws. Secure fixture with flat screws.

Step4. Assemble the crystal bobeche to the lamp body as shown.

Step5. Install E12 bulbs. Do not use bulbs that exceed 60W.


Step6. Dress fixture according to crystal assembly instructions.

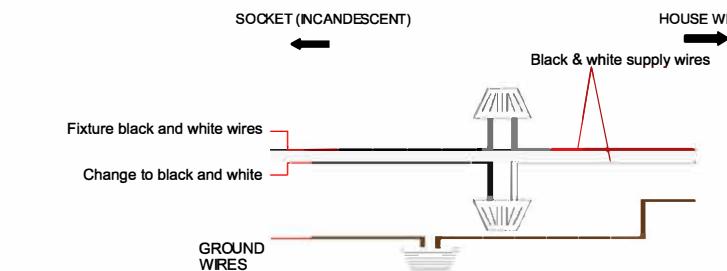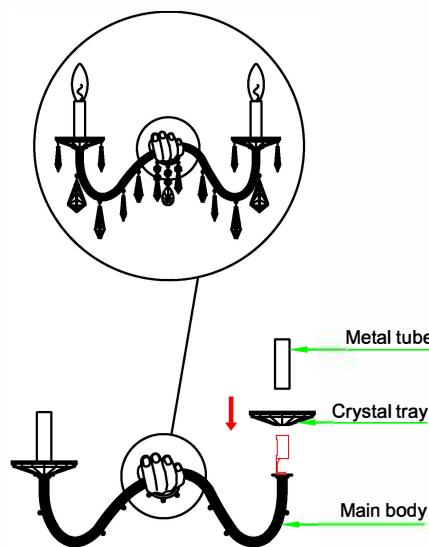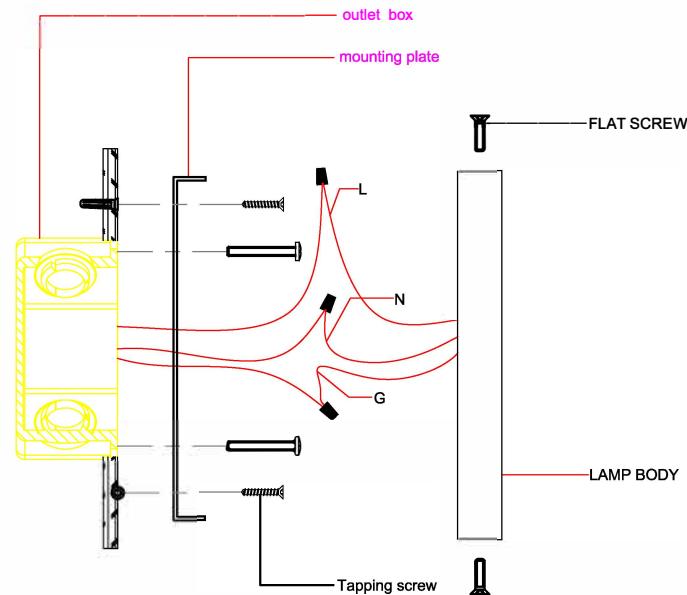

WARNING

TO REDUCE THE RISK OF FIRE OR INJURY:

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install this fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb exceeding the maximum wattage specified on the socket label.

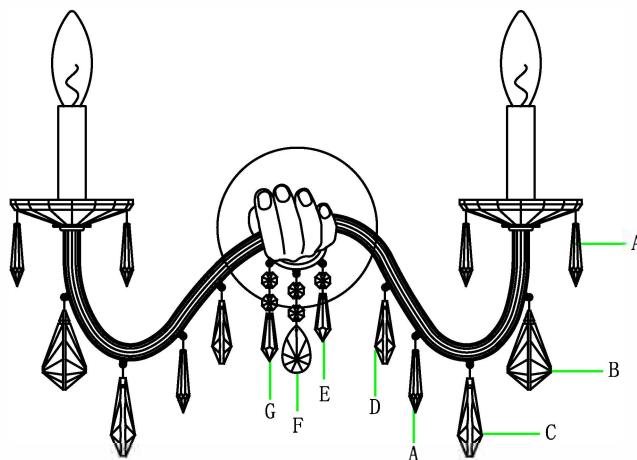Crystal Assembly:


Code	Qty
A	10
B	2
C	2
D	2
E	1
F	1
G	1



R18401-050-00-00
82401/50#
1PC

A



R18931-063-00-00
82931/63#
1PC

B



R10873-063-00-00
K873/63#
1PC

C



R20873-050-00-00
K873/50#
1PC

D



R31080-012-00-00
K1080/12#
1PC

R30401-038-00-00
K401/38#
1PC

E



R31080-012-00-00
K1080/12#
2PCS

R20873-038-00-00
K873/38#
1PC

F



R31080-012-00-00
K1080/12#
2PCS

R30401-038-00-00
K401/38#
1PC

G