



# ALLEGRI.

BY KALCO LIGHTING™

## ASSEMBLY INSTRUCTIONS

### 040421 Wall Sconce


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

#### WARNING:


1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this. More than one person may be necessary to install this fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

#### FIXTURE ASSEMBLY (FIG.2):



1. Use 8-32 screw, plastic plug, self-tapping screw to fix crossbar to J-box and Wall.
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
3. Carefully tuck in all wires. Attach the backplate with the mounting screw on the crossbar. Secure fixture with shell knobs.
4. Fix part #6 crystal column to part #4 mounting block by using part #5 flat screw.  
Note: Do not lock too tight when locking the crystal since the crystal will stick out when locking too tight.
5. Use part #2 Brass shade "U" shaped notch to slot on part #4 mounting block Metal ball.
6. Fix part #2 Brass shade to part #3 Lamp body by using part #1 flat screw.

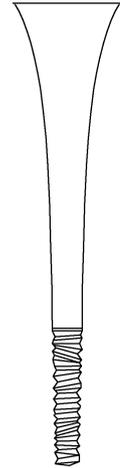

(FRONT VIEW)

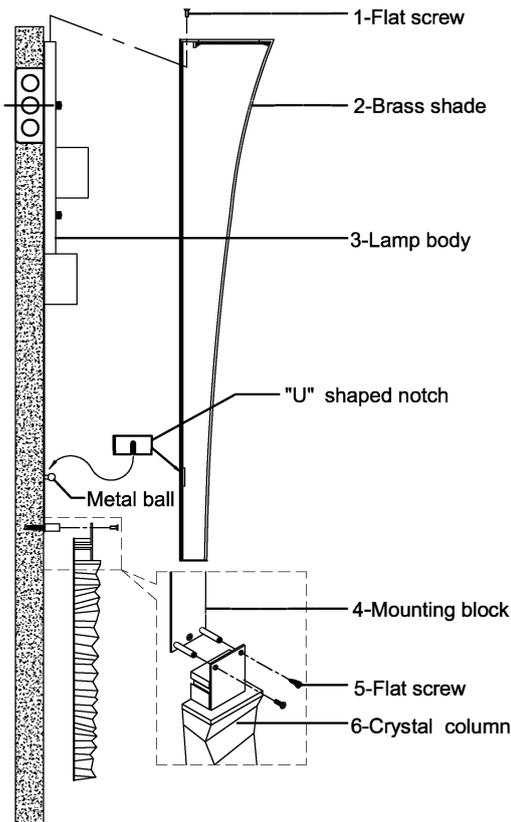

Wiring Diagram

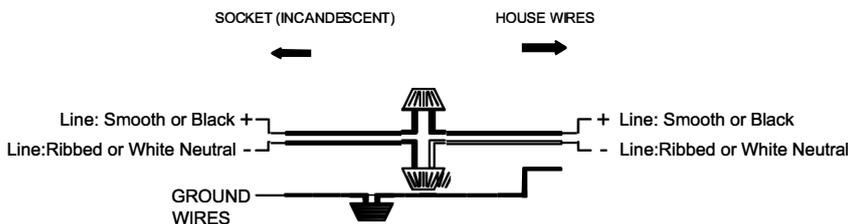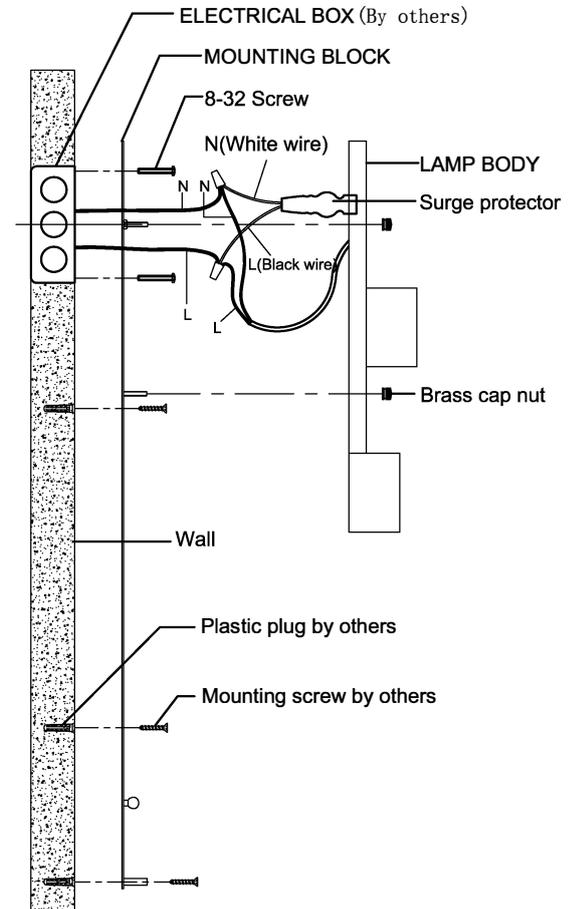



Note: It is recommended that each surge protector be connected to a maximum of 6 LED boards!

## SPD Installation

