


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

WARNING:


1. If you are unfamiliar with electrical wiring, call a qualified electrician to install.
2. More than one person may be necessary to install this fixture, make sure you have enough qualified help.
3. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

FIXTURE ASSEMBLY (FIG.2)




1. Fix crossbar on j-box by two 8-32 screws.
2. Connect the main wire with the power supply circuit see wire connection diagram.
3. Fix Lamp body on Mounting block by brass cap nut.
4. Install E12 bulbs, do not use bulbs that exceeds 40W.

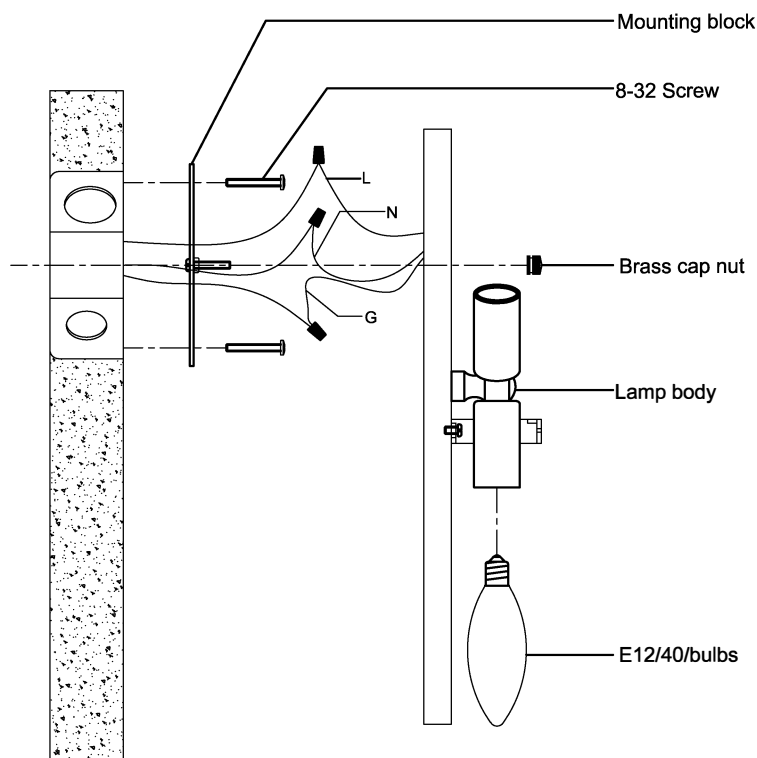

(FIG. 2)

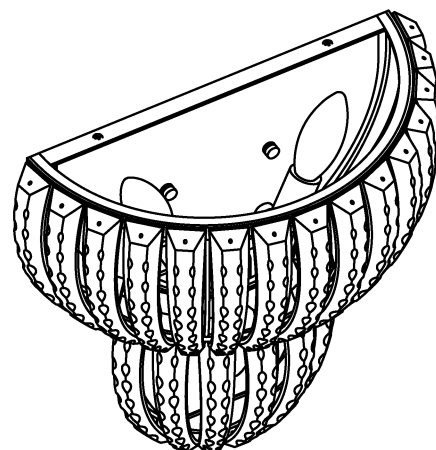


(FRONT VIEW)

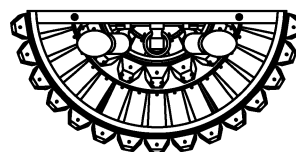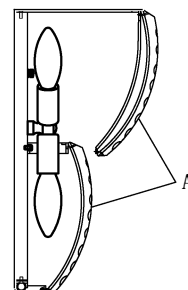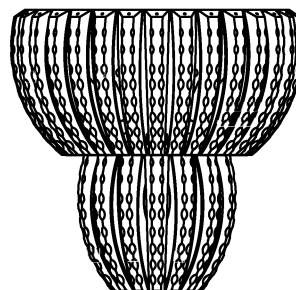

(FIG. 3)


Wiring Diagram

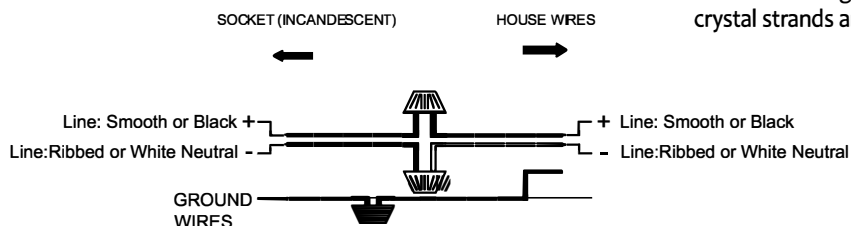

(FIG. 1)


CRYSTAL ASSEMBLY (FIG. 3):

Wear cotton gloves when handling crystals to avoid leaving fingerprints. Carefully unwrap crystal strands and clean with a damp soft cloth.

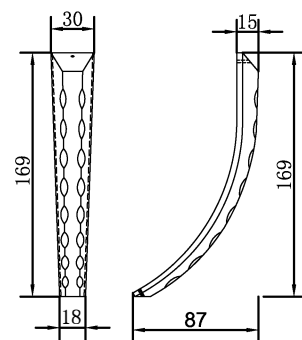


Clear K9 crystal
R20014-169-00-00
A(22Pcs)

If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

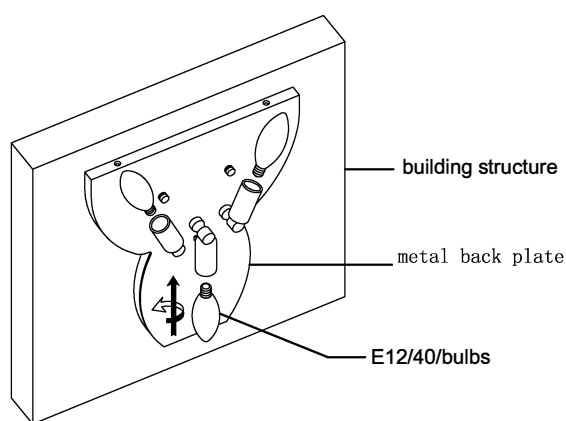


(FIG. 1)

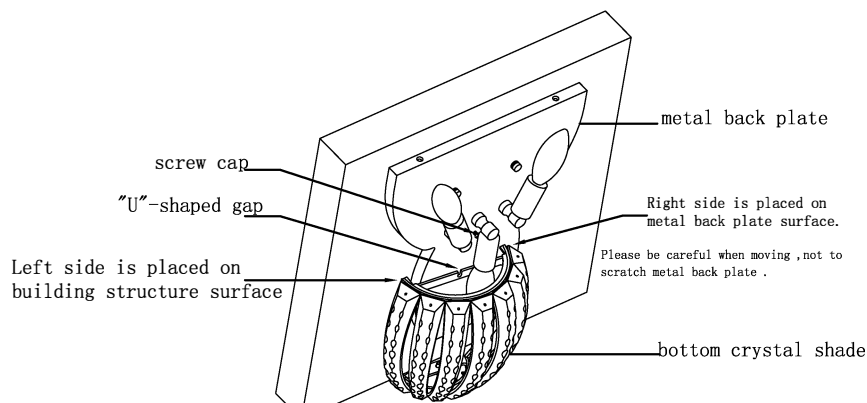


Notes when installing the bottom crystal shade:
Please place the left and right side according to (FIG. 2), because only in this way can the bottom crystal shade "U"-shaped gap be secured using the metal back plate screw cap.

(FIG. 2)

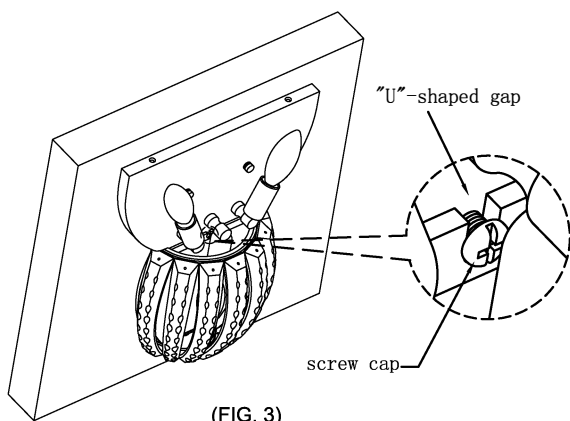


(FIG. 3)

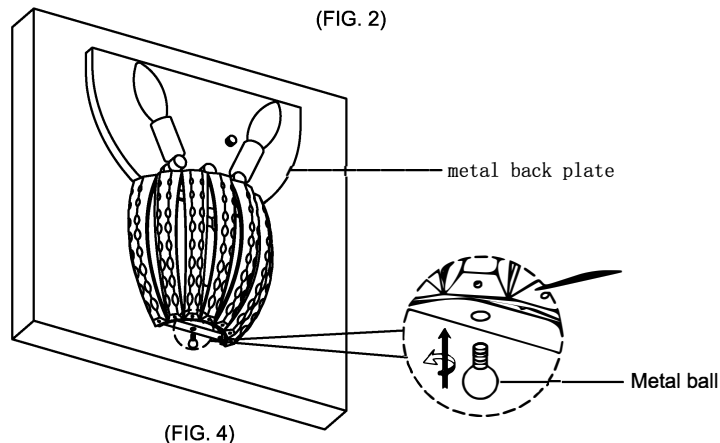

(FIG. 4)

INSTALLATION(FIG. 4):

- Turn off electricity, take all parts from part box.
- Connect the main wire with the power supply circuit.
See wire connection diagram.
- Screw bulb into lamp holder (see FIG. 1).
- Secure bottom crystal shade "U"-shaped gap into metal back plate screw cap (see FIG. 2&3).
- Fix bottom crystal shade on metal back plate by metal ball (see FIG.4).
- Fix top crystal shade on metal back plate by flat screw (see FIG.5).
- Check the installation and attach bulb into lamp holder.

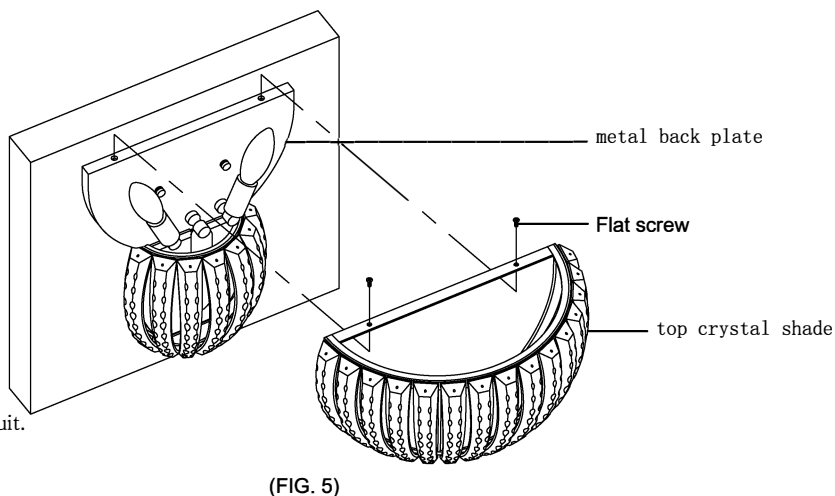

(FIG. 5)

(FIG. 4)