



If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

WARNING:

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this. More than one person may be necessary to install this fixture, so make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.


FIXTURE ASSEMBLY

1. Use 8-32 screw to fix crossbar to J-box .
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
3. Carefully tuck in all wires. Attach the backplate with the mounting screw on the crossbar.
4. Fix part Lamp body to part Mounting block by using part Metal ball .
5. Install E12 bulbs, do not use bulbs that exceeds 40W.

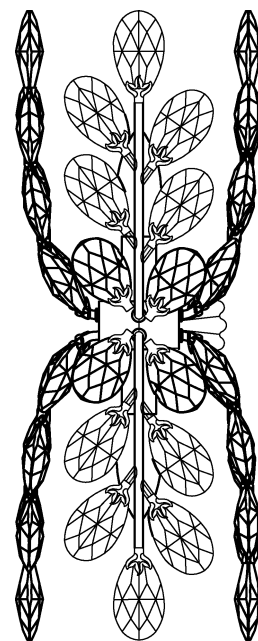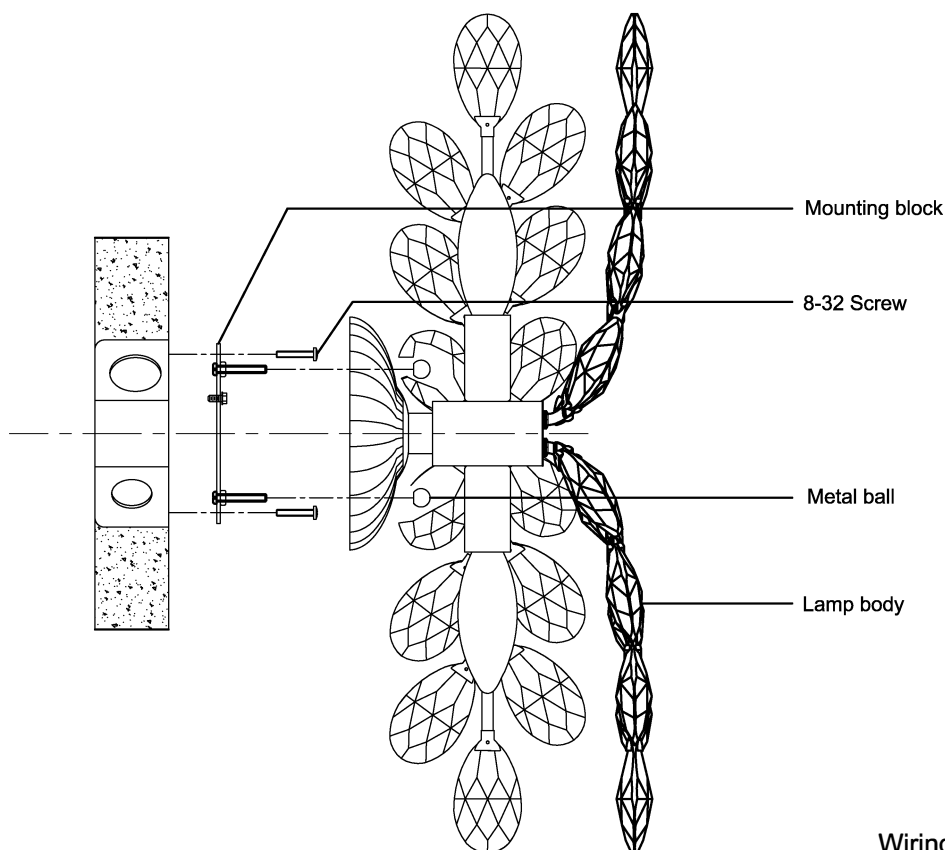





(FRONT VIEW)

Wiring Diagram

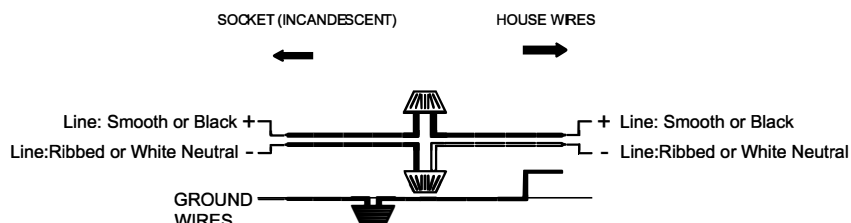

If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

Code	Qty
A	42

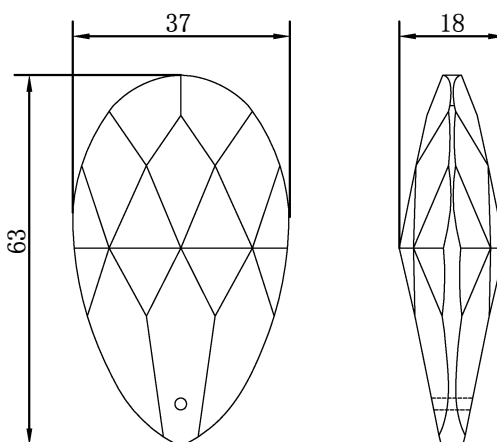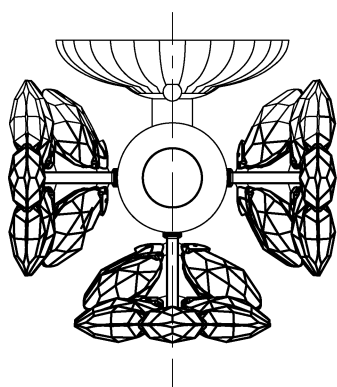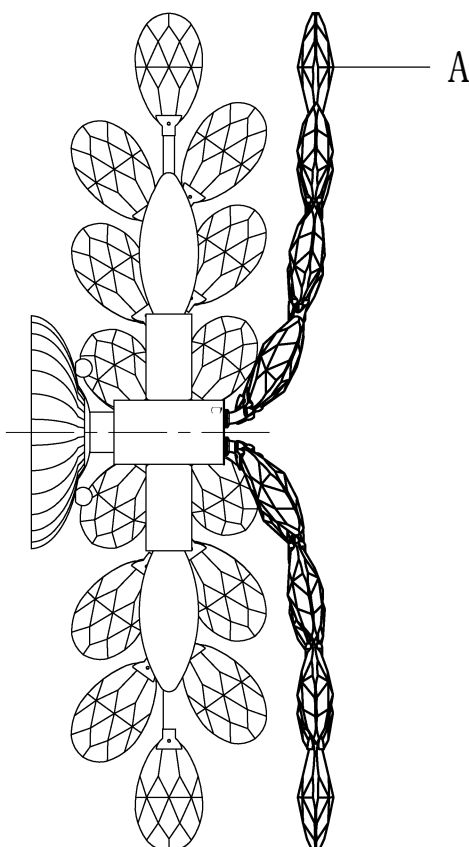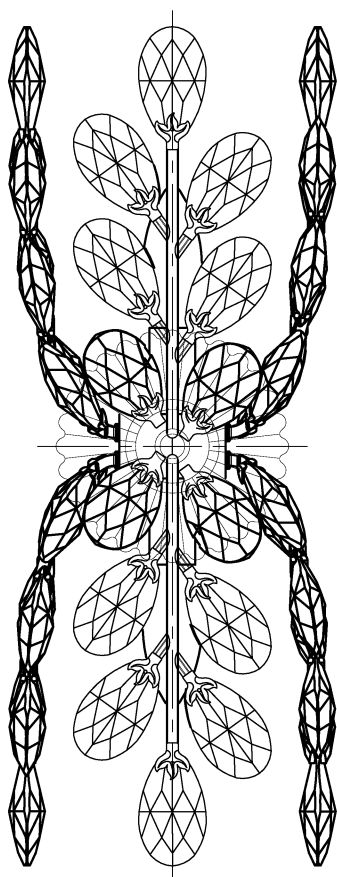

K9 Clear pear shaped crystal
63*37mm
R18721-063-00-00

A