



# ALLEGRI.

BY KALCO LIGHTING™

## ASSEMBLY INSTRUCTIONS

043521

If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

### WARNING:

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this. More than one person may be necessary to install this fixture, so make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

### Fixture Assembly


Step 1. Fasten 2 screws into the mounting plate so they extend away from wall when mounting plate is installed.

Step 2. Attach the mounting plate to outlet box with screws.


Step 3. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.

Step 4. Carefully tuck in all wires. Attach the backplate to the crossbar with mounting screws. Secure the fixture to the wall with the grub screws.

Step 5. Use set screw to fix crystal onto the frame.

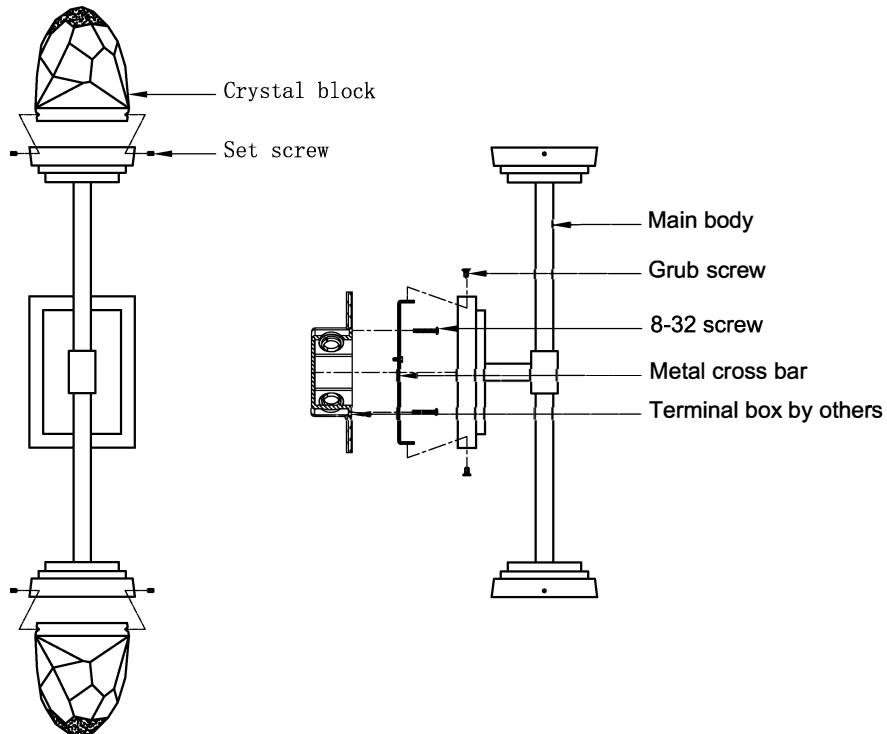

Wiring Diagram

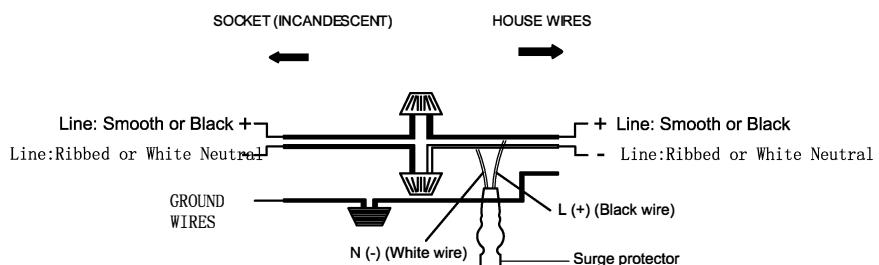


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

**WARNING:**

1. If you are unfamiliar with electrical wiring,call a qualified electrician to install this ,More than one person may be necessary to install this fixture,make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

**Note:**It is recommended that each surge protector be connected to a maximum of 6 LED boards!

## SPD Installation

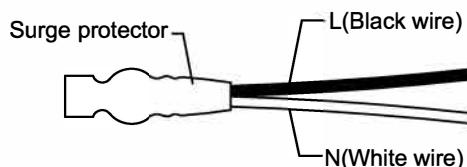

LED connected by PARALLEL

SPD connected by PARALLEL

■ Please refer to the figure below

