


Customer Service:(800)525-2655,customercare@kalco.com


Fixture Assembly (FIG. 2):

1. Use 8-32 screws to fix the crossbar to J-box .
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
3. Carefully tuck in all wires. Attach the fixture to the crossbar using the mounting screws.
4. Fix the lamp body to part mounting block by using the flat screws.
5. Install 24V/LED PANEL. Do not use LED PANEL that exceeds 9W.

wiring diagram

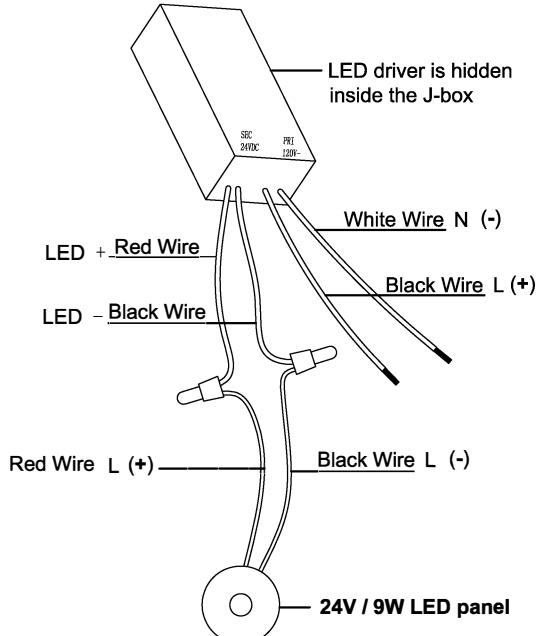


Wiring Diagram

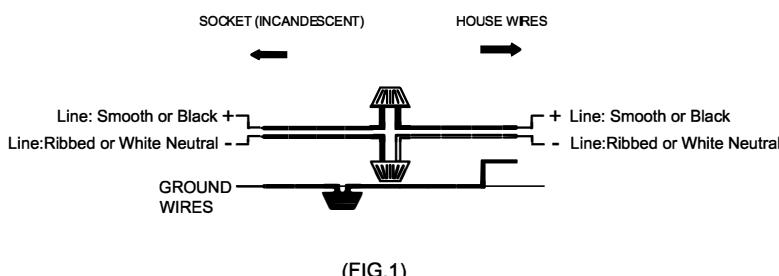


CRYSTAL ASSEMBLY (FIG. 3):

1. Wear cotton gloves to handle crystals to avoid leaving finger marks. Carefully unwrap crystal strands and clean with a damp soft cloth.

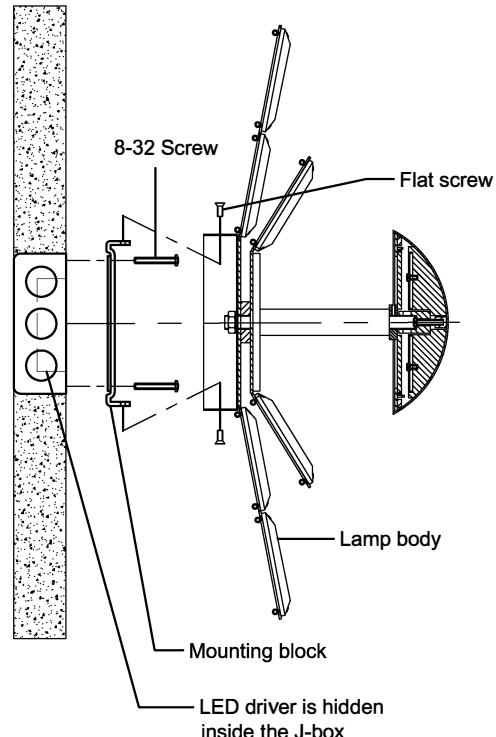

WARNING:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install this fixture, make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

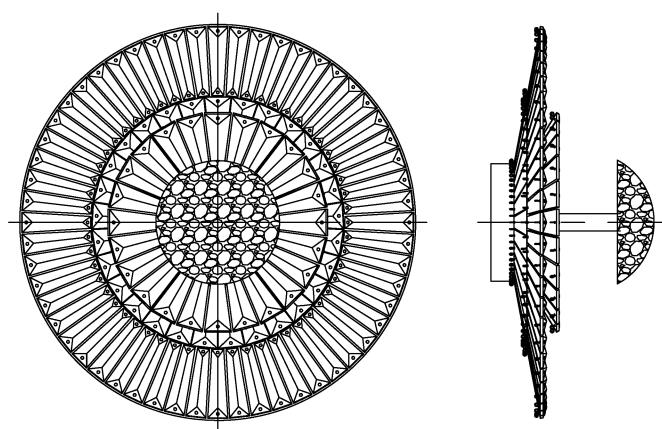



ALLEGRI.





BY KALCO LIGHTING™

CRYSTAL DRESSING INSTRUCTIONS

043821


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

Code	Qty
A	56
B	53

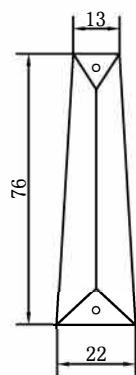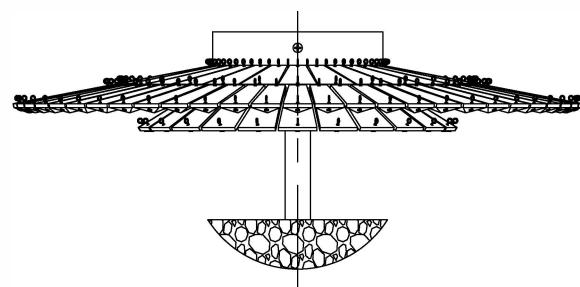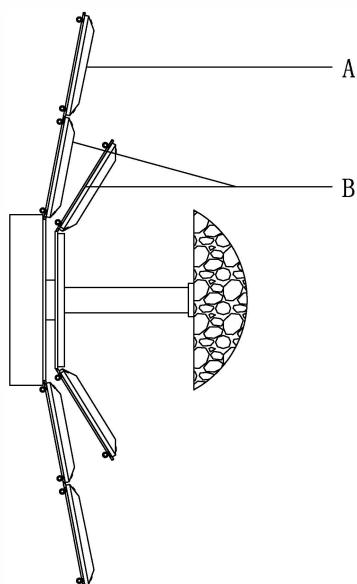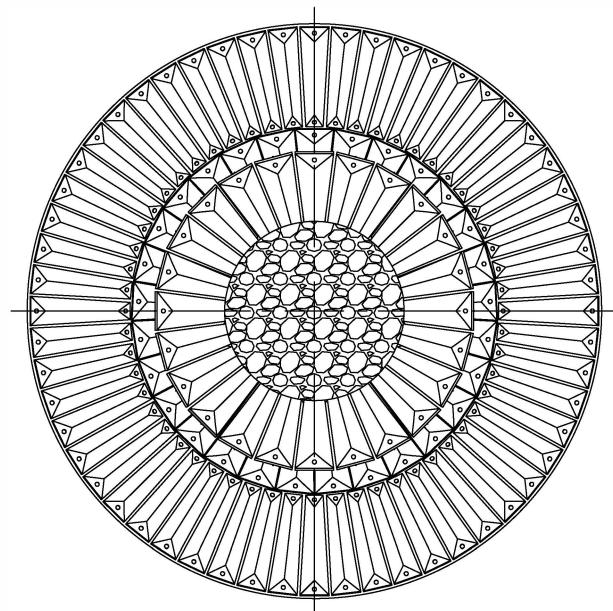

A

W22*W13*L76mm
R20013-076-00-18

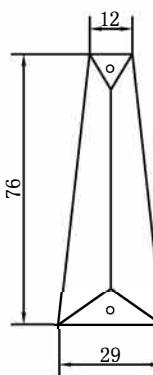

B

W29*W12*L76mm
R20013-076-00-20