


Customer Service:(800)525-2655,customercare@kalco.com

Fixture Assembly (FIG. 2):


1. Use 8-32 screw to fix crossbar to J-box .
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
3. Carefully tuck in all wires. Attach.
4. Fix part Crystal column to part Lamp body by using part Flat head screw.
5. Fix part Lamp body to part mounting block by using part Flat head screw.
6. Install 120V/LED PANEL, do not use LED PANEL that exceeds 6W.

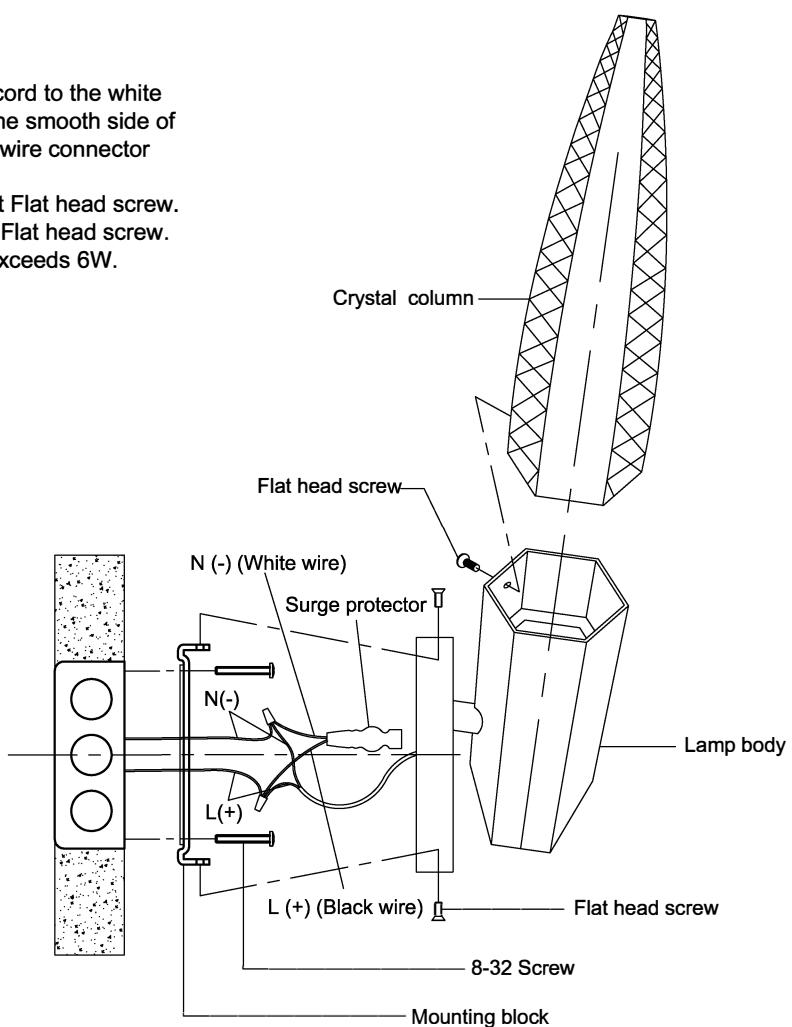

WARNING:



- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install this fixture, make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

Wiring Diagram

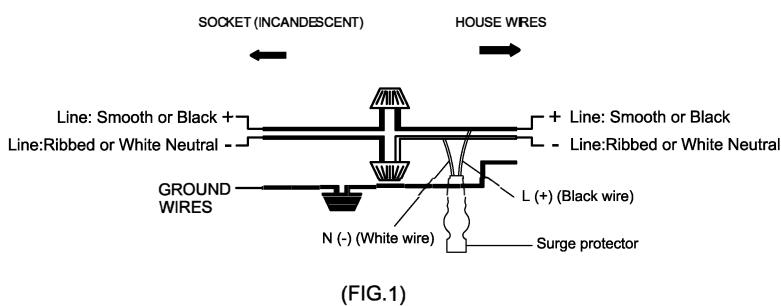

CRYSTAL ASSEMBLY (FIG. 3):

1. Wear cotton gloves to handle crystals to avoid leaving finger marks. Carefully unwrap crystal strands and clean with a damp soft cloth.

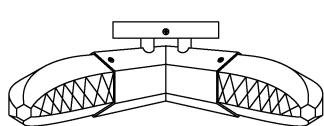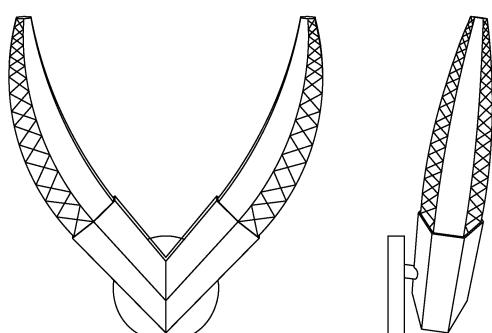

(FRONT VIEW)

(FIG. 3)



ALLEGRI.




BY KALCO LIGHTING™

CRYSTAL ASSEMBLY INSTRUCTIONS


046022

If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

Code	Qty
A	1
B	1

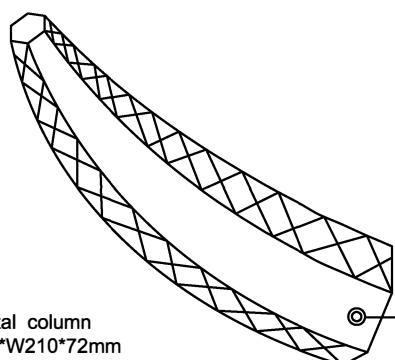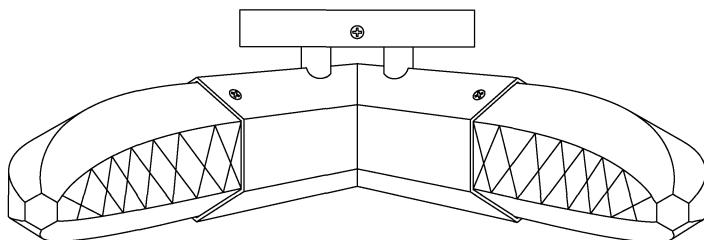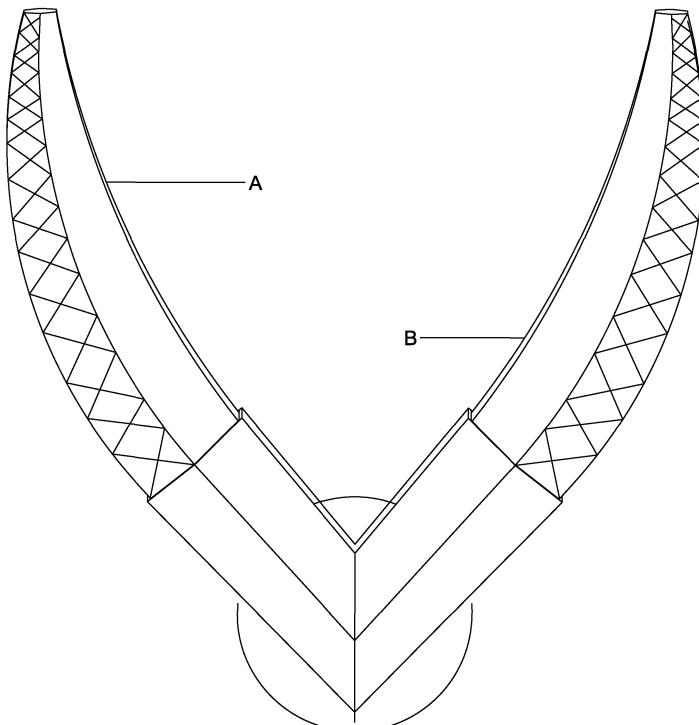

Crystal column
L245*W210*72mm
R20006-245-00-01

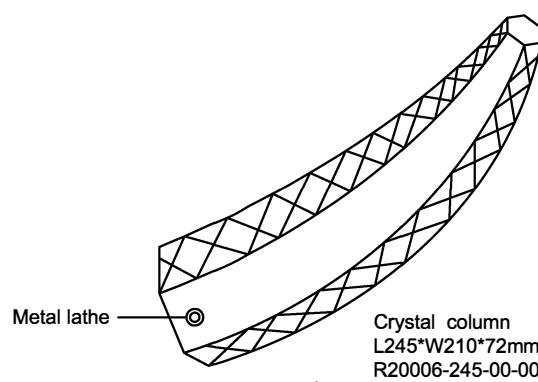

Crystal column
L245*W210*72mm
R20006-245-00-00