



ALLEGRI.

BY KALCO LIGHTING™

ASSEMBLY INSTRUCTIONS

046121


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

WARNING:


1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this. More than one person may be necessary to install this fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

Fixture Assembly

1. Use 8-32 screw to fix crossbar to J-box.
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.
3. Carefully tuck in all wires. Attach.
4. Fix part Lamp body to part mounting block by using part Flat screw.
5. Put part crystal through part metal lathe then screw to part lamp body.
6. Install E12 bulb, do not use bulb that exceeds 40W.

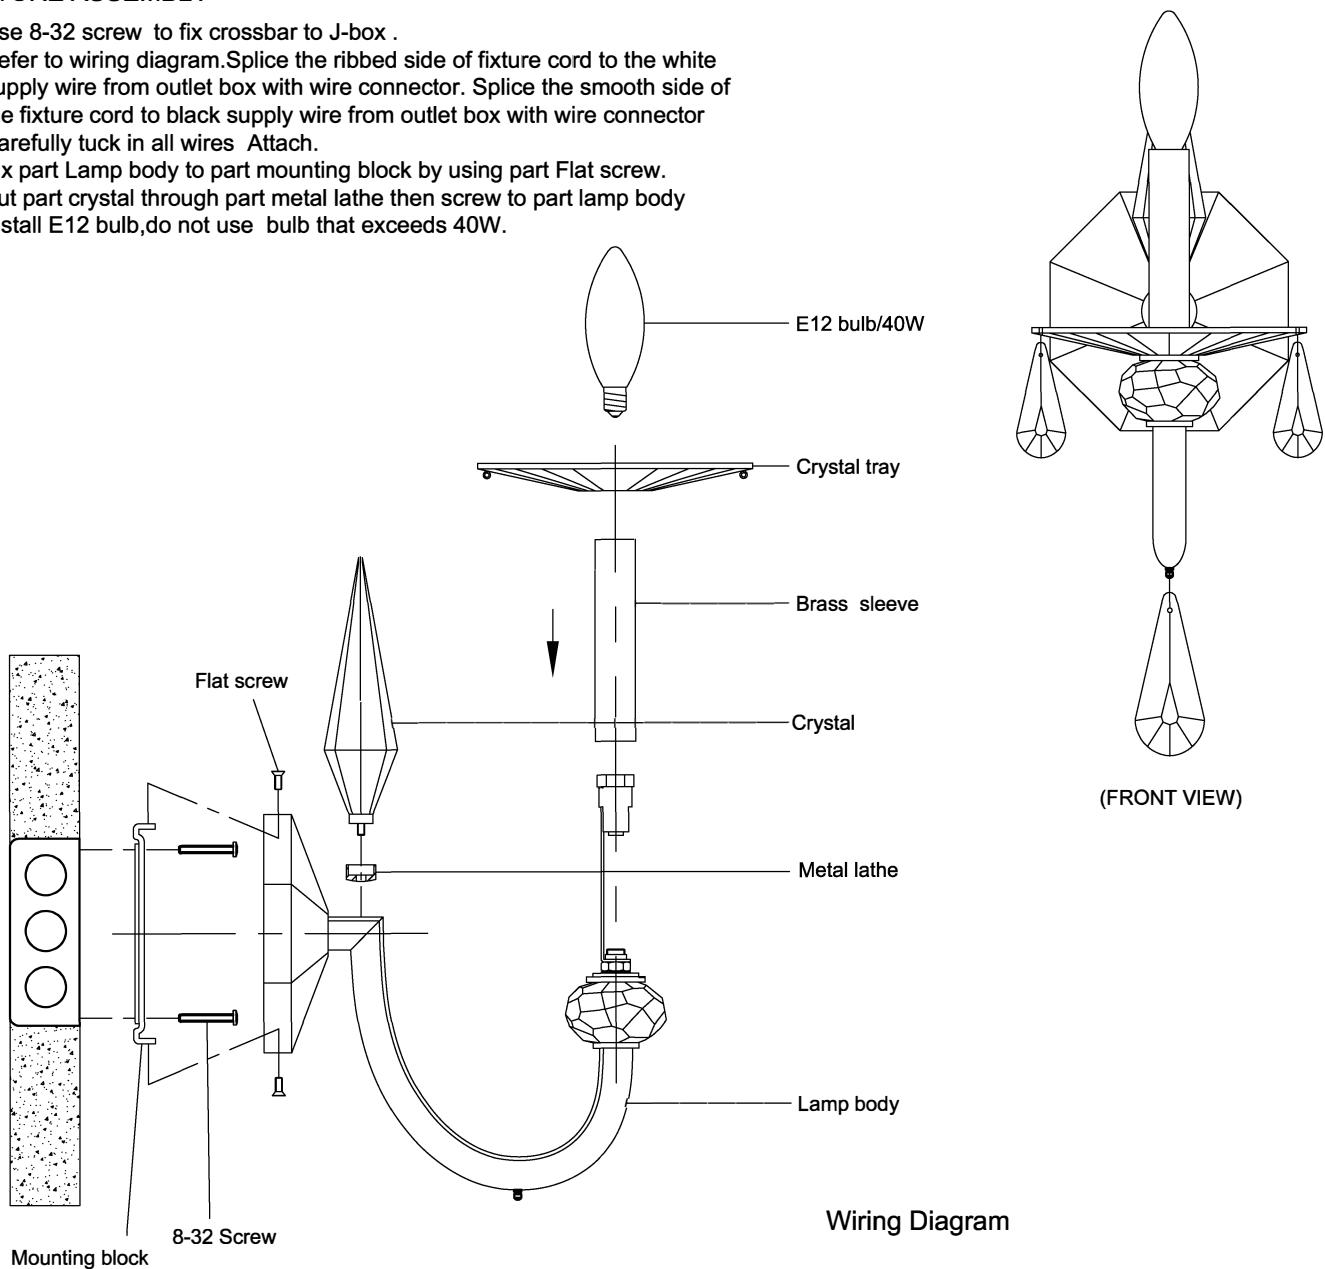

Wiring Diagram

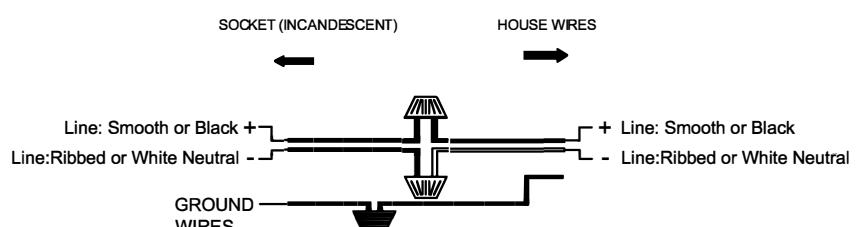



ALLEGRI.

BY KALCO LIGHTING™

CRYSTAL DRESSING INSTRUCTIONS

046121

If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

Code	Qty
A	5
B	1
C	1

