




At Home In Any Environment

Assembly & Installation Instructions for: 310470 Pendant

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

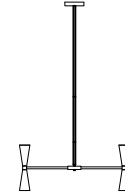

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electricalwiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a coltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattge specified on the socket label.

Fixture Assembly

Step 1. Fasten 2 8-32 screws to mounting plate so that they extend away from the wall when mounting plate is installed




Step 2. Attach mounting plate to electrical box using 2 8-32 machine screws  
At the same time,install safety to ceiling beam

Step 3. Screw 6" steeve into Main body.

Step 4. Screw 12" steeve into 6" steeve.

Step 5. Screw 24" steeve into 12" steeve.

Step 6. Fix part Rolling plate、Canopy to part 24" Steeve by using nut.

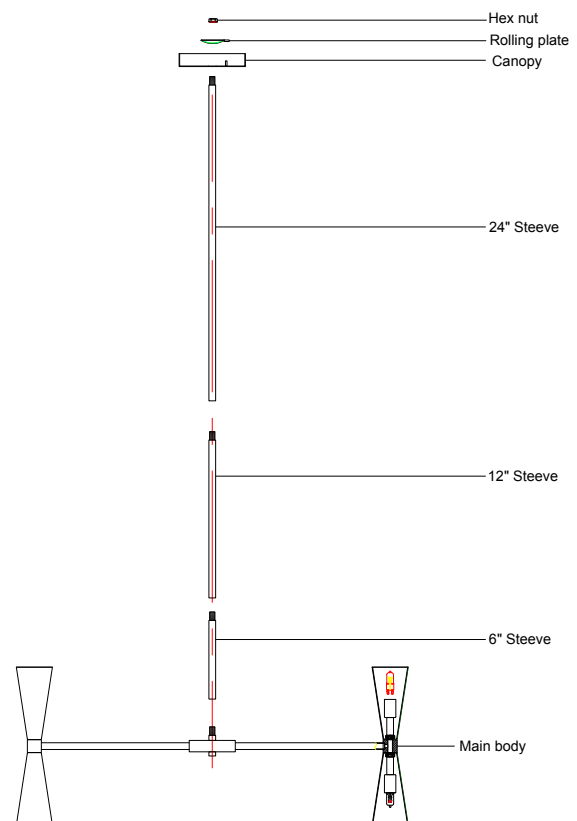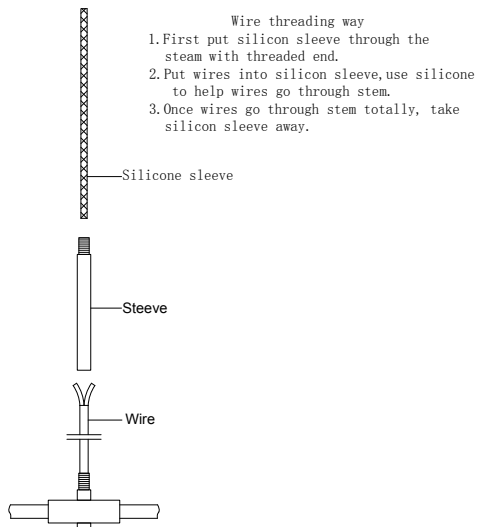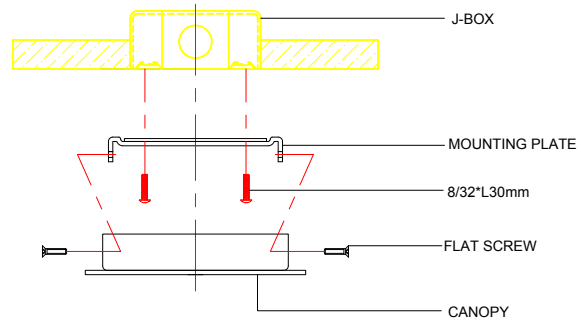



*At Home In Any Environment*

**Assembly & Installatbn Instructions for:  
310470 Pendant**

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

**Fixture Assembly**

Step 7. Refer to wiring diagram.  
Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 8. Carefully tuck in all wires and faise the canopy to the outlet box . Secure canopy with nuts

Step 9. Install E12 LED bulbs,do not use bulbs that exceeds 3W.

