




*At Home In Any Environment*

**Assembly & Installation Instructions for:  
310471 Pendant**

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

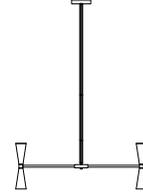

**WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:**

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

**Fixture Assembly**

Step 1. Fasten 2 8-32 screws to mounting plate so that they extend away from the wall when mounting plate is installed



Step 2. Attach mounting plate to electrical box using 2 8-32 machine screws  
At the same time, install safety to ceiling beam

Step 3. Screw 6" steeve into Main body.


Step 4. Screw 12" steeve into 6" steeve.

Step 5. Screw 24" steeve into 12" steeve.

Step 6. Fix part Rolling plate, Canopy to part 24" Steeve by using nut.

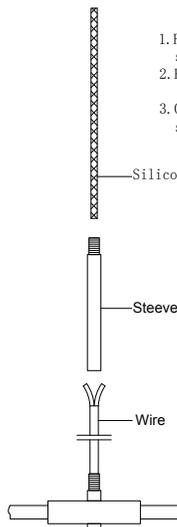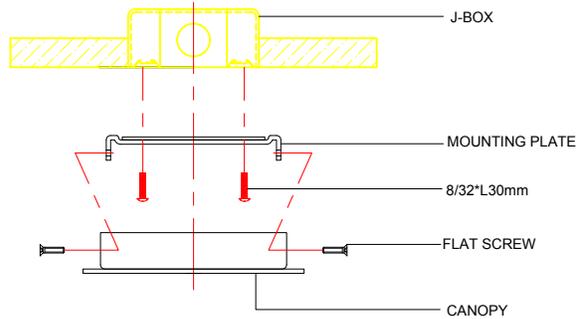

- Wire threading way
1. First put silicon sleeve through the stem with threaded end.
  2. Put wires into silicon sleeve, use silicone to help wires go through stem.
  3. Once wires go through stem totally, take silicon sleeve away.

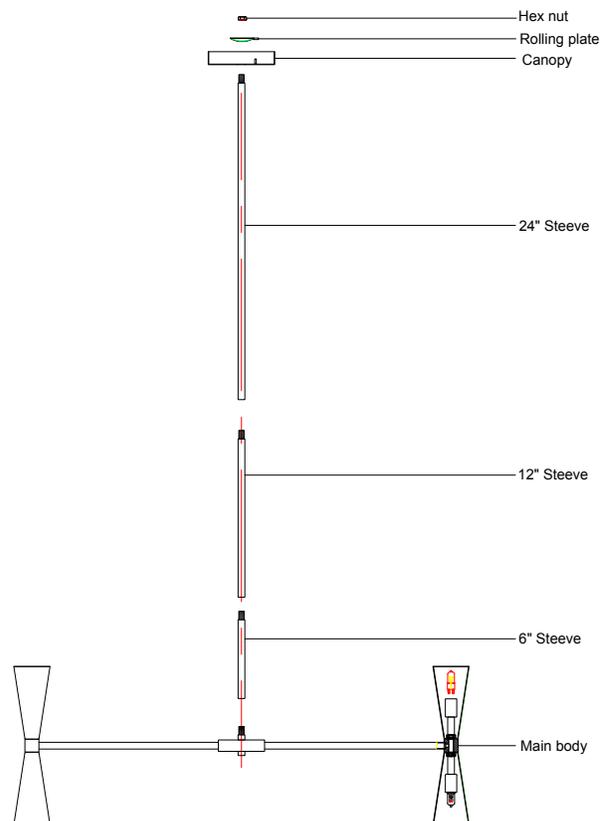



**Assembly & Installatbn Instructions for:  
310471 Pendant**

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

**Fixture Assembly**

Step 7. Refer to wiring diagram.  
Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 8. Carefully tuck in all wires and faise the canopy to the outlet box . Secure canopy with nuts

Step 9. Install E12 LED bulbs,do not use bulbs that exceeds 3W.

