


Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

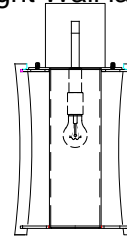

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:



- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a coltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattge specified on the socket label.

Fixture Assembly:

Step 1. Connect the inner wire , then fixing the backplate , after that we can install the bulb and glass shade.

Step 1. Install E26 candelabra bulb,do not use bulbs that exceeds 100W.

Step 3. Assemble glass shade to the lamp body as shown,Align holes in glass shade with holes in fixture and secure glass shade to fixture using headless finial

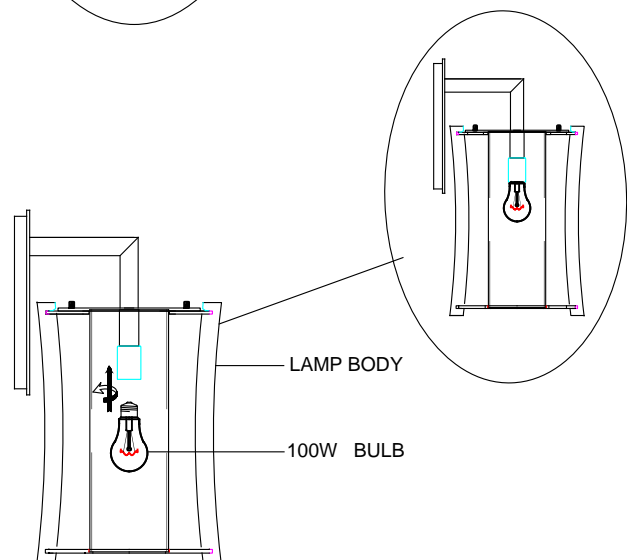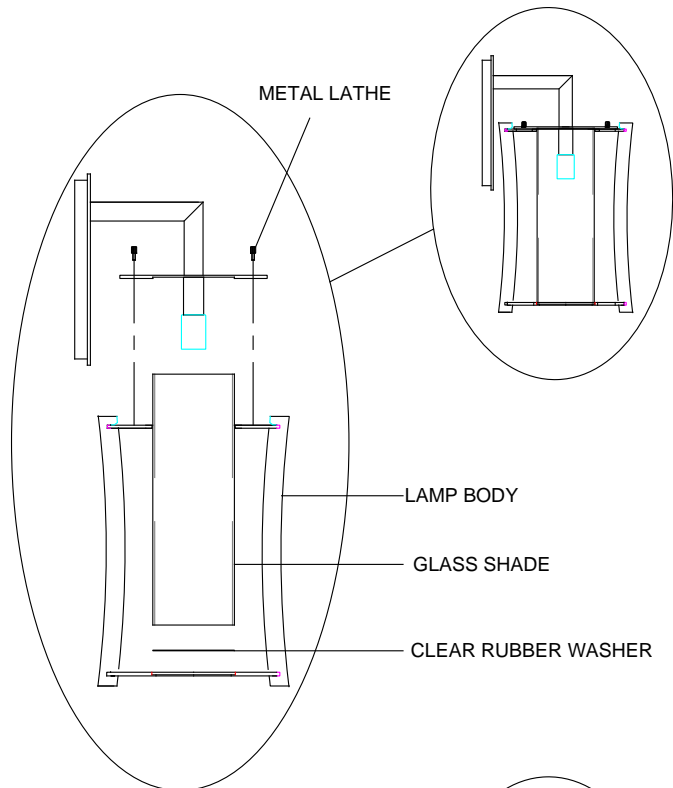

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

Fixture Assembly

Step 4. Fasten 2 (state specification of screw) into mounting plate so that they extend away from wall when mounting plate is installed

Step 5. Attach the mounting plate to outlet box with screws

Step 6. Refer to wiring diagram.
Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
splice the bare wire ground to green wire from outlet box with wire connector

Step 7. Carefully tuck in all wires Attach the back plate with the mounting screw on the crossbar. Secure fixture with shell knobs.

Step 8. Fix the fixture on the wall, apply caulking around back plate to seal against wall to avoid water getting inside back plate.

