




ASSEMBLY INSTRUCTIONS

401921MB



Chrysler 20 IN Outdoor Wall Sconce

FIXTURE ASSEMBLY :

1. Unpack fixture carefully, note fixture frame comes fully assembled and two sets of hands are needed for installation.
2. Using self-tapping screw & anchor screw to fix black water-proof washer & crossbar onto the wall.
3. Attach adaptor plate to crossbar using nuts.
4. Bring fixture close enough to outlet box to allow for wire connections to be done.
5. Carefully tuck in all wires and place silicone washer on top of adaptor plate.
6. Place fixture onto adaptor plate and attach with 4 flat head screws.
7. Clean fixture with a damp micro fiber or cotton cloth, avoid using any cleaners that contains chemicals or abrasives that would damage fixture finish.

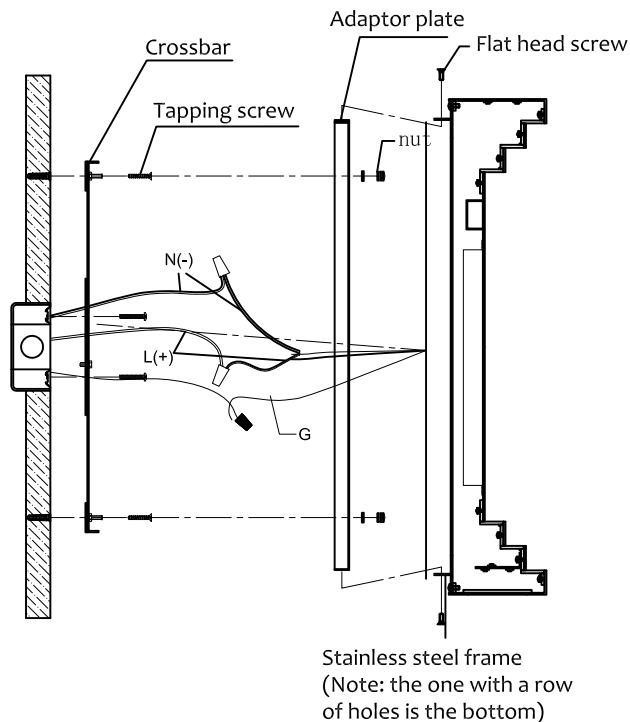

Wiring Diagram

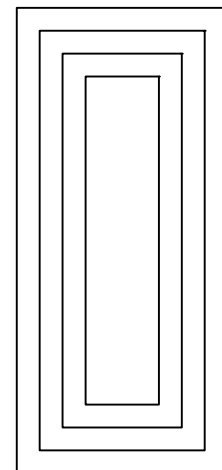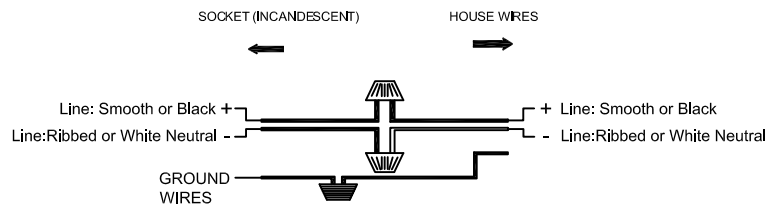

(FRONT VIEW)

WARNING:

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install this fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

NOTE:

To prevent water entering the fixture, the grub screws must be tightened such that the frame is pressed tightly to the water-proof washer.