




KALCO
Handcrafted Since 1980™
www.kalco.com

Assembly & Installation Instructions for :
Item No. : 513671BWB

Customer Service : (800) 525-2655, customer care@kalco.com

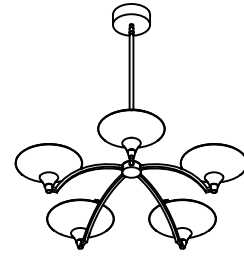


WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:


1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.

Fixture Assembly


- 1** Step 1. Feed the wires through the stems, Connect the stems together and screw onto the fixture hub and canopy.

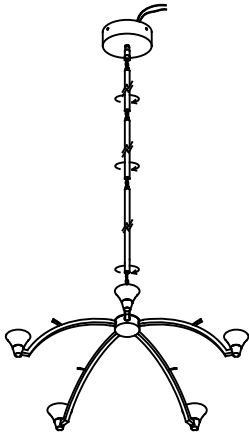


- 2** Step 2. Connect the wires from fixture to the output wires of driver with 2 wire connectors.

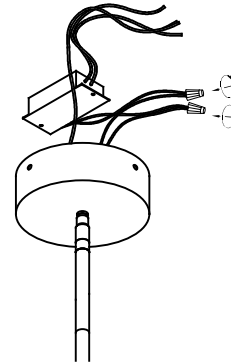


- 3** Step 3. Attach the mounting plate to junction box using 2 M4 screws.

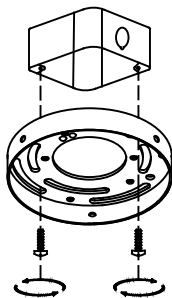

- 4** Step 4. Connect the wires from driver to wires from junction box with wire connectors.

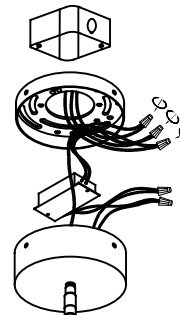

- 5** Step 5. Attach the canopy over mounting plate and secure with 3 screws.

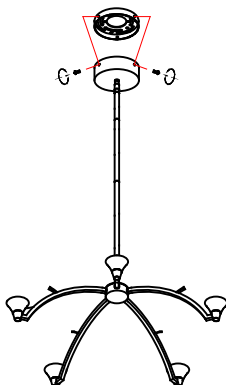

- 6** Step 6. Install the metal shades onto the arms and secure with 3 knobs. Adjust the shades slightly to make it straight and balance.

