

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 515123OL
TALL WALL SCONCE

I M A G E



If you have any questions or problems assembling your fixture please call us for assistance.

Customer Service: (702) 361-4345 or (800) 525-2655
customer.services@kalco.com

WARNING! TO REDUCE THE RISK OF FIRE OR INJURY PLEASE TAKE PRECAUTION AND FOLLOW THE STEPS BELOW.

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.


Si vous avez des questions ou des problèmes assemblage de votre dispositif s'il vous plaît appel pour l'assistance.

Customer Service: (702) 361-4345 or (800) 525-2655
customer.services@kalco.com

AVERTISSEMENT! POUR RÉDUIRE LES RISQUES D'INCENDIE OU DE BLESSURES S'IL VOUS PLAÎT PRENDRE DES PRÉCAUTIONS ET SUIVEZ LES ÉTAPES CI-DESSOUS.

1. Si vous n'êtes pas familier avec le câblage électrique, appelez un électricien qualifié pour installer cet appareil. Plus d'une personne peut être nécessaire d'installer appareil, assurez vous que vous disposez de l'aide assez qualifié.
2. Coupez l'alimentation au circuit de l'appareil sur le tableau de service. Utiliser un détecteur de tension pour vérifier que l'alimentation est coupée
3. NE PAS installer l'ampoule qui excède la puissance maximale indiquée sur l'étiquette du socket.

WIRING DIAGRAM

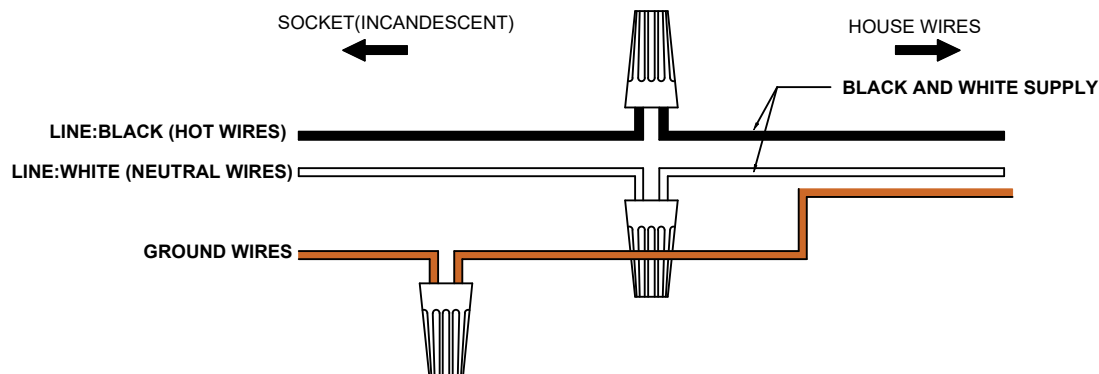


ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 515123OL
TALL WALL SCONCE

ELECTRICAL / MOUNTING INSTALLATION

- STEP 1:** Carefully remove all parts from the box and lay them on a soft clean surface. Check to ensure no parts are missing.
- STEP 2:** Fasten (2) 8-32 x 1 1/2" studs into mounting plate so that they extend away from the ceiling when the mounting plate is installed.
- STEP 3:** Attach mounting plate to outlet box with the (2) 8-32 x 3/4" screws. (Provided by other)
- STEP 4:** Refer to wiring diagram. connect the black supply wire to the black fixture wire with wire connector, connect the white supply wire to the white fixture wire with wire connector. Connect ground wire from fixture with supply ground wire.
- STEP 5:** Carefully tuck all wires into outlet box ensuring that there are no wires pinched between the backplate and wall.
- STEP 6:** Attach the back plate to mounting plate and lock it by using two (2) pcs. of ball nut.
- STEP 7:** Install (3) E12 bulbs. do not install bulb exceed 40 watts.
- STEP 8:** Install the Capiz Shade to the back plate and securing it using **Lock Screw**.

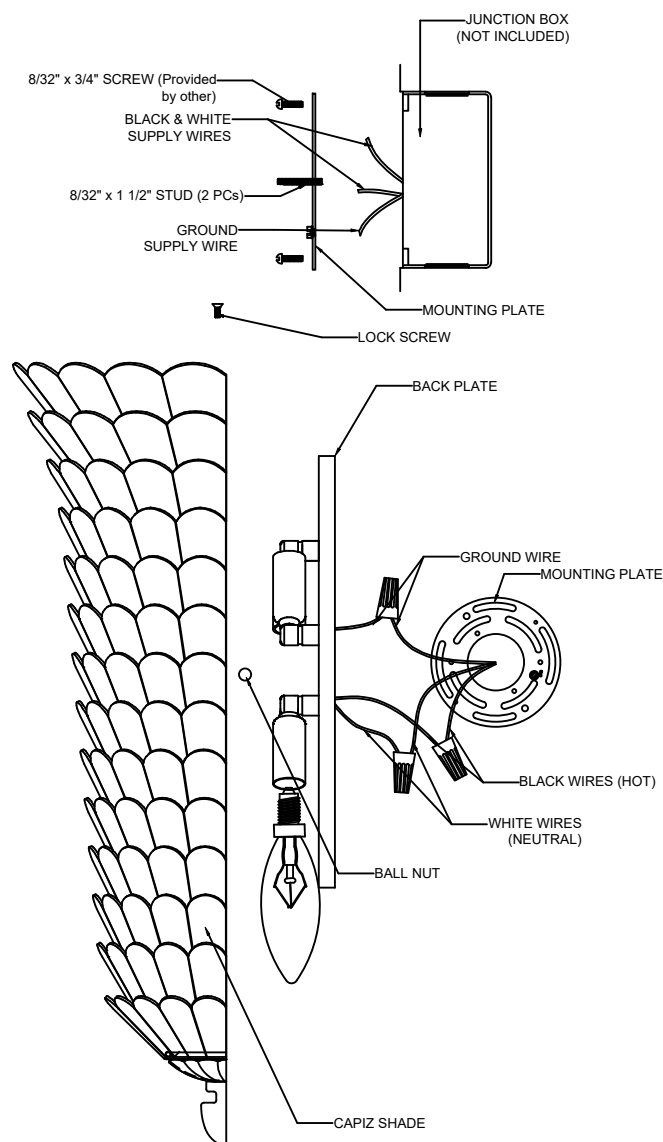


LIGHTING MAINTENANCE:

- Regular cleaning of fixture with proper and gentle care using a soft duster, soft lint-free or damp cloth is recommended.
- Refrain from using harsh cleaning liquids that may cause chemical reaction on the hand painted finishes.
- Always refer to the Assembly Instruction before removing any components.
- **HANDLE WITH CARE.**

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 515123OL
TALL WALL SCONCE

COMPONENT ASSEMBLY

PART NO.	PARTS NAME	IMAGE/DRAWING	QTY
KS-A-80	Mounting Plate		1 pc
	Hex Nut (8-32 THREAD)		2 pcs
	Washer (8-32)		2 pcs
	Stud 8-32 x 1- 1/2" Length		2 pcs
KS-A-24	Ball Nut 3/8" IN DIA X 8-32 INNER THREAD		2 pcs