

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 515158OL
CONVERTIBLE SEMI-FLUSH / CHANDELIER

I M A G E



SEMI-FLUSH



PENDANT

If you have any questions or problems assembling your fixture please call us for assistance.

Customer Service: (702) 361-4345 or (800) 525-2655

customer.services@kalco.com

WARNING! TO REDUCE THE RISK OF FIRE OR INJURY PLEASE TAKE PRECAUTION AND FOLLOW THE STEPS BELOW.

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

Si vous avez des questions ou des problèmes assemblage de votre dispositif s'il vous plaît appel pour l'assistance.

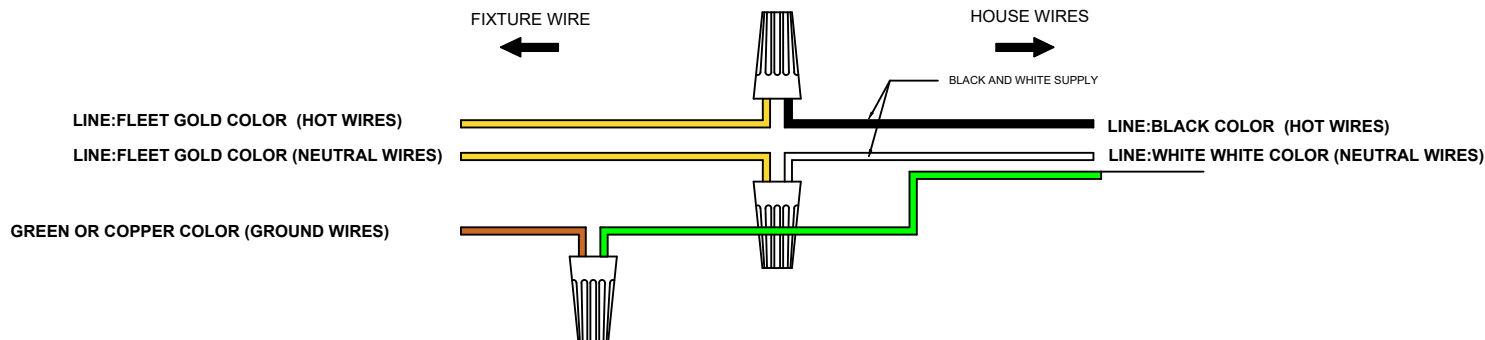
Customer Service: (702) 361-4345 or (800) 525-2655

customer.services@kalco.com

AVERTISSEMENT! POUR RÉDUIRE LES RISQUES D'INCENDIE OU DE BLESSURES S'IL VOUS PLAÎT PRENDRE DES PRÉCAUTIONS ET SUIVEZ LES ÉTAPES CI-DESSOUS.

1. Si vous n'êtes pas familier avec le câblage électrique, appelez un électricien qualifié pour installer cet appareil. Plus d'une personne peut être nécessaire d'installer appareil, assurez vous que vous disposez de l'aide assez qualifié.
2. Coupez l'alimentation au circuit de l'appareil sur le tableau de service. Utiliser un détecteur de tension pour vérifier que l'alimentation est coupée
3. NE PAS installer l'ampoule qui excède la puissance maximale indiquée sur l'étiquette du socket.

WIRING DIAGRAM

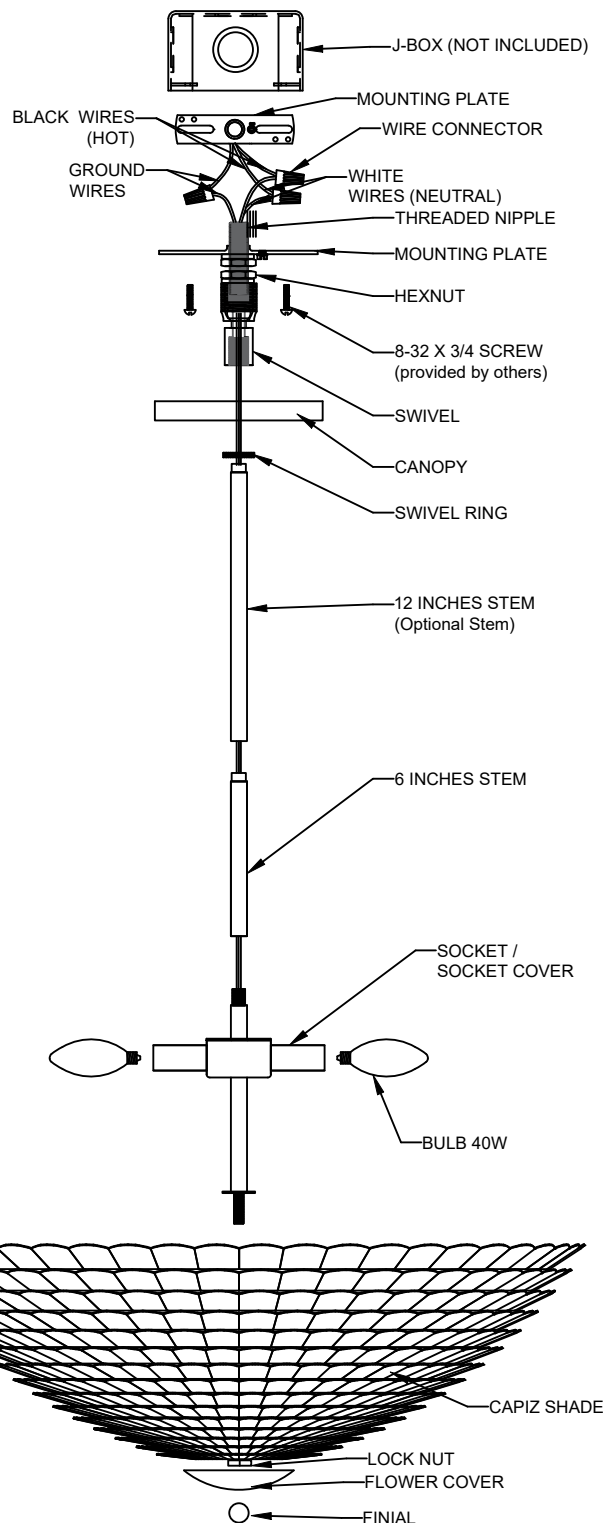


ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 515158OL
CONVERTIBLE SEMI-FLUSH / CHANDELIER

KNOCK DOWN ASSEMBLY / ELECTRICAL / MOUNTING INSTALLATION

- STEP 1:** Carefully remove all parts from the box and lay them on a soft clean surface. Check to ensure no parts are missing.
- STEP 2:** Assemble the **Mounting Plate** with the **Threaded Nipple, Star Washer and (2) Hex nuts**. Attach the **Swivel** and remove the **Swivel Ring**.
- STEP 3:** Install the mounting assembly to the **j-box** using **(2) 8-32 X 3/4 screws (provided by others)**. Place the **canopy** onto the assembly. The face of the canopy should be located at about the center of the threaded section.
- STEP 4:** After determine the **canopy** height remove the **swivel ring** and **canopy**. Tighten the bottom **hex nut** to lock the position of the **Swivel** and tighten the top **hex nut** to lock the position of the **Mounting Plate**.
- STEP 5:** Unscrew the **8-32 x 3/4 screw (provided by other)** to remove the mounting plate.
- STEP 6:** Determine the total fixture height requirement and use the right length of **center stem** to achieve. .
- Note:** If the fixture was intended to be semi-flush use the **6" center stem** only. (12" center stem (optional))
- STEP 7:** Insert the **swivel ring** and **canopy** to the **center stem** going down to the top on shade holder.
- STEP 8:** Carefully pass the wire through to the **swivel** with **canopy**, and attached it to the center stem.
- STEP 9:** Carefully lift the fixture and install the **mounting plate** to the **j-box**.
- Note:** Two manpower required to install, one is to install on the junction box, and the other was to hold the fixture.
- STEP 10:** Refer to wiring diagram. With wire carefully thread through the swivel, connect the **black color supply wire (HOT WIRES)** to the **fleet gold color wire** of fixture wire with **wire connector**, connect the **white supply wire (NEUTRAL WIRE)** to the **fleet gold color wire** fixture wire with **wire connector**.
- STEP 11:** Carefully tuck all wires into outlet box ensuring that there are no wires pinched between the **canopy** and
- STEP 12:** Carefully install the **Capiz Shade** on the bottom cluster stem, and lock using **Lock nut**, follow by installing the **Flower Cover** and secure using **Finial**.
- STEP 13:** Install the **(12) E12 Bulb**, Do not install bulb that exceed 40 watts.

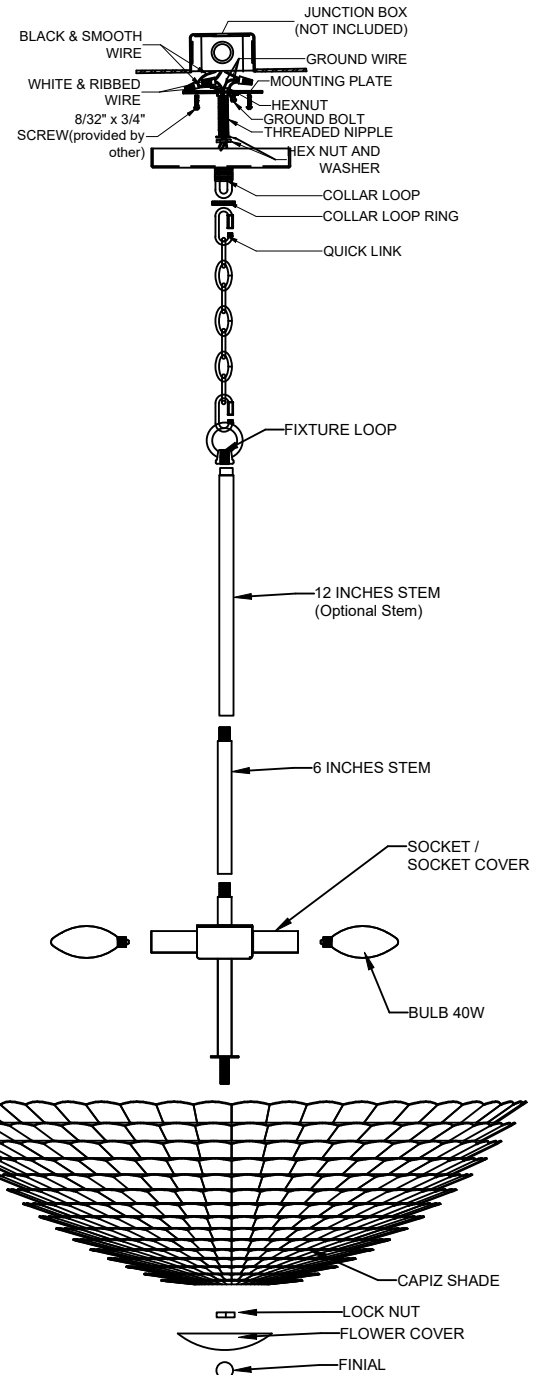


ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 515158OL
CONVERTIBLE SEMI-FLUSH / CHANDELIER

KNOCK DOWN ASSEMBLY / ELECTRICAL / MOUNTING INSTALLATION

- STEP 1:** Carefully remove all parts from the box and lay them on a soft clean surface. Check to ensure no parts are missing.
- STEP 2:** Carefully attach the fixture loop to the main fixture as shown.
- STEP 3:** Insert all the glass panel to the main fixture frame as shown.
- STEP 4:** Assemble the **Mounting Plate** with the **Threaded Nipple, Star Washer and Hex nuts**. Attach the **collar loop** and remove the **Collar Loop Ring**.
- STEP 5:** Install the mounting assembly to the **j-box** using **(2) 8-32" x 3/4" Screws (provided by others)**. Place the **canopy** onto the assembly. The face of the **canopy** should be located at about the center of the threaded section.
- STEP 6:** After determine the **canopy** height remove the **swivel ring** and **canopy**. Tighten the bottom **hex nut** to lock the position of the **Swivel** and tighten the top **hex nut** to lock the position of the **Mounting Plate**.
- STEP 7:** Unscrew the **screw(A) (provided by other)** to remove the mounting plate and lock the position of **collar loop** and **mounting plate** using the **(2) nut** provided.
- STEP 8:** Determine fixture height. Make adjustment if needed. Attach the **Fixture Loop** to the **Center stem 6"** (**12" center stem optional**) Attach the **chain** to **fixture loop** using **quick link**.
- STEP 9:** Insert the **collar loop ring** and **canopy** to the chain.
- STEP 10:** Lace the wires through the **chain** (every other link).
- STEP 11:** Attached the end chain to the **quick link chain with collar loop**.
- STEP 12:** Pull ends of wire through center hole of **collar loop** and out the openings of the **Mounting Plate**. determine the wire length needed and cut all excess wires.
- STEP 13:** Refer to wiring diagram. With wire carefully thread through the swivel, connect the **black color supply wire (HOT WIRES)** to the **fleet gold color wire** of fixture wire with **wire connector**, connect the **white supply wire (NEUTRAL WIRE)** to the **fleet gold color wire** fixture wire with **wire connector**.
- STEP 14:** Carefully tuck in all wires and raise the **canopy** to the junction box.
- STEP 15:** Carefully install the **Capiz Shade** on the bottom cluster stem, and lock using **Lock nut**, follow by installing the **Flower Cover** and secure using **Finial**.
- STEP 16:** Install the **(12) E12 Bulb**, Do not install bulb that exceed 40 watts.










FOR LIGHTING MAINTENANCE:

- Regular cleaning of fixture with proper and gentle care using a soft duster, soft lint-free or damp cloth is recommended.
- Refrain from using harsh cleaning liquids that may cause chemical reaction on the hand painted finishes.
- Always refer to the Assembly Instruction before removing any components.
- HANDLE WITH CARE.

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 515158OL
CONVERTIBLE SEMI-FLUSH / CHANDELIER

PARTS LIST

PART NO.	PARTS NAME	IMAGE/DRAWING	QTY
KS-A-56	Mounting Plate (1/4IP THREAD)		1 pc
	Hex Nut (1/4IP THREAD)		2 pcs
	Washer (1/4 IP)		2 pcs
	Threaded Nipple 1/4IP THREAD (1/2" Ø X 2 1/2" L.)		1 pc
	Strain Relief (1/8 IP)		2 pcs
CS-BS-1	Canopy (6 1/2" Ø X 3/4" HT X 1" Ø CENTER HOLE)		1 pc
LS-A-386	Swivel (15/16 DIA X 2-3/16 HT X 1/2 FINED THREAD 90 DEG.)		1 pc
LS-A-426	Center Stem (5/8 IN. R.T) 6 IN. HT. W/ 5/8 IN. LENGTH FINE THREAD		1 pc
LS-A-427	Center Stem (5/8 IN. R.T) 12 IN. HT. W/ 5/8 IN. LENGTH FINE THREAD		1 pc
	Flower Cover (4-1/4"Ø x 3/4" HT)		1 pc
KS-A-250	Collar Loop & Collar Loop Ring (Gauge 7)		1 pc
LS-A-318	QUICK LINK (Gauge 7)		2 pcs
LS-A-399	CHAIN (OVAL SHAPE CHAIN GAUGE 7 X 8 FT.)		1 pc
KS-A-39	LOCK NUT 1/8 IP HEXNUT		1 pc
MS-BL-102	FINIAL 3/4"Ø X 1/8 IP INNER THREAD		1 pc
	FIXTURE LOOP 3/4"Ø X 1/4 IP INNER THREAD		1 pc