



ASSEMBLY INSTRUCTIONS


517721HBR

2-Light Wall Sconce

Step1. Attach the mounting plate to outlet box with 8/23 screws.


Step2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.

Step3. Carefully tuck in all wires. Attach the back plate with the mounting screw on the crossbar. Secure fixture with top and bottom flat head screws.

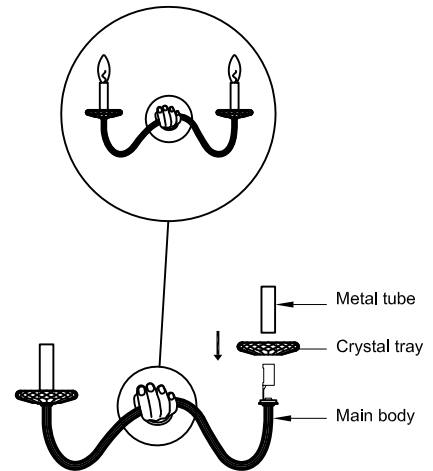


WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture. make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

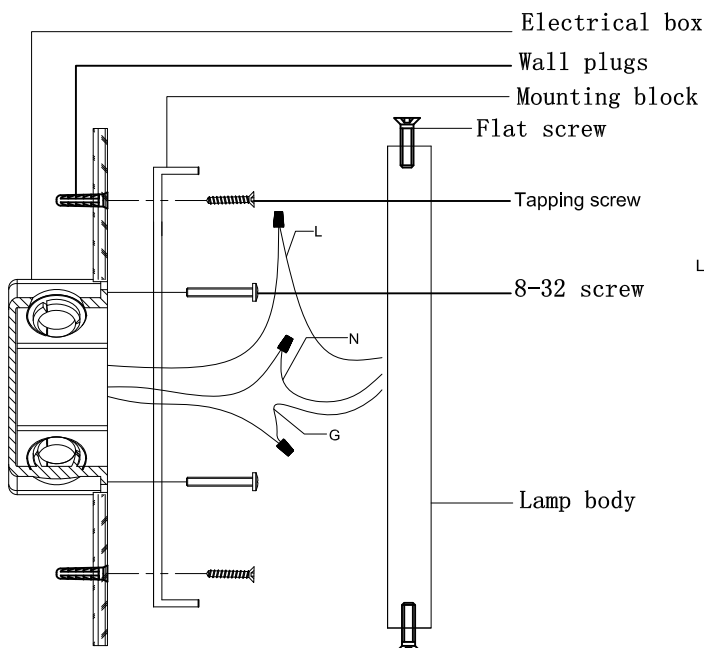

Wiring Diagram

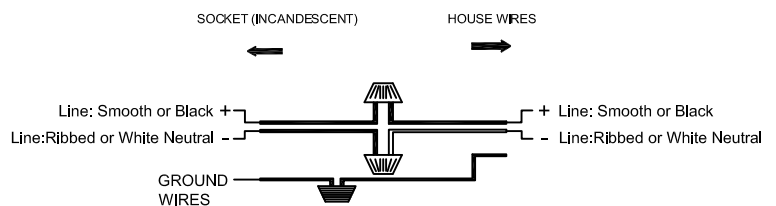

Step4. Assemble crystal Bobeche to the lamp body as shown, Align holes in crystal tray with holes in fixture.

Step5. Install E12 bulbs, do not use bulbs that exceeds 60W.