


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

**WARNING:**


1. This fixture must be installed by qualified electrician and contractors understanding ceiling hanging points, structure and strength to meet building code.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. Have electrician install fixture to properly anchor canopies that support the alabaster.

**FIXTURE ASSEMBLY :**


1. Unpack fixture carefully, note fixture frame comes fully assembled.
2. Use 8-32 screw to fix mounting block on J-box.
3. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.
4. Carefully tuck in all wires, attach the back plate with the mounting screw on the mounting block. Secure fixture with shell knobs.
5. Use 4 screws to fix back plate on crossbar.

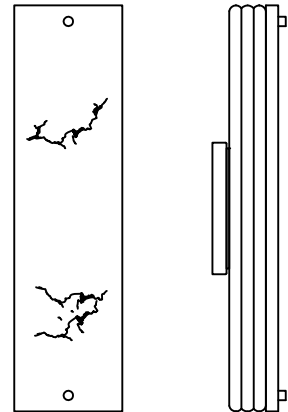

(FRONT VIEW)

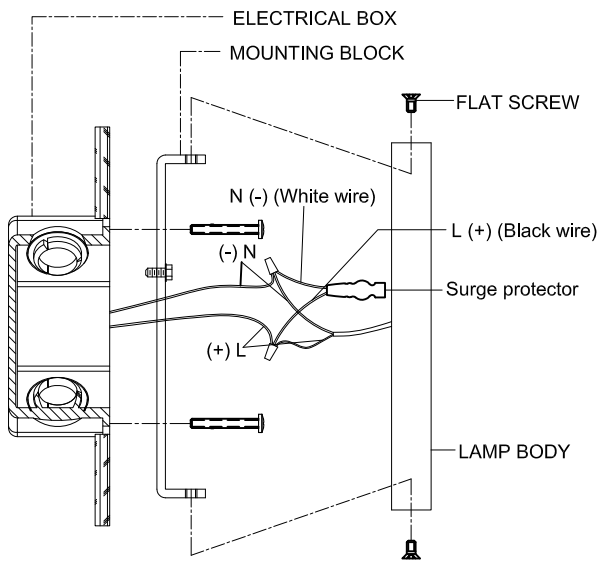

**Wiring Diagram**

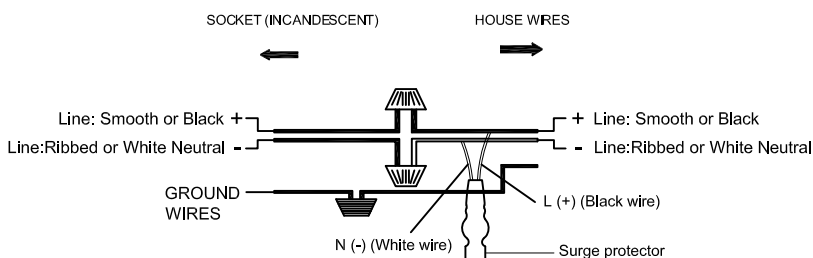

Note: It is recommended that each surge protector be connected to a maximum of 6 LED boards!

## SPD Installation

