



KALCO
Handcrafted Since 1980™

ASSEMBLY INSTRUCTIONS

524922WB

2 Light Wall Sconce


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

WARNING:


- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.
- 4.This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Fixture Assembly

1. Use 8-32 screw to fix crossbar to J-box .
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
3. Carefully tuck in all wires. Attach.
4. Fix part Lamp body to part mounting block by using part Flat screw.
5. Screw part glass shade to part lamp body.
6. Install 24V/LED PANEL, do not use LED PANEL that exceeds 6W.

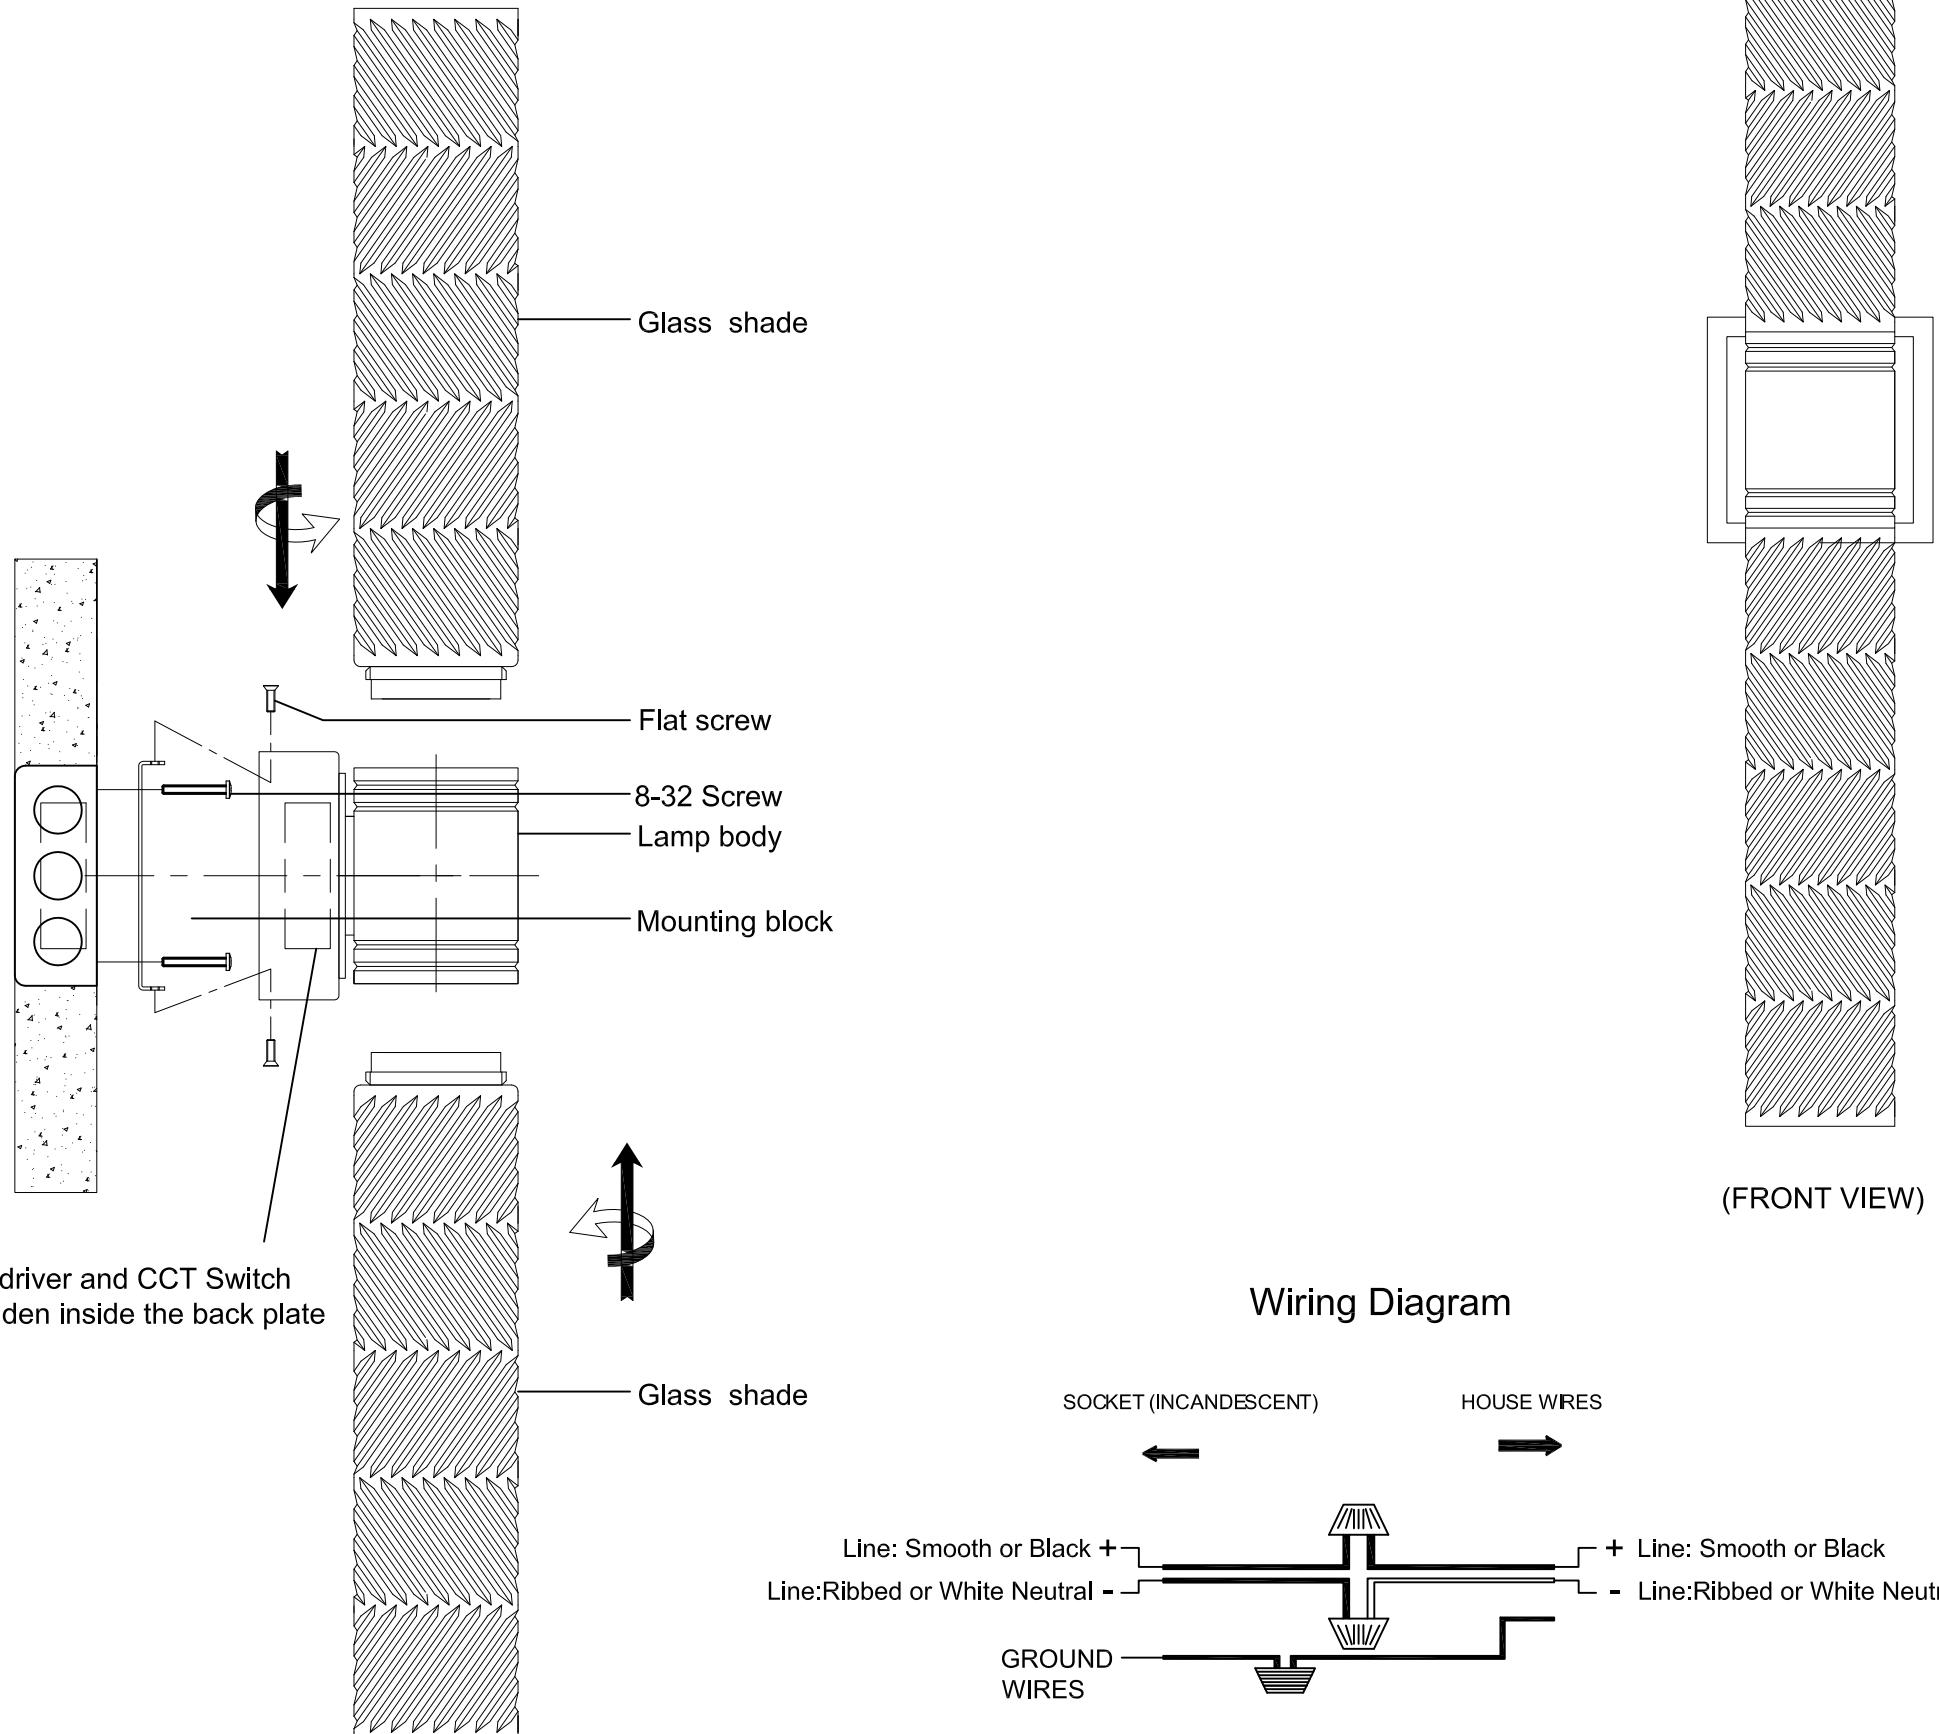

Fixture Assembly

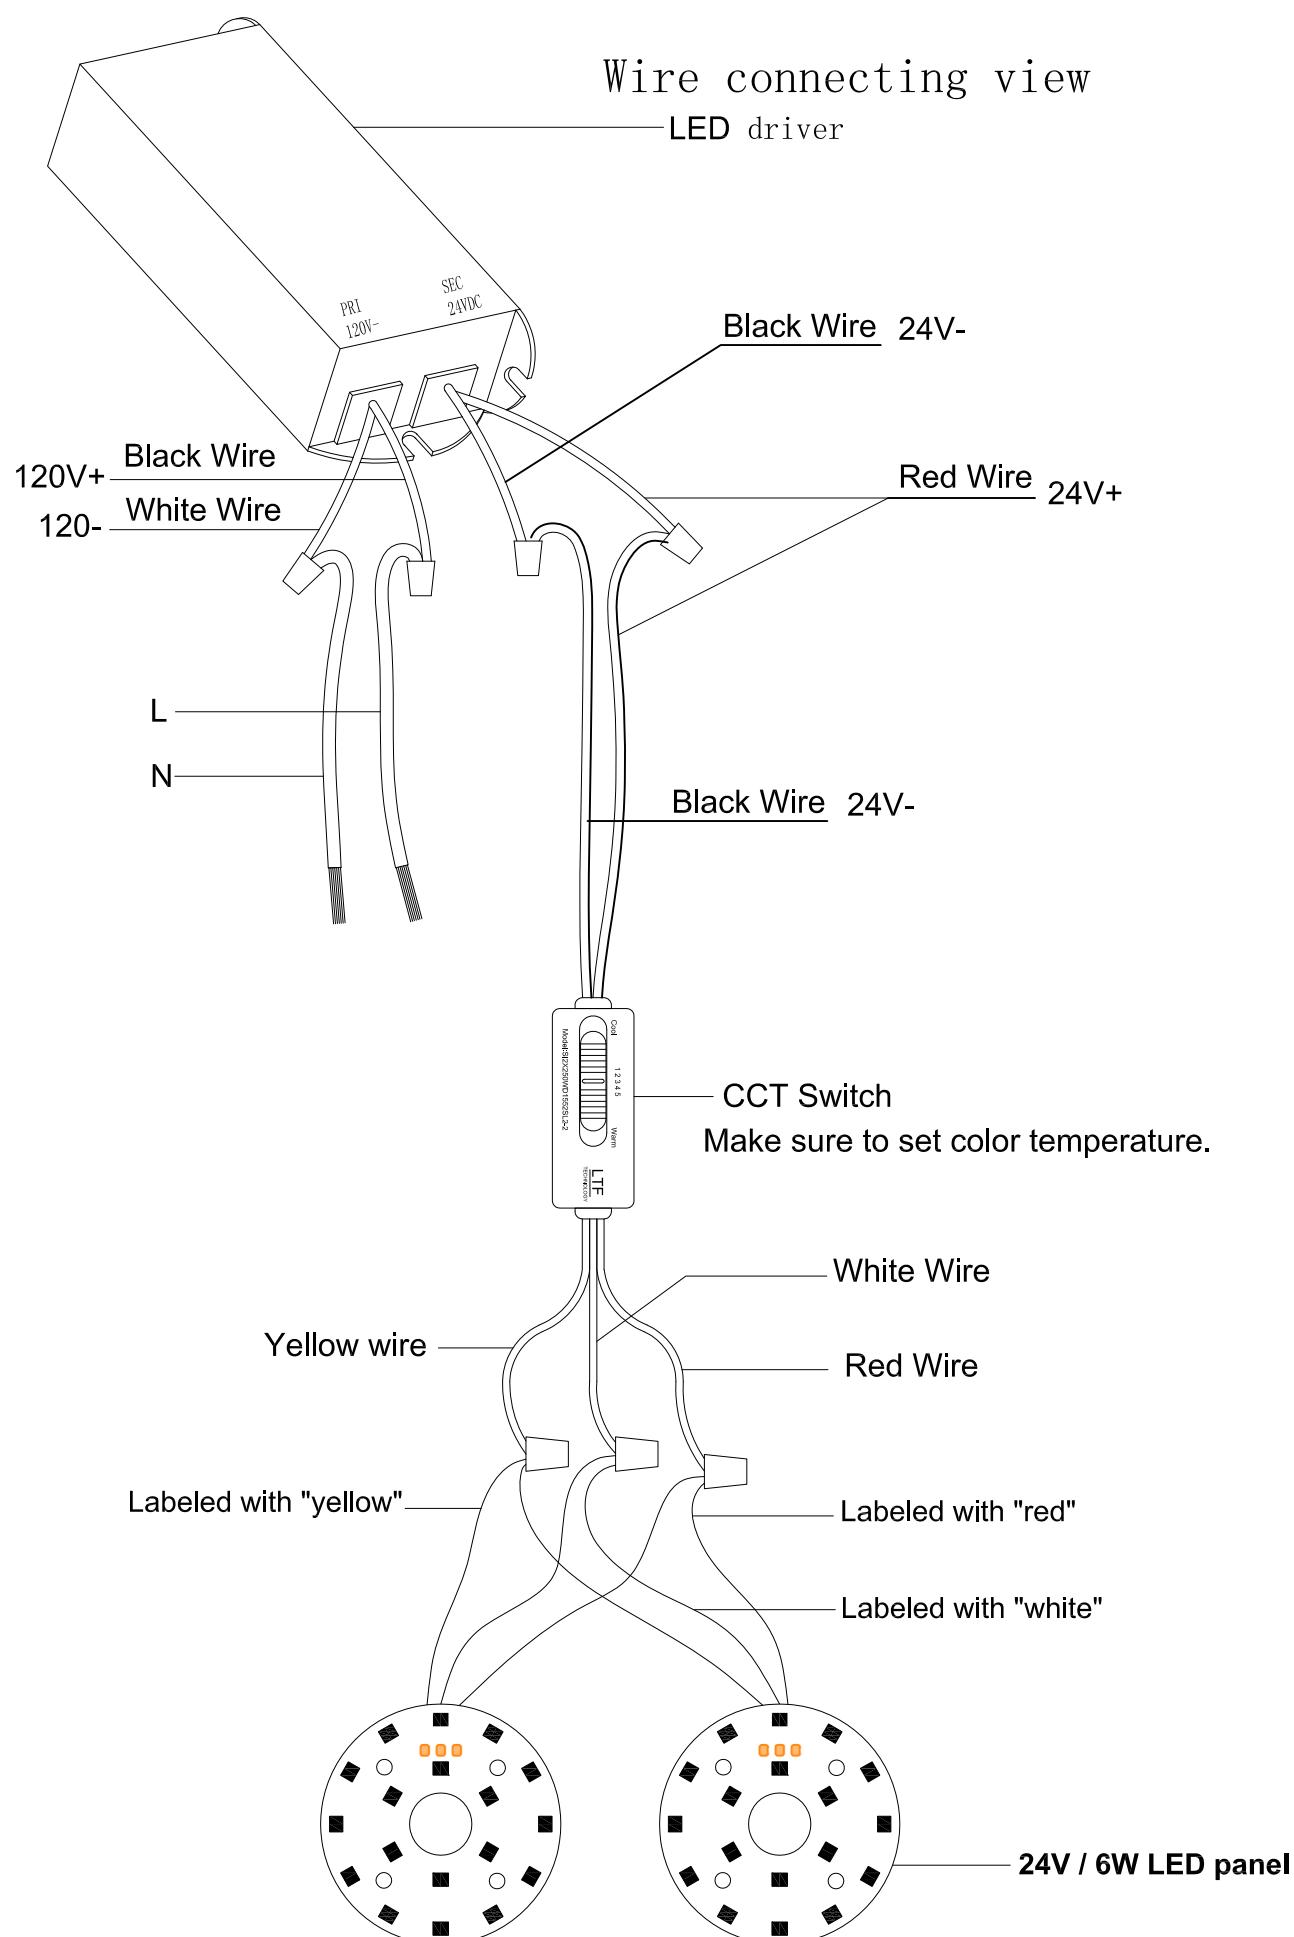

Note: Please adjust the color temperature of tape light before installing lamp body!

SWITCH POSITIONS				
1	2	3	4	5
RP CCT 1	RP CCT 2	RP CCT 3	RP CCT 4	RP CCT 5
4000K	3500K	3000K	2900K	2700K