ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 526821PABMG
2 LIGHTS WALL SCONCE

KALCO®
Handcrafted Since 1980®

I M A G E

If you have any questions or problems assembling your fixture please call us for assistance.
Customer Service: (702) 361-4345 or (800) 525-2655
customer.services@kalco.com

> WARNING!   TO REDUCE THE RISK OF FIRE OR INJURY PLEASE TAKE PRECAUTION AND FOLLOW THE STEPS BELOW.
>
> 1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
>
> 2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
>
> 3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.
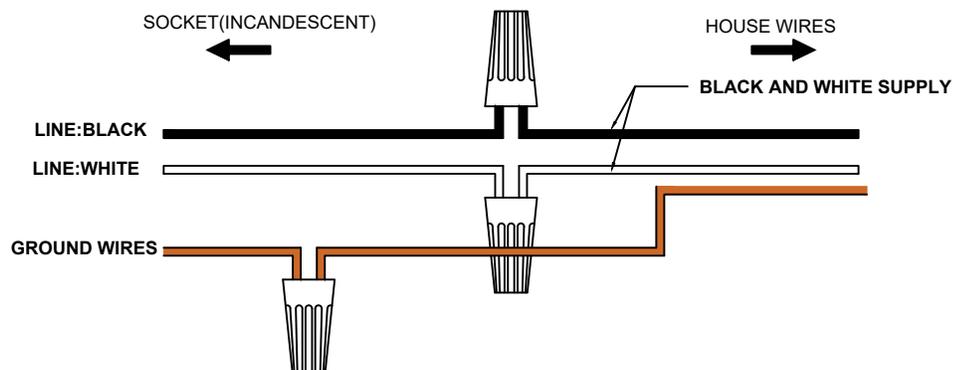
Si vous avez des questions ou des problémes assemblage de votre dispositif s'il vous plait appel pour l'assistance.
Customer Service: (702) 361-4345 or (800) 525-2655
customer.services@kalco.com

> **AVERTISSEMENT**!   POUR RÉDUIRE LES RISQUES D'INCENDIE OU DE BLESSURES S'IL VOUS PLAÎT PRENDRE DES PRÉCAUTIONS ET SUIVEZ LES ÉTAPES CI-DESSOUS.
>
> 1. Si vous n'êtes pas familier avec le câblage électrique, appelez un électricien qualifié pour installer cet appareil. Plus d'une personne peut être nécessaire d'installer appareil, assurez vous que vous disposez de l'aide assez qualifié.
>
> 2. Coupez l'alimentation au circuit de l'appareil sur le tableau de service. Utiliser un détecteur de tension pour vérifier que l'alimentation est coupée
>
> 3. NE PAS installer l'ampoule qui excède la puissance maximale indiquée sur l'étiquette du socket.
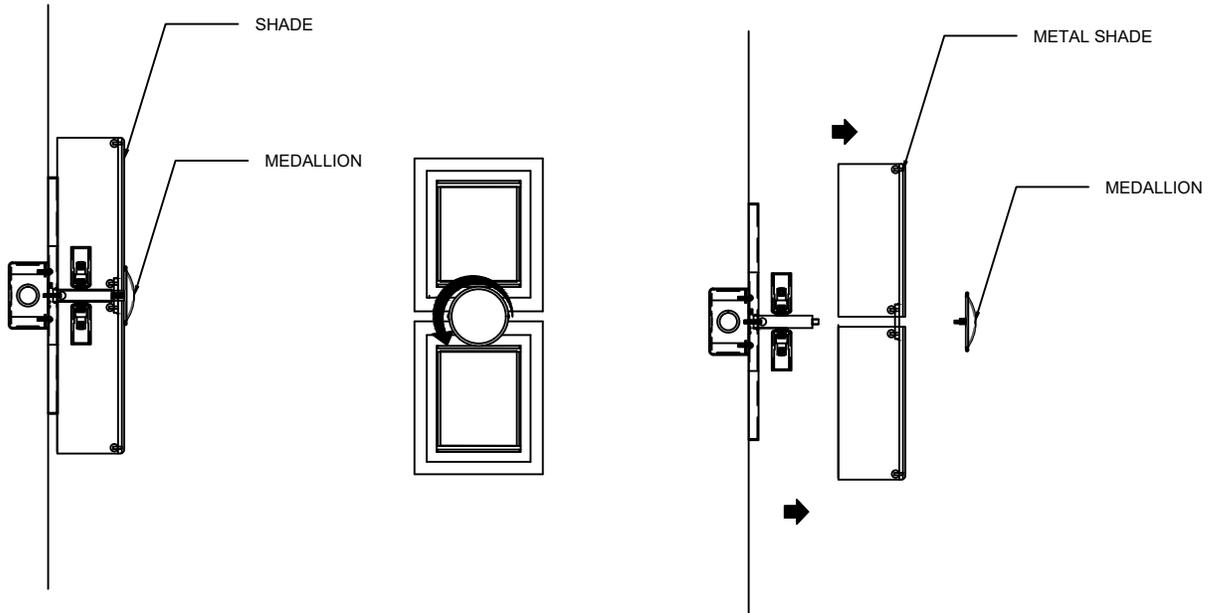

W I R I N G   D I A G R A M

SOCKET(INCANDESCENT)

HOUSE WIRES

BLACK AND WHITE SUPPLY

LINE:BLACK

LINE:WHITE

GROUND WIRES

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 526821PABMG
2 LIGHTS WALL SCONCE

KALCO
Handcrafted Since 1980

KNOCKDOWN ASSEMBLY

SHADE

MEDALLION

METAL SHADE

MEDALLION

STEP 1:   Remove the shade by removing the medalion (turn counter clockwise to unlock the medallion).
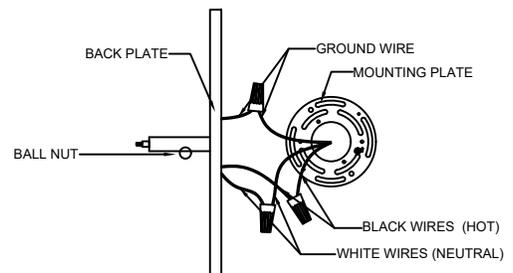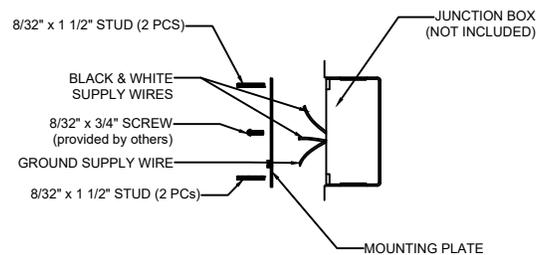

ELECTRICAL / MOUNTING INSTALLATION

STEP 2:   Fasten (2) 8-32 x 1 ½" studs into mounting plate so that they extend away from the ceiling when the mounting plate is installed.

STEP 3:   Attach mounting plate to outlet box with the (2) 8-32 x 3/4" screws (provided by others).

STEP 4:   Refer to wiring diagram. With wire carefully threaded thru canopy, connect the black supply wire to the black fixture wire with wire connector, connect the white supply wire to the white fixture wire with wire connector. Connect ground wire from fixture with supply ground wire.

STEP 5:   Carefully tuck all wires into outlet box ensuring that there are no wires pinched between the canopy and wall.
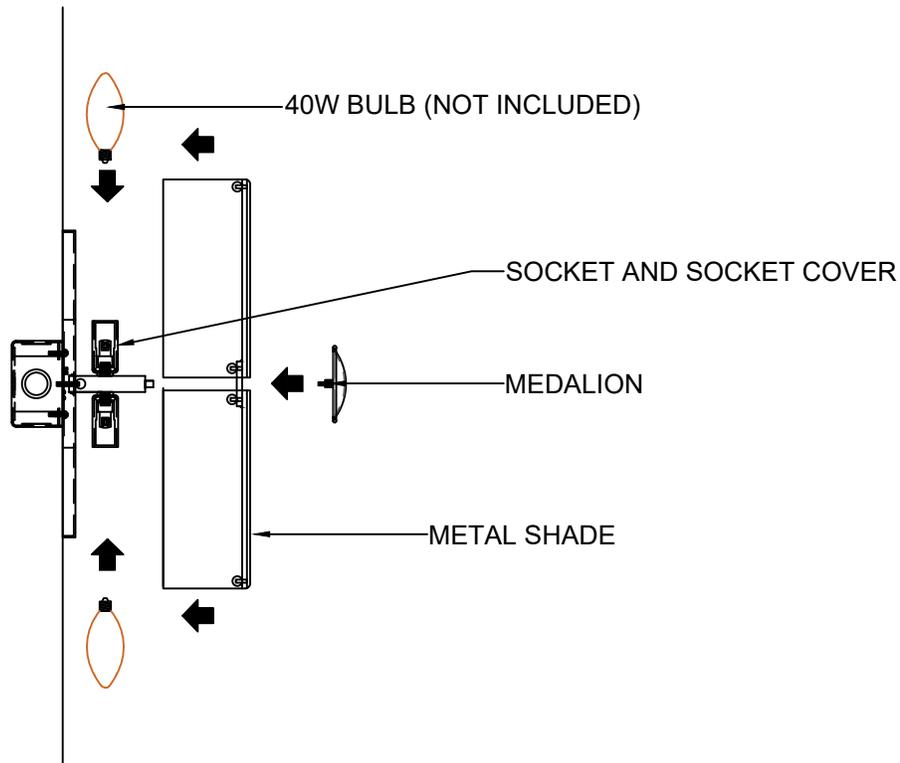
STEP 6:   Attach the back plate to mounting plated and lock it by using two (2) pcs. of ball nut.

8/32" x 1 1/2" STUD (2 PCS)
BLACK & WHITE SUPPLY WIRES
8/32" x 3/4" SCREW (provided by others)
GROUND SUPPLY WIRE
8/32" x 1 1/2" STUD (2 PCs)
JUNCTION BOX (NOT INCLUDED)
MOUNTING PLATE

BACK PLATE
GROUND WIRE
MOUNTING PLATE
BALL NUT
BLACK WIRES (HOT)
WHITE WIRES (NEUTRAL)

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: **526821PABMG**
2 LIGHTS WALL SCONCE

COMPONENT ASSEMBLY

40W BULB (NOT INCLUDED)

SOCKET AND SOCKET COVER

MEDALION

METAL SHADE

STEP 7:   Install (2) E12 bulbs. Do not use bulbs that exceed 40 Watts.

STEP 8:   Attached the metal shade, and secure it using medallion.

LIGHTING MAINTENANCE:

- Regular cleaning of fixture with proper and gentle care using a soft duster, soft lint-free or damp cloth is recommended.

- Refrain from using harsh cleaning liquids that may cause chemical reaction on the hand painted finishes.

- Always refer to the Assembly Instruction before removing any components.

- **HANDLE WITH CARE.**

KALCO
Handcrafted Since 1980

PARTS LIST

IMAGE	PARTS NAME	QTY
	Mounting Plate	1 PC
	Ball Nut	2 PCS
	Hex Nut	2 PCS
	Stud	2 PCS