



# ASSEMBLY INSTRUCTIONS

528721WB

Wall Sconce



If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

## WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.
- 4.This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


## Fixture Assembly :

1. Use 8-32 screw, plastic plug, self-tapping screw to fix mounting block to J-box and Wall.
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
3. Carefully tuck in all wires. Attach.
4. Fix part Lamp body to part mounting block by using part flat screw.
5. Put part Round metal lathe through part plastic washer and white alabaster sheet then screw to part lamp body.

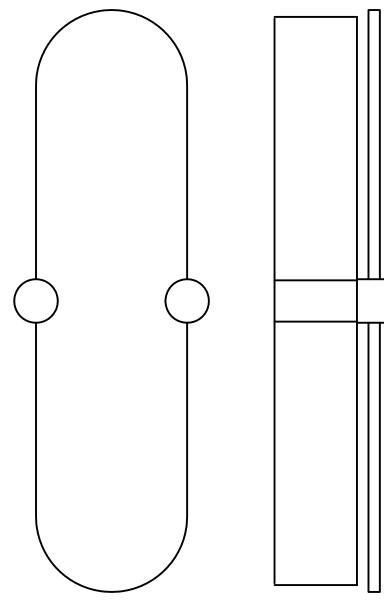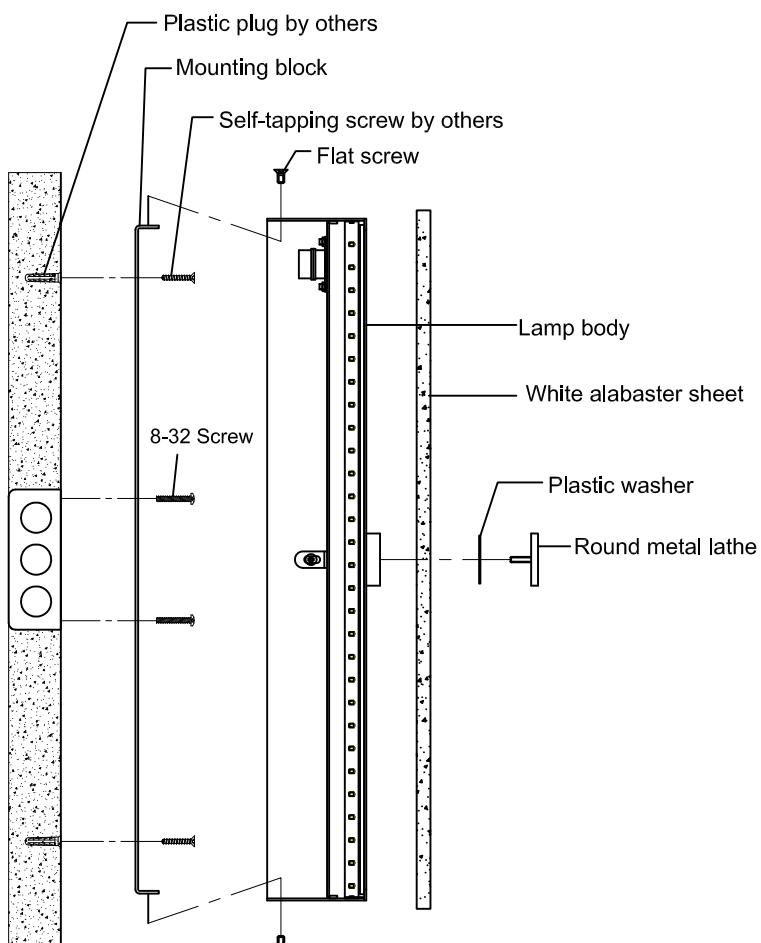

(FRONT VIEW)

Wiring Diagram

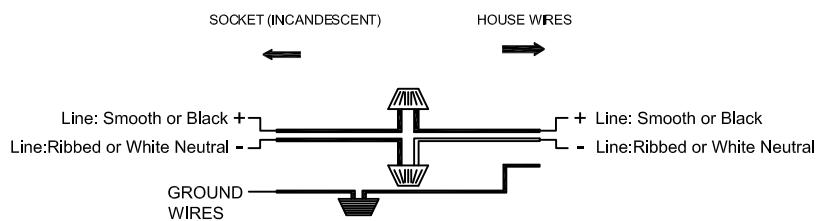




## ASSEMBLY INSTRUCTIONS

528721WB

Wall Sconce

If you have any questions or problems assembling your fixture please call us for assistance.  
Customer Service: (702)361-4345 or (800)525-2655, customer.services@kalco.com

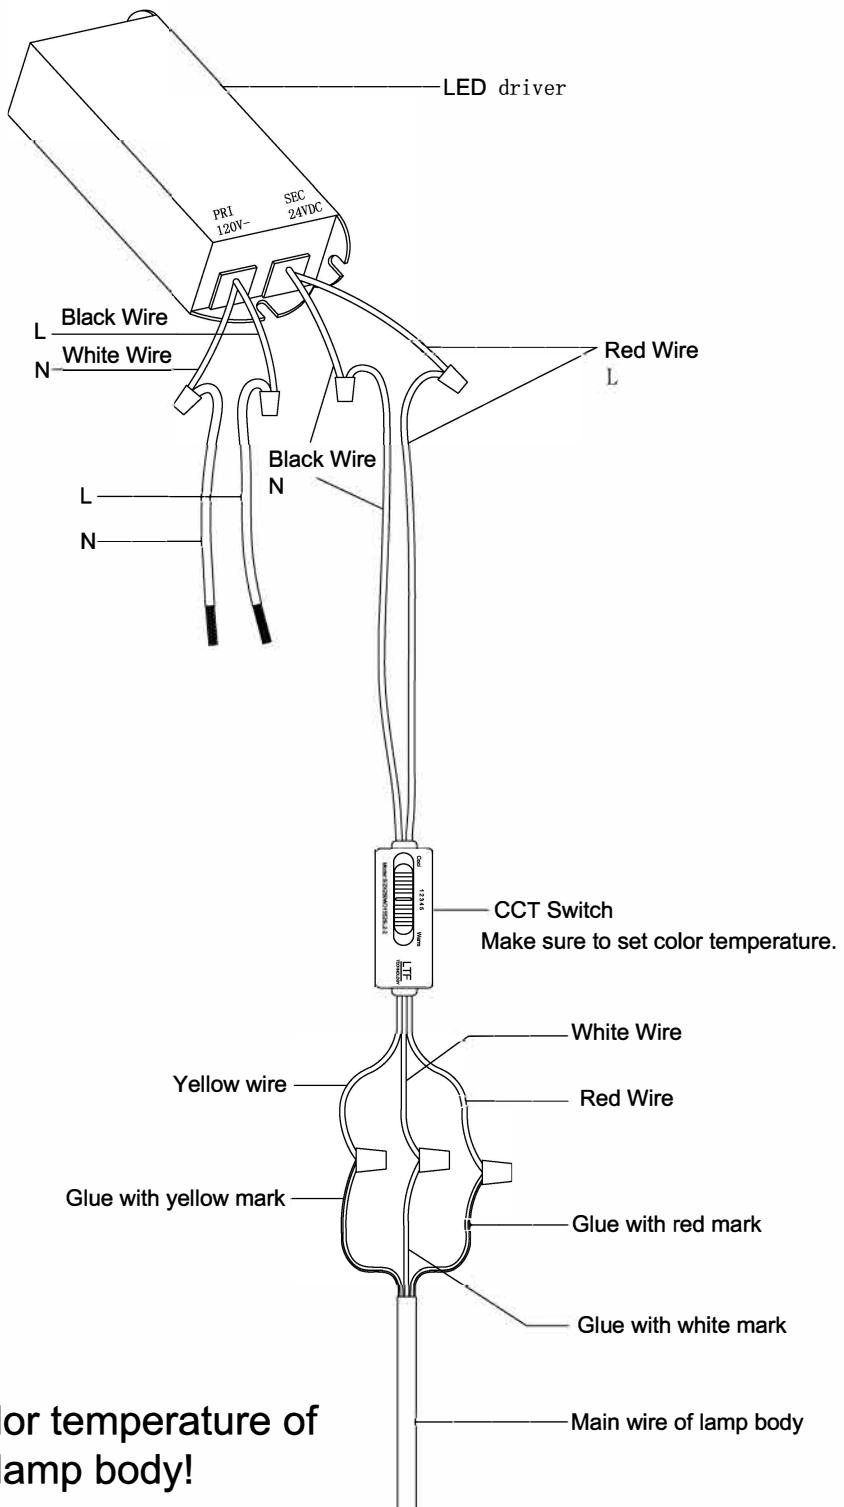

**Note: Please adjust the color temperature of tape light before installing lamp body!**

SWITCH POSITIONS				
1	2	3	4	5
RP CCT 1	RP CCT 2	RP CCT 3	RP CCT 4	RP CCT 5
4000K	3500K	3000K	2900K	2700K