



At Home In Any Environment

**Assembly & installation instructions for:
6608EZ Large Foyer**

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com




WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

Fixture Assembly


Step 1. Before installing, determine the pendant height desired. The fixture assembly contains 6" 18" and 24" stems. Attach same according to height desired

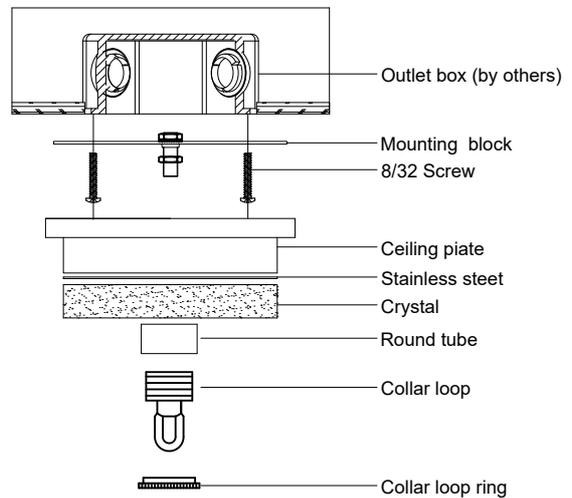

Step 2. Fasten 2 8-32 screws to mounting plate so that they extend away from the wall when mounting plate is installed

Step 3. Attach mounting plate to electrical box using 2 8-32 machine screws. At the same time, install safety to ceiling beam

Step 4. Lock the metal chain, steeve with canopy and lamp body.

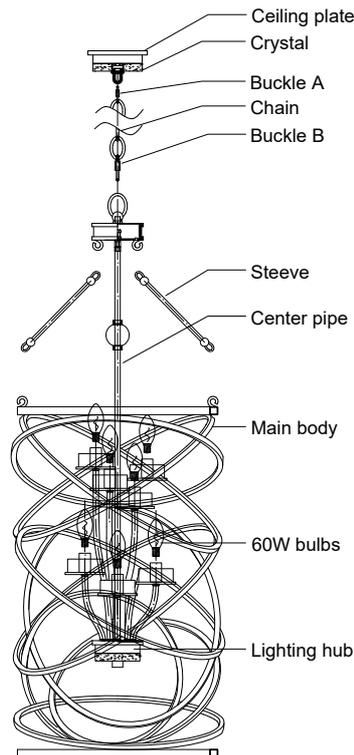

Step 5. Install Candelabra bulbs, do not use bulbs that exceeds 60W



At Home In Any Environment

**Assembly & Installation Instructions for:
6608EZ Large Foyer**

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

Fixture Assembly

Step 6. Refer to wiring diagram.
Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 7. Carefully tuck in all wires and raise the canopy to the outlet box . Secure canopy with nuts

Step 8. Assemble glass shade to the lamp body as shown

