

ASSEMBLY & INSTALLATION INSTRUCTIONS

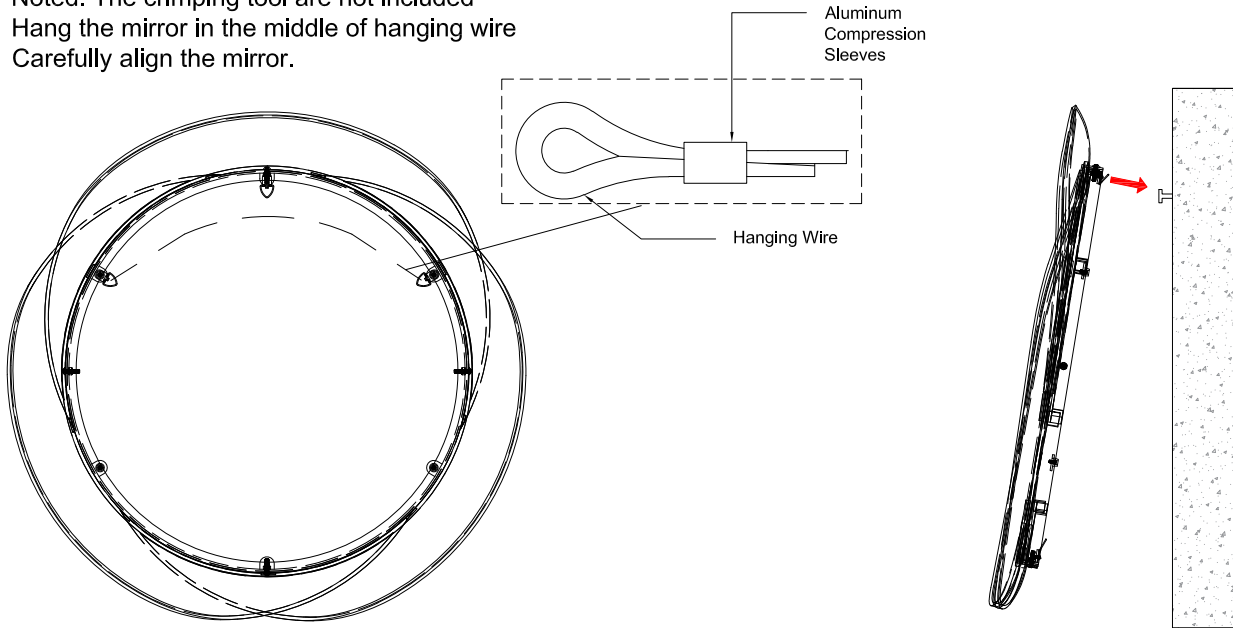
MODEL: 803805PAB
MIRROR



I M A G E



COMPONENT ASSEMBLY

- STEP 1:** Carefully position the Mirror on the desired location.
- STEP 2:** Attached the hanging wire to the frame holder, secure the hanging wire using the Aluminum Compression Sleeves.
Noted: The crimping tool are not included
- STEP 3:** Hang the mirror in the middle of hanging wire
- STEP 4:** Carefully align the mirror.



| IMAGE | PARTS NAME | |
|-------------------------------------------------------------------------------------|------------------------------|-------|
|  | Aluminum Compression Sleeves | 2 PCS |
|  | Hanging Wire | 4 FT |