

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 803905OL
PFK0073-MIRROR

I M A G E



COMPONENT ASSEMBLY

- STEP 1:** Carefully position the Mirror on the desired location.
STEP 2: Attached the hanging wire to the frame holder, secure the hanging wire using the Aluminum Compression Sleeves.
 Noted: The crimping tool are not included
STEP 3: Hang the mirror in the middle of hanging wire
STEP 4: Carefully align the mirror.

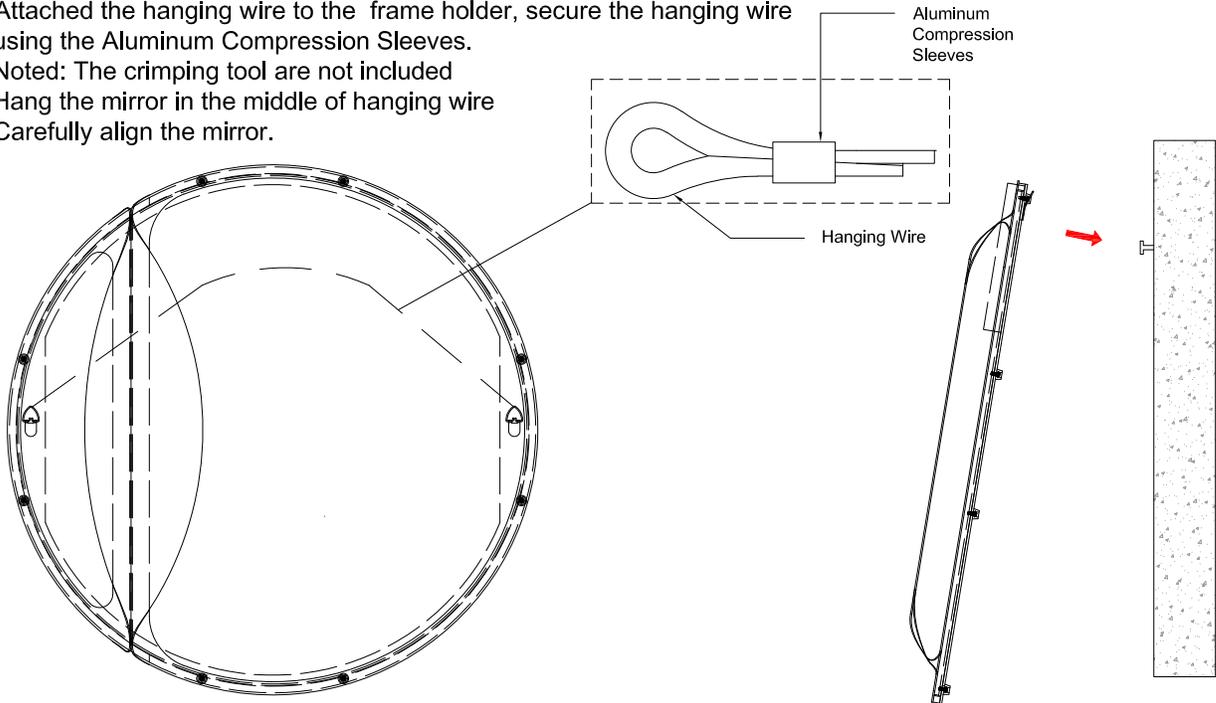


IMAGE	PARTS NAME	QTY
	Aluminum Compression Sleeves	2 PCS
	Hanging Wire	4 FT