






# ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 804305  
WOOD MIRROR




## COMPONENT ASSEMBLY

- STEP 1:** Install the Safety Cable Wire to the Mirror Clip. Secure using compression sleeve (see image below)
- STEP 2:** Carefully position the Mirror on the desired location.
- STEP 3:** Hang and align the mirror.

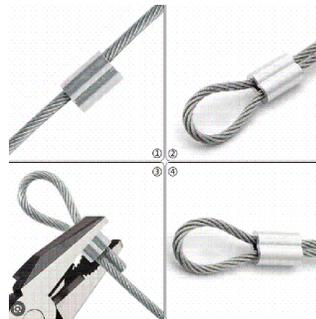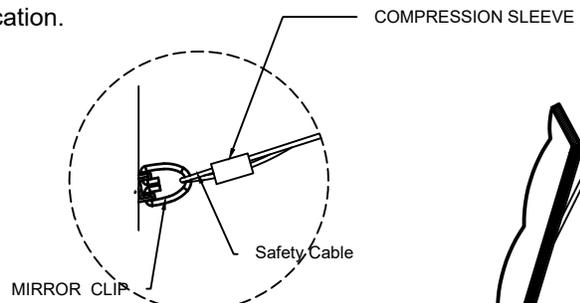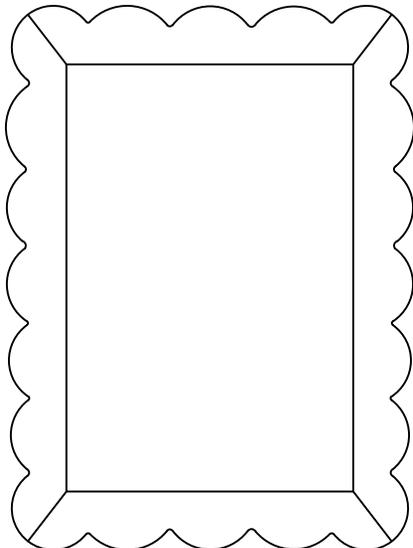

COMPRESSION SLEEVE GUIDE

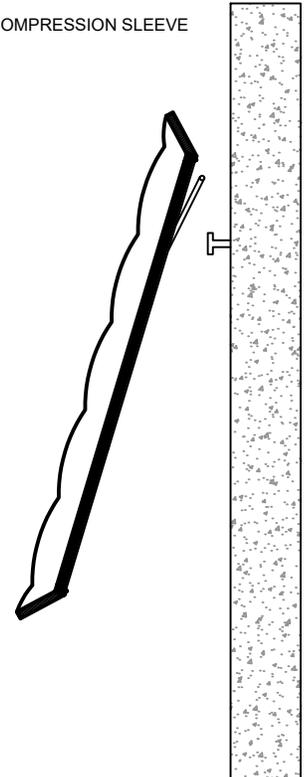



# ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: PFK0075  
WOOD MIRROR

## PARTS LIST

IMAGE	PARTS NAME	QTY
	Compression Sleeve	2 pcs
	Safety Cable Wire	4 ft.