




At Home In Any Environment

**Assembly & Installation Instructions for:**  
9422BB ANASTASIA 2-Light Wall Sconce

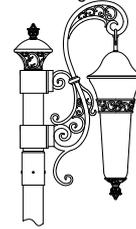

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

**WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:**

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

**Fixture Assembly**

Step 1. Place mount mounting and wiring steps before glass installation step

Step 3. Connect part nut、 round metal sheet 、 cast sleeve 1 、 round metal sheet、 cast dish 、 nut、 cast bowl、 cast meta、 by using part tooth all


Step 4. Install candelabra bulbs bulb,do not use bulbs that exceeds 60W

Step 5. Fix part glass cover、 metal cast to part center pipe by using nut ,at time cast metal.

Step 6. Connect part pothook、 curved arm by using part chain,fix part curved arm to part metal ring by using ball.

Step 7. Fix part cast sleeve 1、 cast sleeve 2 to part metal cast pipe by using M8 sctew

Step 7. Fix part main body to part cast sleeve 1、 cast sleeve 2 by using sctew

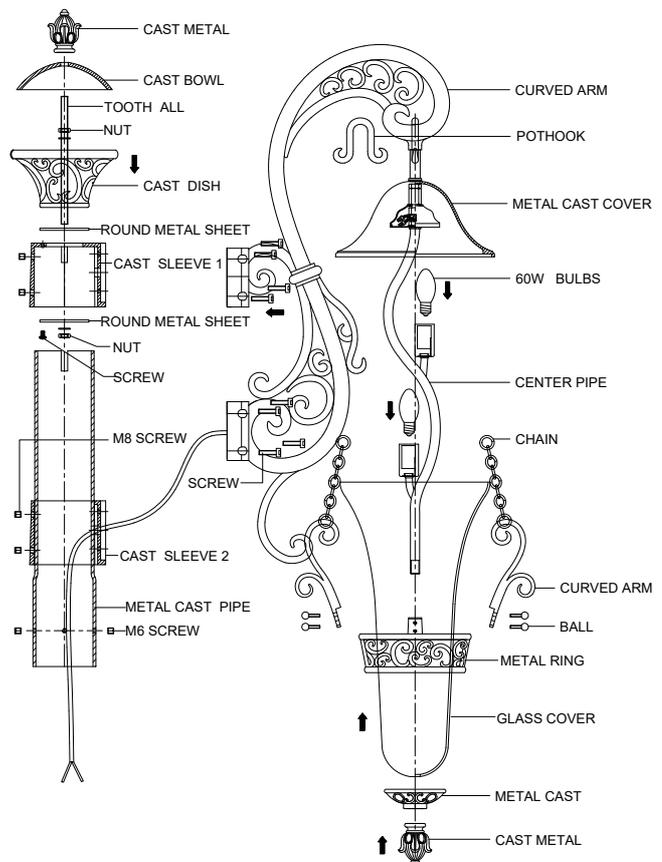



*At Home In Any Environment*

**Assembly & Installation Instructions for:**  
9422BB ANASTASIA 2-Light Wall Sconce

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

### Fixture Assembly

Step 8. Fasten 2 (state specification of screw ) into mounting plate so that they extend away from wall when mounting plate is installed

Step 9. Attach the mounting plate to outlet box with screws

Step 10. Refer to wiring diagram.  
Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector splice the bare wire ground to green wire from outlet box with wire connector

Step 11. Carefully tuck in all wires Attach the back plate with the mounting screw on the crossbar. Secure fixture with shell knobs.

