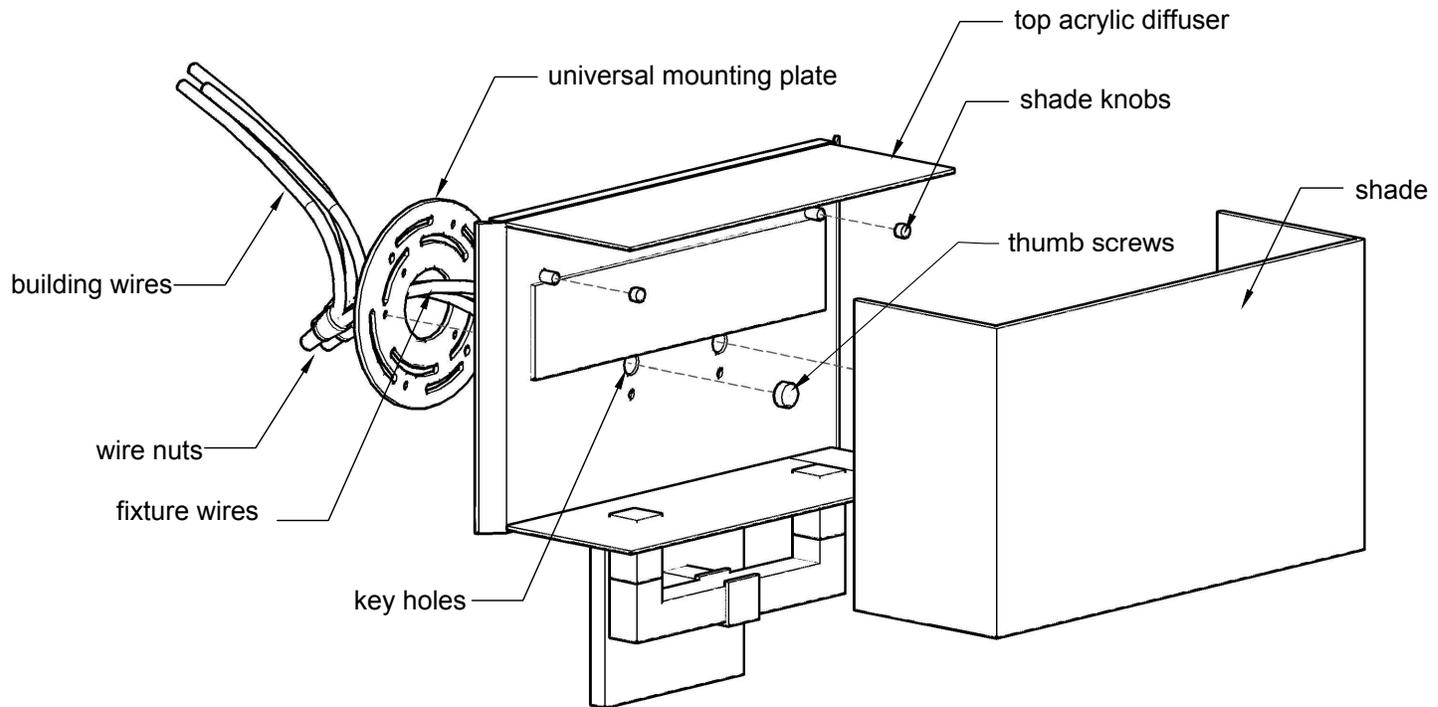# ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirement.

Installation Steps

1. Carefully unpack your new fixture and lay out all the part on clean surface. Take care not to lose any small parts necessary for installation.
2. The universal mounting plate contains several pairs of threaded holes. Find the pair of holes that match the hole spacing in your fixture, and secure the mounting plate to the outlet box by threading the two outlet box screws through the key holes.
3. Make wire connections: Attach ground wire to building ground wire using a wire nut or attach them to the mounting plate with a green ground screw.
   - FOR DIMMING: If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.
   - FOR NON-DIMMING: If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Wire positive wire with positive wire, negative wire with negative wire. Double check wiring. Tuck the wire connections neatly into the junction box.
4. Place the fixture over the mounting screws, so the screws pass through the key holes.
5. Thread the thumb screws onto the mounting screws until the fixture is tight against the wall.
6. Place the shade inside the fixture frame. Shade should be secure. If not, adjust shade knobs as needed to secure shade.
7. Turn the power on at fuse or circuit box.

CHAMELEON sconce

120v **3-514-xx**

277v **37-514-xx**

OXYGEN LIGHTING ©

ASSEMBLY INSTRUCTIONS