


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

**WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.**

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

## Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on clean surface. Take care not to lose any small parts necessary for installation
2. Thread the suspended rod onto the nipple (A). Choose the suitable suspended rods that you need. Insert the fixture wire through the suspended rods and connect them together. Then thread the swivel into the suspended rod tightly.
3. Secure the fixture housing onto the diffuser. Feed the wires through the metal shade, threaded nut, canopy plate, and canopy, allowing them to slide down over the suspended rod and onto the diffuser. Take care not to cause any scratches.
4. Thread the crossbar onto the swivel. The wires can be fed through the notched coupling below the crossbar.
5. Cut the red and black wires to desired length. Once wire is cut, connect red wire to the opposing red terminal, and black wire to the opposing black terminal inside the canopy.
6. Place driver inside the junction box and make wire connections. Make sure to leave the orange connector accessible.  
**-FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.  
**-FOR NON-DIMMING:** If not using a dimmer switch, with wire nuts, cap off purple and gray wires individually. Connect white wire (neutral) from driver to white wire from building. Connect black wire (hot) from driver to black wire from building. Double check wiring. Tuck the wire connections neatly into the junction box.
7. Secure the crossbar to the junction box by threading the two junction box screws through the slotted holes. Attach the ground wire to the building ground wire using a wire nut.
8. Connect the orange connector from the canopy to the orange connector from the driver.
9. Slide canopy and canopy plate over threaded pipe. Secure using threaded coupling.
10. Turn power back on at fuse or circuit box.

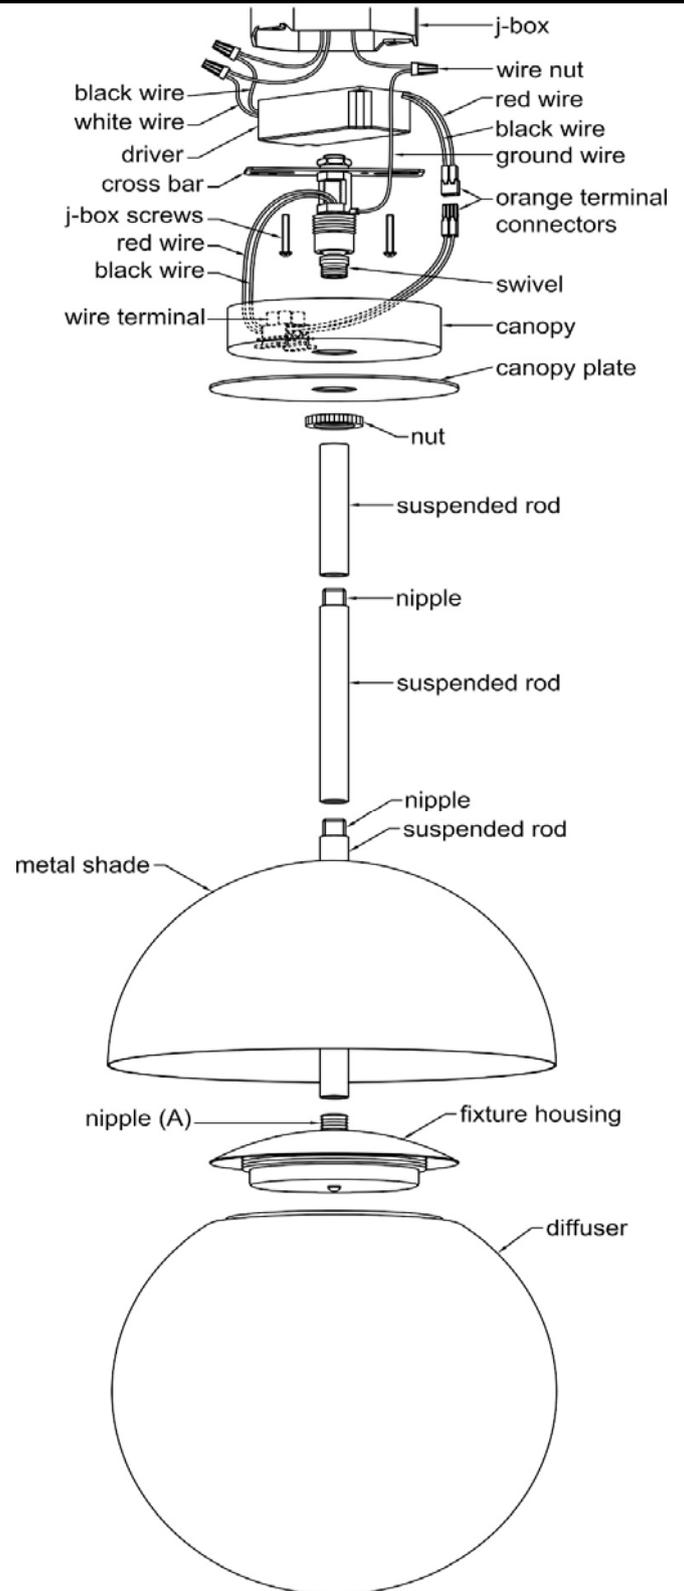

OXYGEN LIGHTING ©

oxygen

**MONDO** Pendant

3-6900-xx 3-6901-xx 3-6902-xx 3-6903-xx

**ASSEMBLY  
INSTRUCTIONS**