
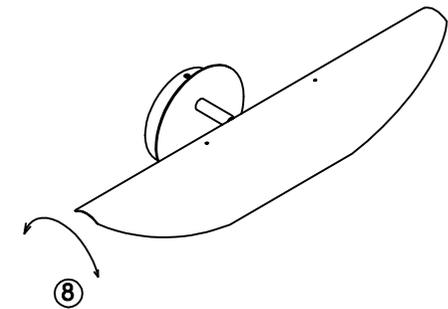
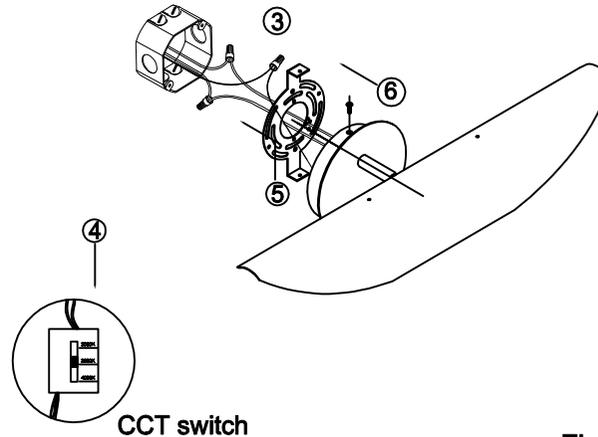


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

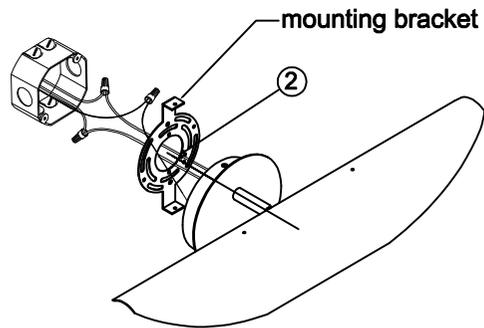

OXYGEN LIGHTING ©

Fig.1

Fig.2

Fig.3

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on clean surface. Take care not to lose any small parts necessary for installation.
2. Thread fixture wires through the mounting bracket (Fig.1).
3. Make wire connections: Attach ground wire to building ground wire using a wire nut or attach them to the mounting plate with a green ground screw.
FOR DIMMING: If using a dimmer, follow wiring instructions enclosed with dimmer. Double check wiring.
4. Select the desired color temperature by turning the CCT switch: 3000K, 3500K, 4000K.
5. Tuck the wire connections neatly into the junction box.
6. Secure mounting bracket to outlet box with screws (Fig.2).
7. Place the fixture over the mounting bracket. Install the two screws on the sides of the fixture to secure it to the wall.
8. Adjust to desired shade angle (Fig.3).
9. Turn power back on at fuse or circuit box.

Pivot vanity
120-277V 3-406-XX

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX. (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS