


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

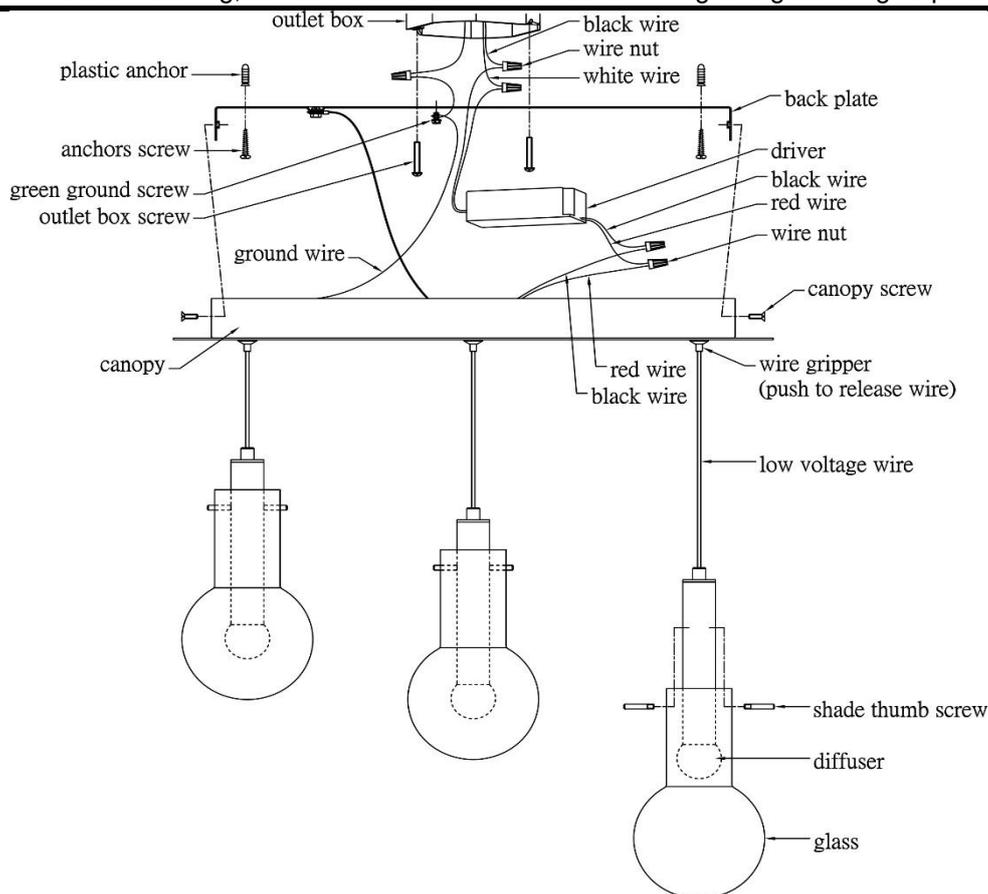

OXYGEN LIGHTING ©

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on clean surface. Take care not to lose any small parts necessary for installation.
2. Hold back plate up against the ceiling, align the two holes in the Outlet box with appropriate holes in the back plate. Then while the backplate is leveled horizontally, use a pen or pencil to make a mark on the ceiling at holes located near end of back plate. Set aside the back plate and insert plastic anchors into the two marks made on the ceiling.
3. Install back plate to Outlet box with Outlet box screws and anchor screws.
4. Depress small center tube on wire gripper to set up desired length of low voltage wire.
WARNING - DO NOT CUT LOW VOLTAGE WIRE.
5. Make wire connections. Refer to driver label for wire identification.
 - Attach ground wire to building ground wire using a wire nut. Connect white wire (neutral) from driver to white wire from building. Connect black wire (hot) from driver to black wire from building.
 - Attach red wire (positive) from driver to red wire from light with a wire nut.
 - Attach black wire (negative) from driver to black wire from light with a wire nut.
6. Fix driver in inside of canopy with double-sided tape. Secure canopy onto the back plate with canopy screws.
7. Secure glass shade with the shade thumb screw.
8. Turn power back on at fuse or circuit box.
9. When inspecting branch circuit connections after installation, loosen the canopy screws to do maintenance service.

oxygen

PRIMO Pendant
3-674-xx

ASSEMBLY INSTRUCTIONS