


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

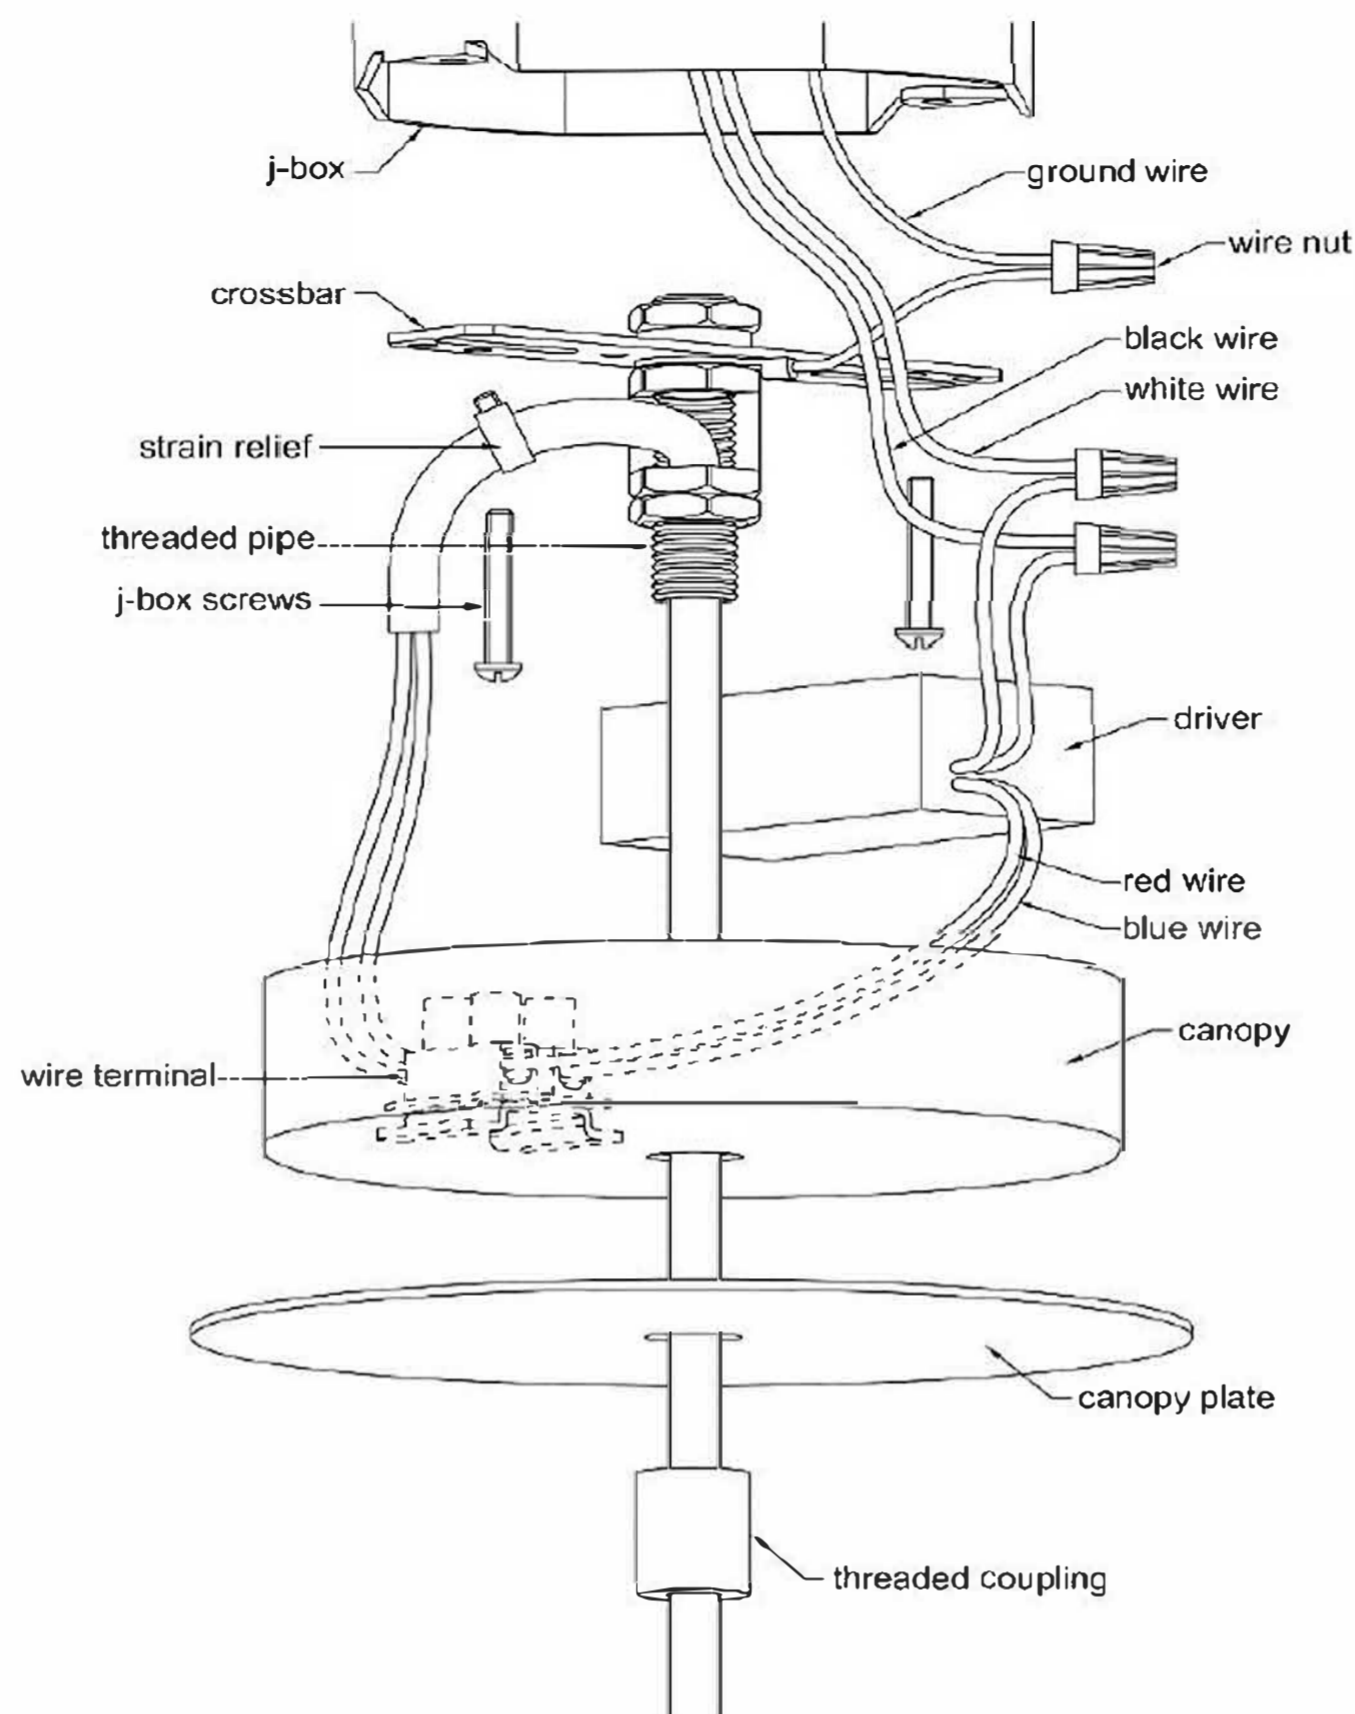

OXYGEN LIGHTING ©

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clean surface. Take care not to lose any small parts necessary for installation.
2. Set up desired length of cord and secure strain relief. Once cord is cut, connect red wire to the opposing red terminal, and blue wire to the opposing blue terminal inside the canopy.
3. Secure the crossbar to the outlet box by threading the two outlet box screws through the slotted holes.
4. Make wire connections. Attach ground wire to building ground wire using a wire nut. Wire white (neutral) with white wire (neutral), black wire (hot) with black wire (hot).
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.
 - **FOR NON-DIMMING:** If not using a dimmer switch, with wire nuts, cap off purple and gray wires individually. Wire positive wire with positive wire, negative wire with negative wire. Double check wiring. Tuck the wire connections neatly into the junction box.
5. Slide canopy and canopy plate over threaded pipe. Secure using threaded coupling.
6. Turn power back on at fuse or circuit box.

oxygen

RUVO
120v: 3-6202-xx

ASSEMBLY
INSTRUCTIONS