


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clean surface. Take care not to lose any small parts necessary for installation.
2. Thread the suspended rod onto the nipple (A). Choose the suitable suspended rods that you need. Insert the fixture wire through the suspended rods and connect them together. Then thread the swivel into the suspended rod tightly.
3. Feed the wires through the threaded nut, canopy plate, and canopy, allowing them to slide down over the suspended rod. Take care not to cause any scratches.
4. Thread the crossbar onto the swivel. The wires can be fed through the notched coupling below the crossbar. Cut the red and black wires to desired length.
5. Secure the crossbar to the junction box by threading the two junction box screws through the slotted holes.
6. Make wire connections. Refer to driver label for wire identification.
 - Attach ground wire to building ground wire using a wire nut. Connect white wire (neutral) from driver to white wire from building. Connect black wire (hot) from driver to black wire from building.
 - Attach red wire (positive) from driver to red wire from light with a wire nut.
 - Attach black wire (negative) from driver to black wire from light with a wire nut.Tuck the wire connections neatly into the junction box.
7. Slide canopy and canopy plate over threaded pipe and place driver inside canopy. Secure canopy using threaded nut.
8. Install the acrylic rods A/B.
9. Turn on the power at fuse or circuit box.

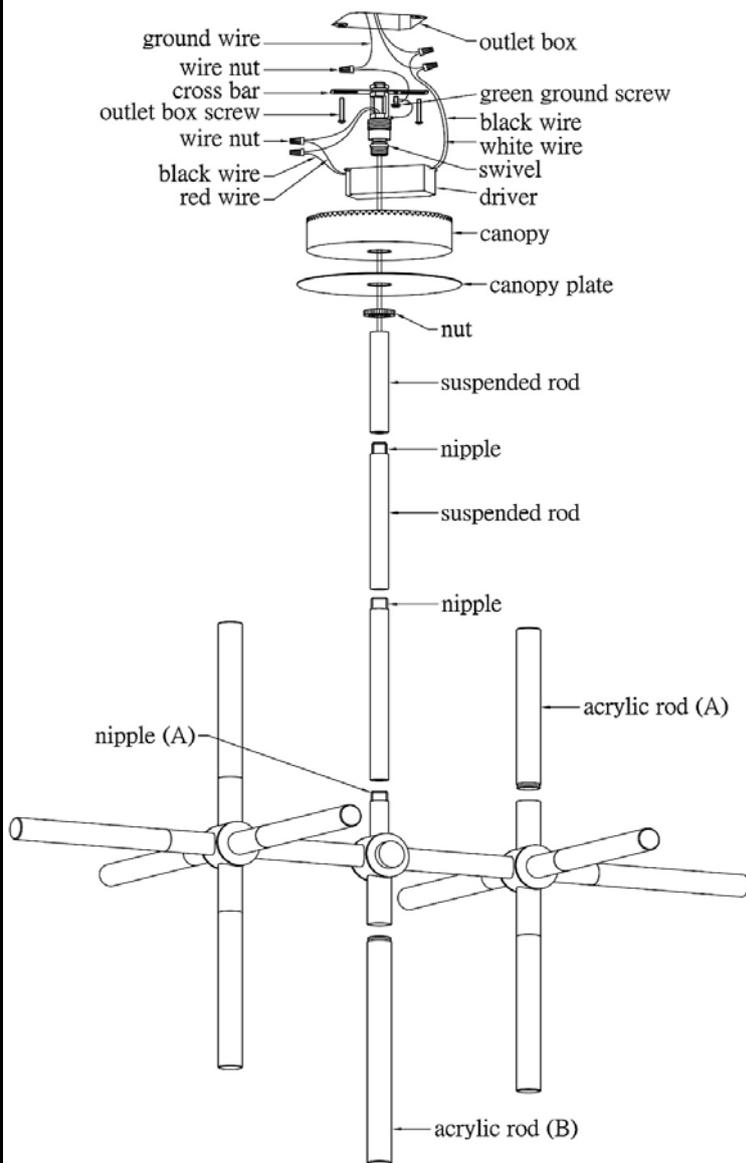

OXYGEN LIGHTING ©

oxygen

TALI Chandelier
120v: **3-603-xx**

ASSEMBLY INSTRUCTIONS