


Installation Instructions


Q9 Pickup Coil Retrofit Kit



This style coil is required when retrofitting a Q9 Display onto an existing FLOMEC® G2, A1, 03, or TM turbine meter. See instructions below to install the Q9 pickup coil.


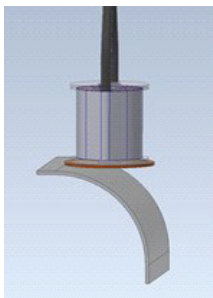


STEP 1: (See Figure 1)
Peel off liner from bottom
of coil to expose adhesive
button.

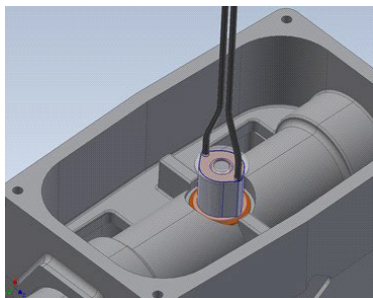


STEP 2: (G2, A1 or 03 Models): (See Figure 2) Press coil to housing as shown centered in circle.

STEP 2: (TM Models): (See Figures 3 & 4) Lower coil into opening as shown. Press coil against bottom. 3" and 4" versions may need a long skinny device to seat coil.

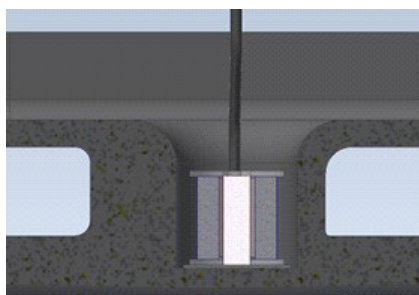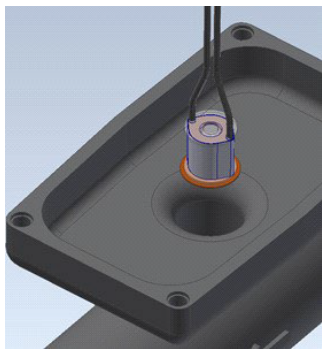

STEP 3: (See Figure 5) Plug
coil leads into Q9 computer
display.

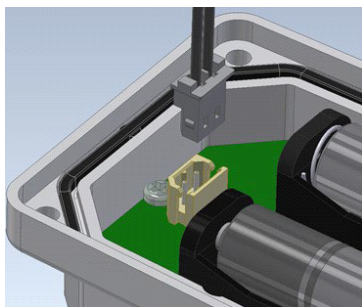

Wichita / Sydney

GREAT PLAINS INDUSTRIES



© 2021 Great Plains Industries, Inc., All Rights Reserved.
Great Plains Industries, Inc. / 888-996-3837 / flomecmeters.com