

WCRETLCK INSTALLATION INSTRUCTIONS

1. Insert the elastic cord through the D-Ring as shown in figure 1 steps 1, 2, and 3
2. In step 3 pull on the cord to tighten the cinching connection.
3. Once step 2 above is completed the D-Ring can be installed on to the desired tool using attachment tape or heat shrink rings- follow the instructions supplied with those products.
4. When using a heat gun keep the heat source away from the elastic cord.
5. Figure 3 illustrates the installation for the WCRETLCK follow the steps above for installation.

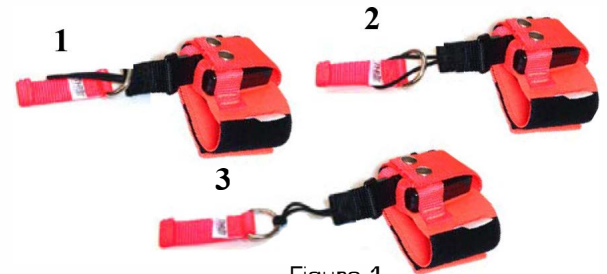


Figure 1



Figure 3

Note: Attachment tape, heat shrink and D-Rings are not supplied with this product.

Cautions:

- Do not use on or near rotating equipment
- Do not install on tools weighing more than 2 lbs.
- Dispose of if a drop is experienced.
- Inspect prior to each use for the following and discard if found:
 - Wearing of the retractor rope
 - Degraded stitching
 - Thinning, Fraying or cuts to the elastic rope along the body, the cinching point and stitch in area to the webbing.