



Important: Review and read **complete** Instructions before installation.

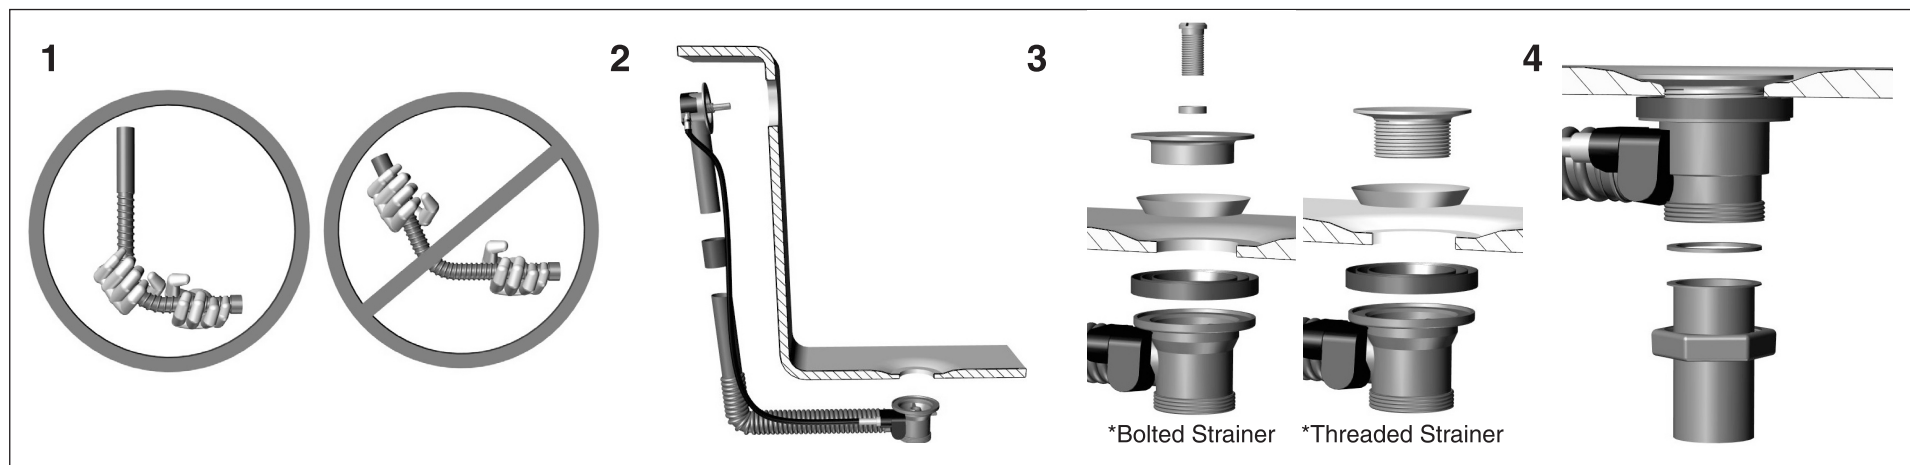

- 1: Position Waste to determine where bend should be.
- 2: To avoid kinking, keep hands about 2" apart and slowly make small bend until desired angle is obtained.
- 3: Check for fit, If the OVERFLOW TUBING is too long, cut to fit.
- 4: Putty Ring may not be sufficient for some tub designs. Instead, use a caulking compound. Tighten bolt last. (Hand tight + 1/4 turn)
*For thin tubs, use spacer under head.

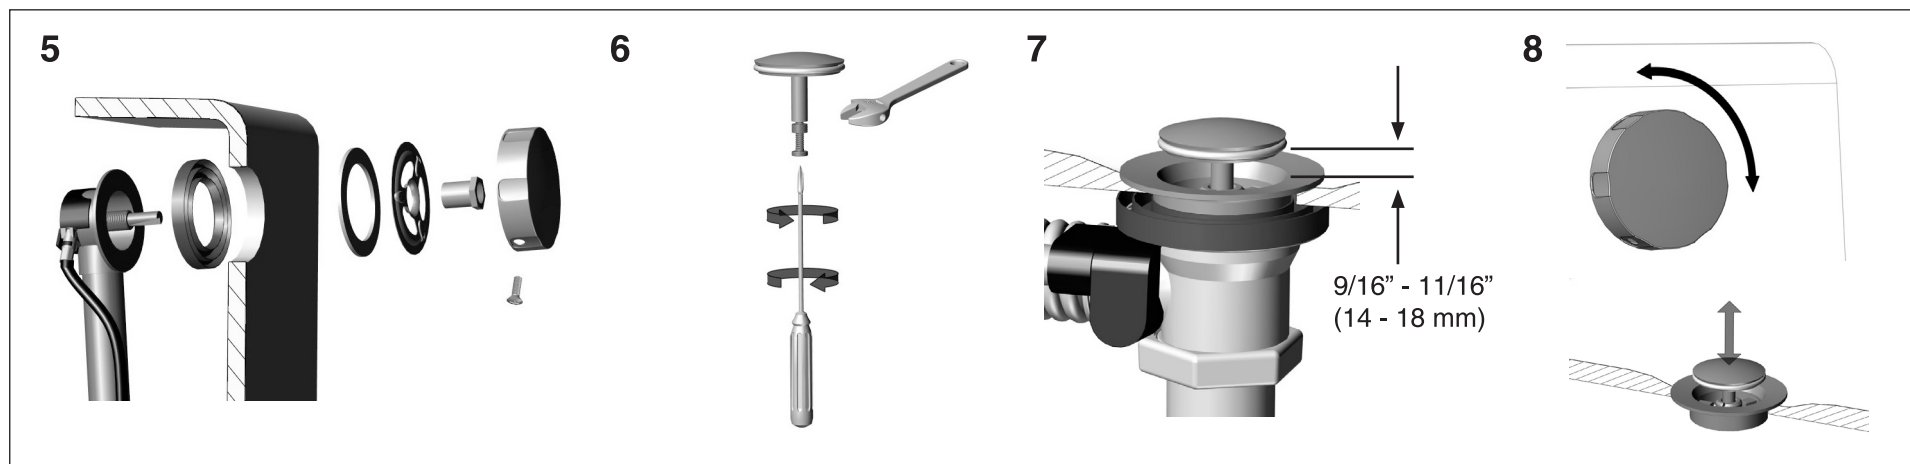


- 5: Make sure Elbow assembly is Centred and Cable is not twisted.
- 6: Height of Plug can be adjusted.


⚠ Caution: We recommend an access panel.

www.osb.ca (Canada)
www.osbplumbing.com (USA)

Important: Lisez les instructions complètes avant l'installation.

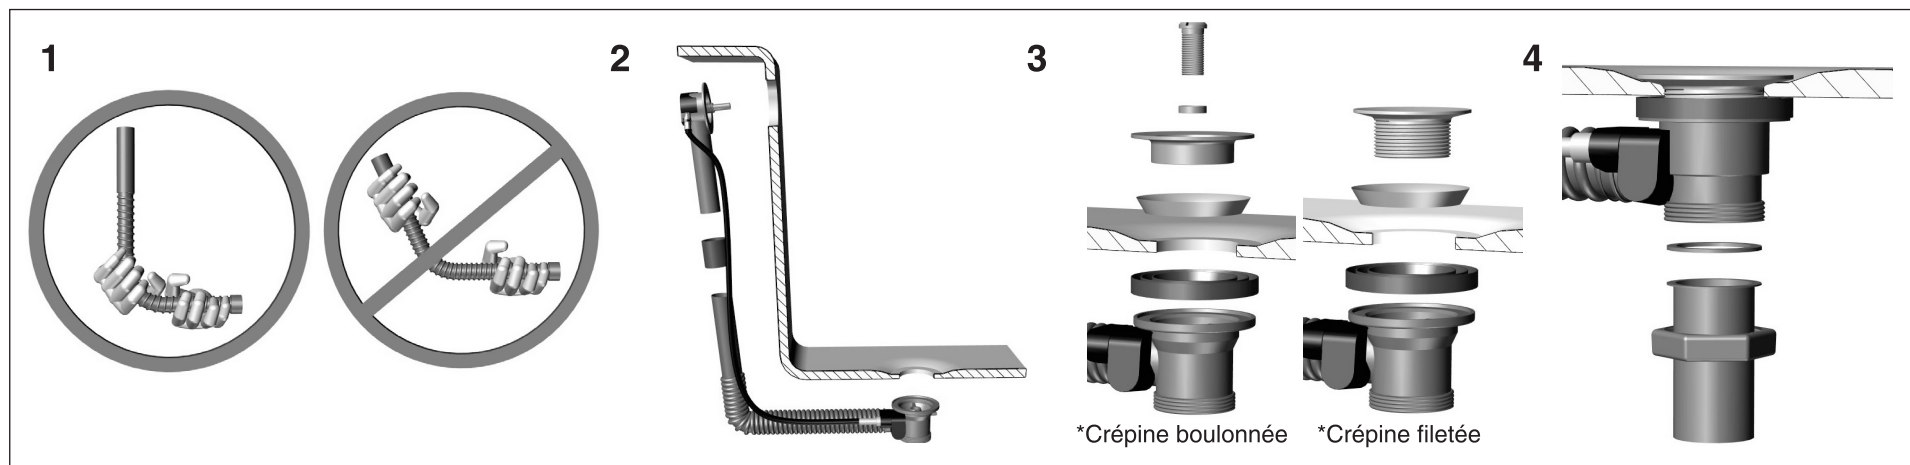

- 1: Mettez le coude "Vidange" en position pour déterminer où la courbe doit être située.
 - 2: Pour éviter de tordre, gardez vos mains à environ 2" à part et faites des petites courbures jusqu'à l'angle désiré est obtenu.
 - 3: Vérifiez ajustement, si le tuyau trop-plein est trop long, coupez au fond.
 - 4: La bague à mastic peut ne pas être suffisante pour certains modèles de baignoire. Utilisez alors un composé scellant. Resserrer le boulon en dernier. (À la main + ¼ tour)
- * Pour baignoires minces, utilisez l'entretoise sous la tête

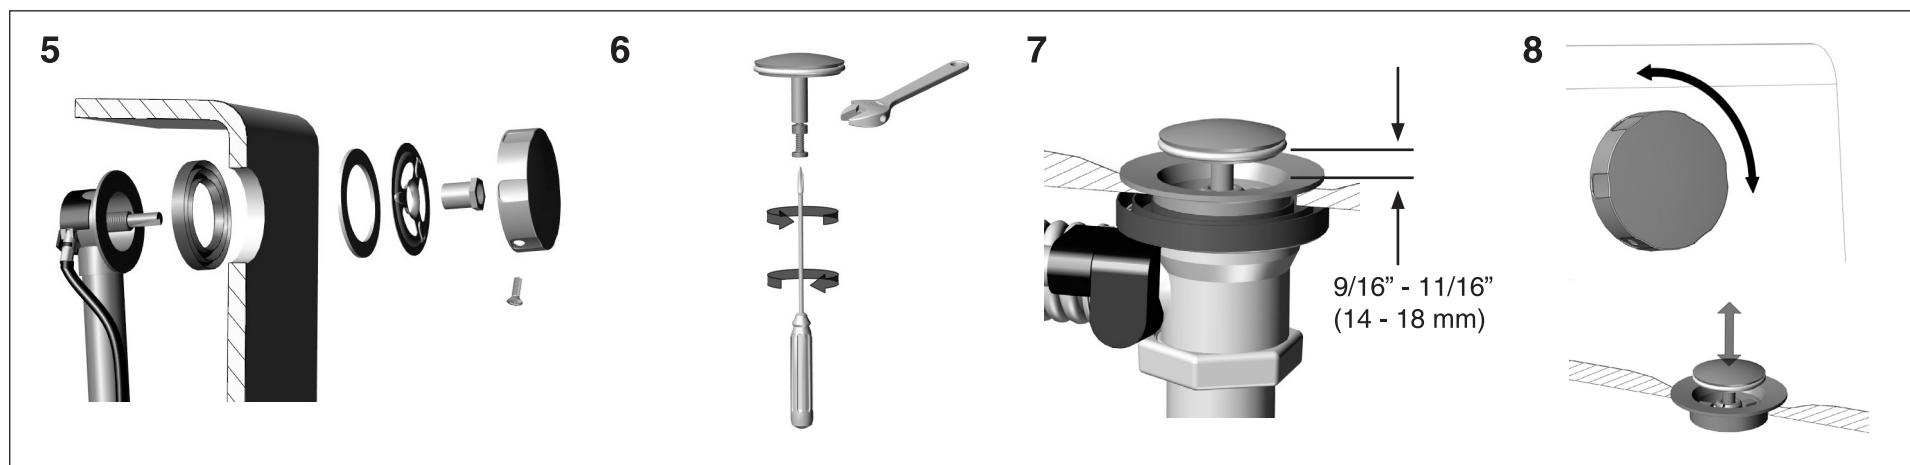

- 5: S'assurer que l'ensemble de coude soit centré et le câble ne soit pas tordu.
- 6: La hauteur de La Bonde peut-être réglée à l'aide de la clé jetable.

⚠ Avis: Nous recommandons un panneau d'accès.