

Island Tub Drain®

Testable Rough-in for
Freestanding Tubs.

*Plomberie brute testable
pour baignoires
autoportantes.*



Island Tub Drain® is Patented in Canada (Patent # 2,813,010)
Island Tub Drain® is Patented in the United States of America (Patent # 9,551,138)
ITD® and Island Tub Drain® are Registered Trademarks of Oakville Stamping and Bending Limited.
The Red Drain® is a Registered Trademark of Oakville Stamping and Bending Limited.

Island Tub Drain® est breveté au Canada (brevet n° 2 813 010)
Island Tub Drain® est breveté aux États-Unis d'Amérique (brevet n° 9 551 138)
ITD® et Island Tub Drain® sont des marques déposées d'Oakville Stamping and Bending Limited.
The Red Drain® est une marque déposée d'Oakville Stamping and Bending Limited.



Caution: Suffocation Hazard - This bag is not a toy. Keep away from babies and young children. Discard bag and any other packaging materials after removing product. Do not re-use this bag.

Attention : Risque d'étouffement - Ce sac n'est pas un jouet. Tenir à l'écart des bébés et des jeunes enfants. Jeter le sac et tout autre matériau d'emballage après avoir retiré le produit. Ne réutilisez pas ce sac.


Installation*



- A. Cut 4" (10.2 cm) hole into wood sub-floor (use supplied Cutout Template).
- B. For ITD365, refer to **Installation Supplement** in bag.
- C. Affix Island Tub Drain® to sub-floor with a minimum of 4 screws (not supplied).
- D. Connect Drain (shown in PVC) assembly to 1-1/2" or 2" DWV P-Trap below floor. 1-1/2" x 2" Reducing Bushing supplied.



- A. Install flooring surface, leaving the red flange exposed.
- B. Affix the brass Tailpiece to the Waste & Overflow. Ensure the measurement between the base of the Drain and P-Trap will accommodate the Tailpiece. Other lengths available from OS&B®.

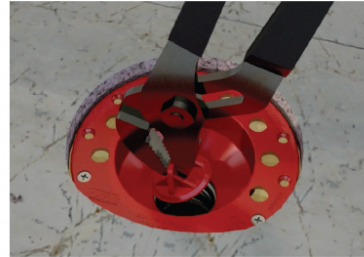

- A. Grip centre Tab with Channel Locks and rock back and forth until removed. Apply lubricant (supplied) to the Tailpiece.
- B. Position assembled Tub in-line with Drain.
- C. Carefully lower the Tub with installed brass Tailpiece into the Red Collar Drain assembly. Ensure Tailpiece is fully engaged with Seal.



"Watch the installation video:
"Regardez la vidéo d'installation:
www.youtube.com/c/osbplumbing

Certification*



"The "cSAUS Meets UPC & IPC Code" mark means the product conforms to the requirements of the NPC, UPC, IPC and IRC.



- ! **NOT FOR USE** with liquid applied or sheet membranes.
MUST BE installed in a dry area with no potential of water contact.
DO NOT CUT THE SUPPLIED BRASS TAILPIECE. Doing so may cause a leak.
■ **DISASSEMBLING** the Drain or cutting the Tailpiece will void the warranty.

- A. Découpez un trou de 4" (10,2 cm) dans le sous-plancher (utilisez le gabarit ci-inclus).
- B. Pour ITD365, reportez-vous au **Supplément d'installation** dans le sac.
- C. Affixez au sous-plancher avec un minimum de 4 vis (non-inclus).
- D. Connectez l'ensemble de drainage (illustré en PVC) au siphon P DWV de 1-1/2" ou 2" sous le plancher. Douille réductrice 1-1/2" x 2" fournie.

- A. Installez la surface de plancher, laissant la bride rouge exposée.
- B. Affixez le Tuyau de Rallonge en laiton au Trop-Plein de Baignoire. Assurez-vous que la mesure entre la base du Drain et le Siphon va accueillir le Tube de Rallonge. Autres longueurs disponibles de OS&B®.

- A. Grippez la languette avec des serrures et déplacez-la d'avant en arrière jusqu'à ce qu'elle soit retirée. Appliquez du lubrifiant (fourni) au Tuyau de Rallonge.
- B. Placez la Baignoire en ligne avec le Drain.
- C. Abaissez avec précaution la Baignoire avec le Tuyau de Rallonge en laiton installée dans le collier rouge dans le Drain. Assurez-vous que le Tuyau de Rallonge est pleinement engagé avec le Joint d'Étanchéité.

- ! **NE DOIT PAS** être utilisé avec des membranes liquides ou des membranes en feuilles.
DOIT ÊTRE INSTALLÉ dans un endroit sec, sans contact potentiel avec l'eau.
NE PAS COUPER LE TUYAU DE RALLONGE EN LAITON. Cela pourrait provoquer une fuite d'eau.
■ Le **DÉMONTAGE** du Drain ou le découpage du Tuyau de Rallonge annulera la garantie.

+osb

Oakville Stamping & Bending Ltd.
2200 Speers Road, Unit C
Oakville, ON, Canada
L6L 2X8

Tel. 905.827.0320
Toll Free. 1.877.314.6040
www.osb.ca (Canada)
www.osbplumbing.com (USA)

BGITDV3