

Ceiling LED Multi Pendant

MP14850-UNV-010

INSTALLATION SHEET

START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- Use ELV (Electronic Low Voltage) or TRIAC or 0-10V type of dimmer for dimming application
- 120-277V input


Technical Support: 1-855-855-8926

1. Remove fixture from its original package
2. Separate mounting plate (1c) from canopy (2a) by removing decorative nuts (2c)

Important: this fixture is heavy and must be mounted independently from junction box (1a), additional means of support is required

3. Align mounting plate screws (1d) to desired orientation
4. Secure mounting plate (1c) to mounting surface with anchors (1f) and screws (1h)
5. Make proper electrical connections (**black to hot "L"**, **white to neutral "N"**, **ground to "GND"**) with wire nuts (1b) provided in hardware package. Connect 0-10V dimming wire, DIM+ to purple, DIM- to gray, with wire nuts provided
6. Align and insert mounting plate screws (1d) through holes on canopy (2a), secure with decorative nuts (2c)
7. Fine tune wire length if necessary, by push and hold wire gripper (2g) and then adjust wire to desired length

| Wires | |
|-----------------|-----------|
| Hot (Black) | ————— |
| Neutral (White) | ————— |
| Ground | - - - - - |
| Dim - (Gray) | ————— |
| Dim + (Purple) | ————— |

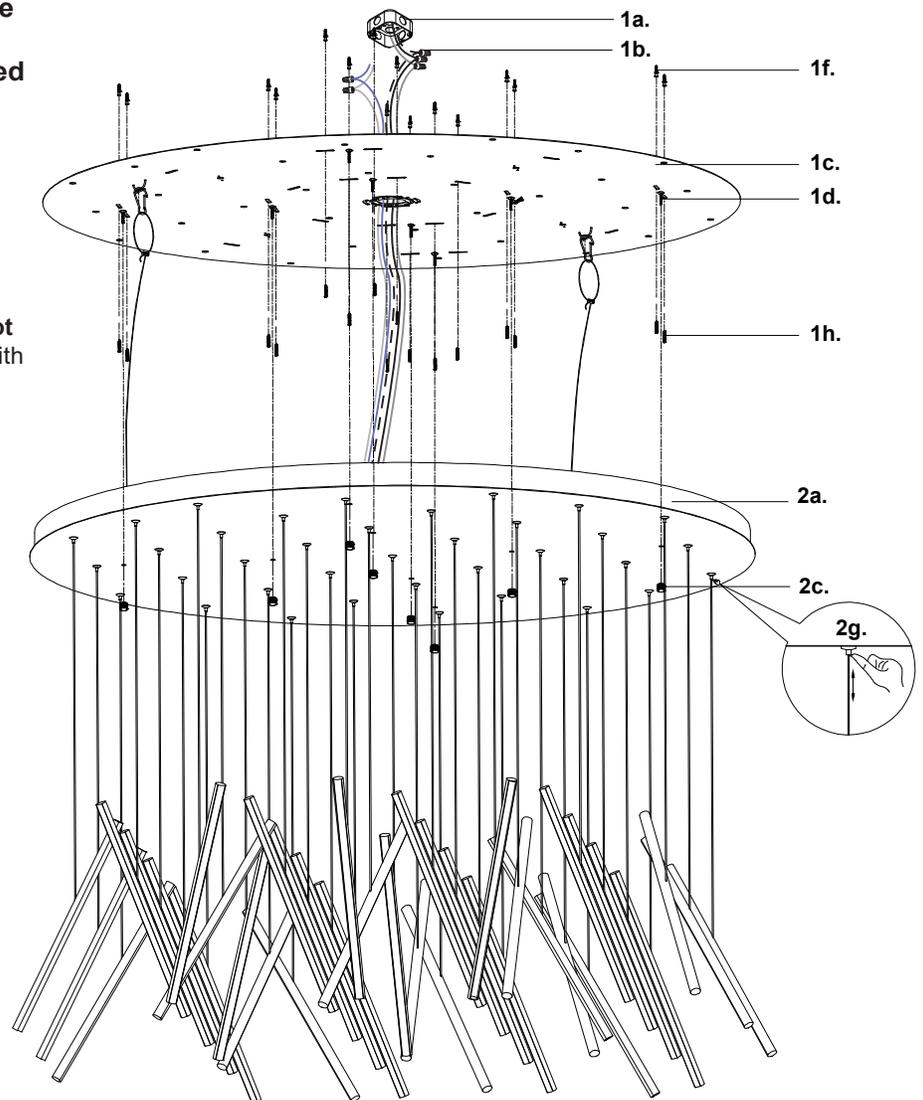

KUZCO

19054 28th Avenue Surrey, BC Canada V3Z 6M3
T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196
W: kuzcolighting.com
20240828