

Ceiling LED Multi Pendant

MP18205-UNV-010

INSTALLATION SHEET

START FROM HERE


- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

Technical Support: 1-855-855-8926

Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- Use ELV (Electronic Low Voltage) or TRIAC or 0-10V type of dimmer for dimming application
- 120-277V input

1. Remove the fixture from its original packaging. Next, remove the mounting plate **(1c)** from within the canopy cover **(2a)** by removing the four decorative nuts **(2b)**.
2. Install the mounting plate **(1c)** to the junction box **(1a)** with screws **(1f)**. For additional security add screws **(1d)** and plastic anchors **(1b)** through the mounting plate **(1c)** to the ceiling and wood backing. To set the fixture hanging height (120" maximum), loosen the wire lock nut **(2c)** at the canopy **(2a)** where the wire comes out from. Push the wire up to shorten, or pull the wire down to lengthen. When you have selected your desired length, just tighten back the nut **(2c)** and the wire will be held tightly in place.
3. You are now ready to mount the canopy **(2a)** to the mounting plate **(1c)**. Make proper electrical connections (**black to hot "L", white to neutral "N", ground to "GND"**) with wire nuts **(1g)** provided in hardware package. Connect 0-10V dimming wire, DIM+ to purple, DIM- to gray, with wire nuts provided. Attach the steel wires **(1i)** through the clips **(1h)**. Align the four threaded studs **(1e)** hanging downward from the mounting plate **(1c)** to the four holes inside the canopy **(2a)**. Push the canopy **(2a)** up towards the ceiling so the threaded studs **(1e)** clears through the holes in the canopy cover **(2a)**. Next, screw on the four decorative nuts **(2b)** this will secure the canopy **(2a)** to the mounting plate **(1c)**.
4. You have now completed the installation of your fixture, enjoy.

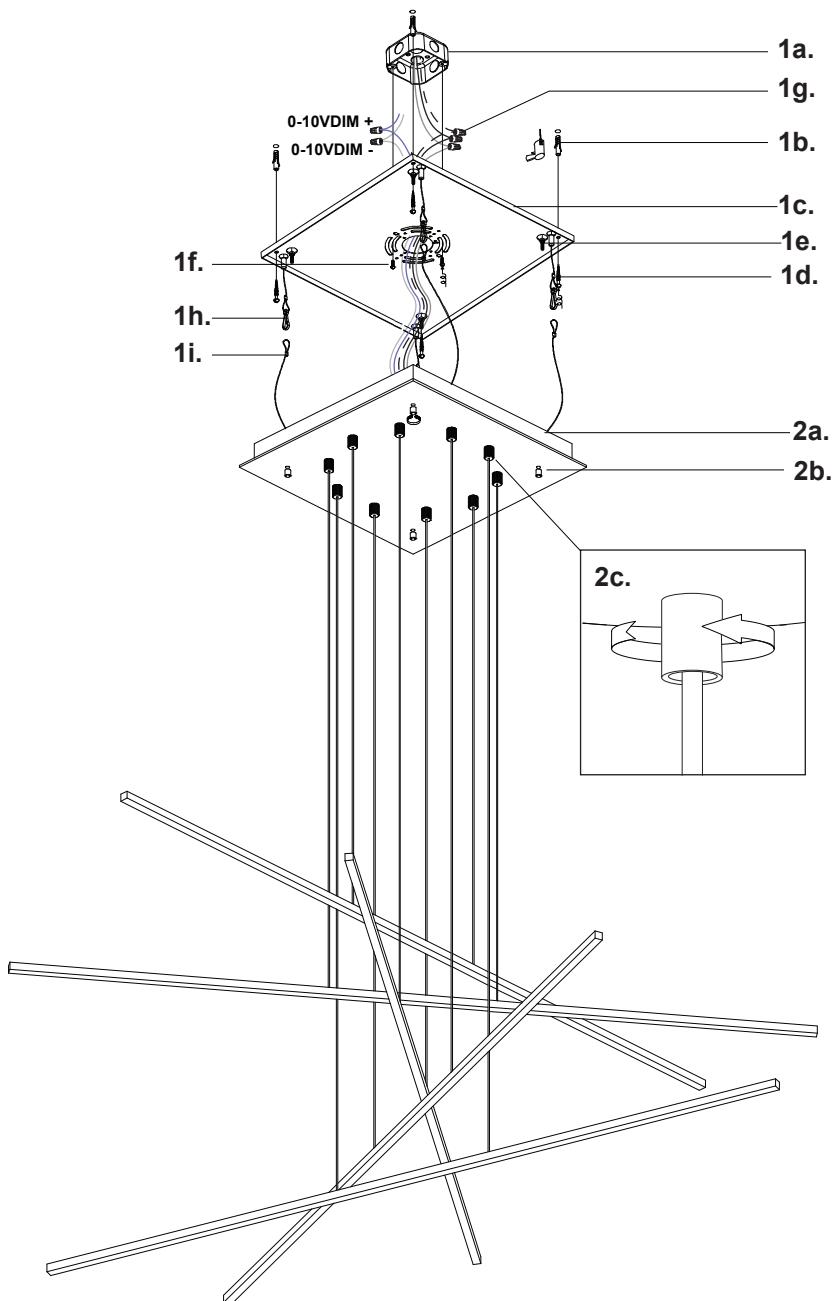

K U Z C O.

19054 28th Avenue Surrey, BC Canada V3Z 6M3
T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196
W: kuzcolighting.com
20240605