

# Incandescent Pendant

# PD0725122

INSTALLATION SHEET


## START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

## Please Note:

- 120V input

- 1.** Remove fixture from its original package
- 2.** Remove the mounting plate (1c) from within the canopy (2a) by loosening the mounting collar nut (2b)
- 3.** Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package
- 4.** Hook fixture body chains (3b) to fixture hub (3a)
- 5.** Determine hanging height of fixture by selecting from chain supplied (2d). Remove any unwanted length by opening the last link with chain pliers and install the quick link (2c) to the ends of the chain, after weaving fixture wires through chain and secure quick link (2c) to the screw collar (2e) and fixture hub (3a)
- 6.** Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts (1b) provided in hardware package
- 7.** Insert bulb (4a) into fixture socket
- 8.** Attach canopy (2a) to mounting plate (1c) by threading mounting collar nut (2b) onto screw collar (2e)

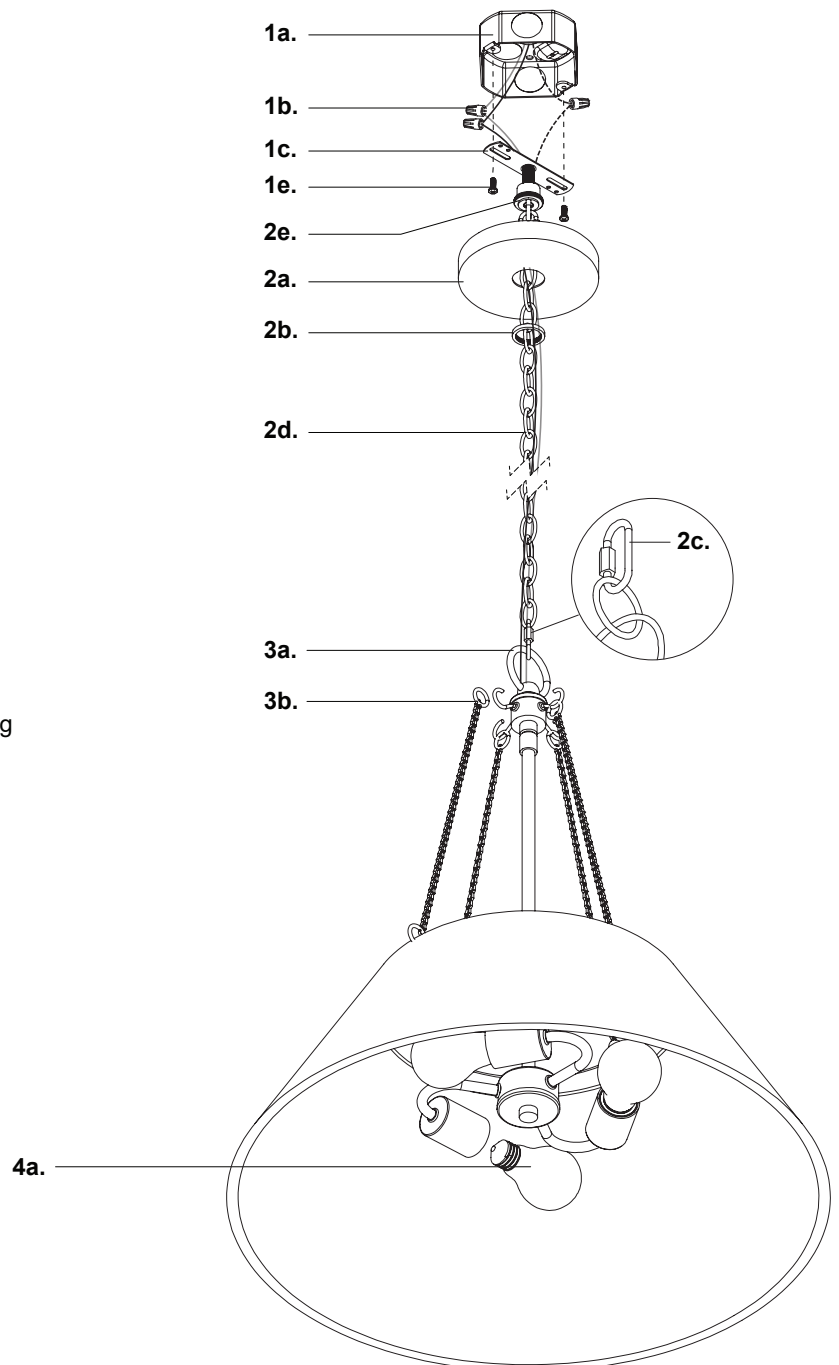

## SoModern

T: 1.833.8SO.MDRN (76.6376)

W: [www.somodernlighting.com](http://www.somodernlighting.com)

E: [info@somodernlighting.com](mailto:info@somodernlighting.com)