



MODLOFT

SPRUCE BED

ASSEMBLY INSTRUCTIONS

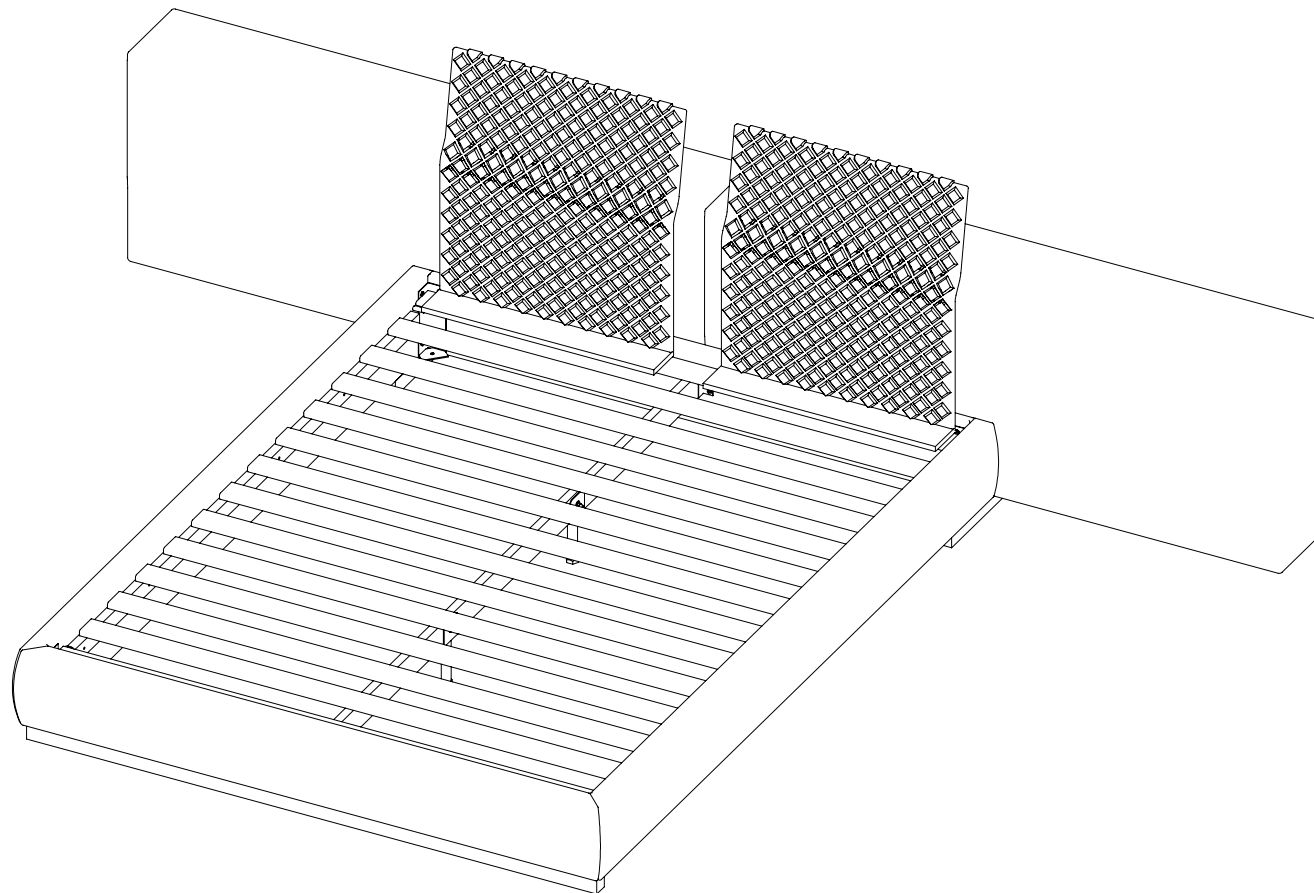


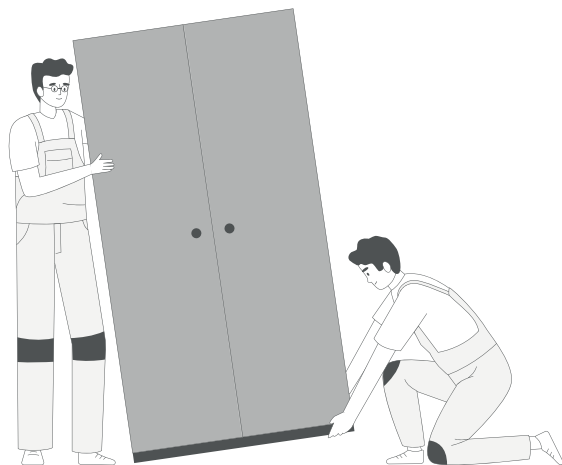

IF POSSIBLE, USE THE HELP
OF SOMEONE ELSE




REST THE PIECES ON SOFT SURFACES
TO AVOID DAMAGING THE ITEM








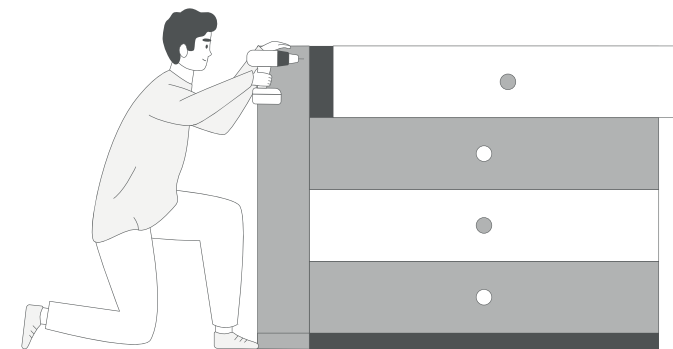


USE THE TOOLS INCLUDED


CONVENTIONS

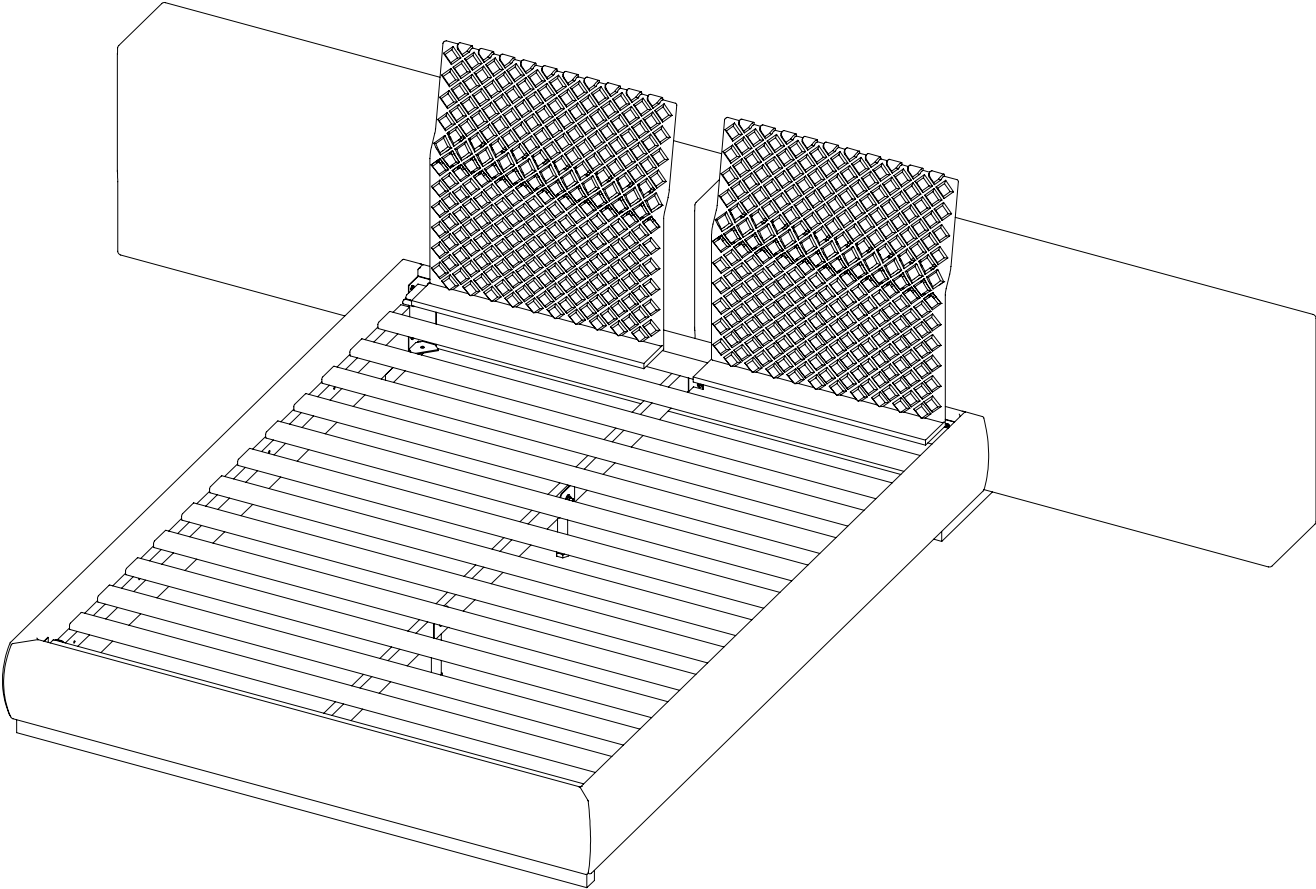


HARDWARE

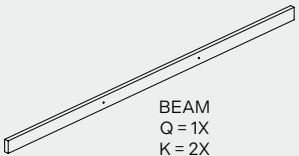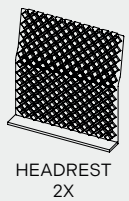


TOOL

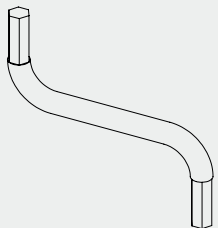

STEP 1

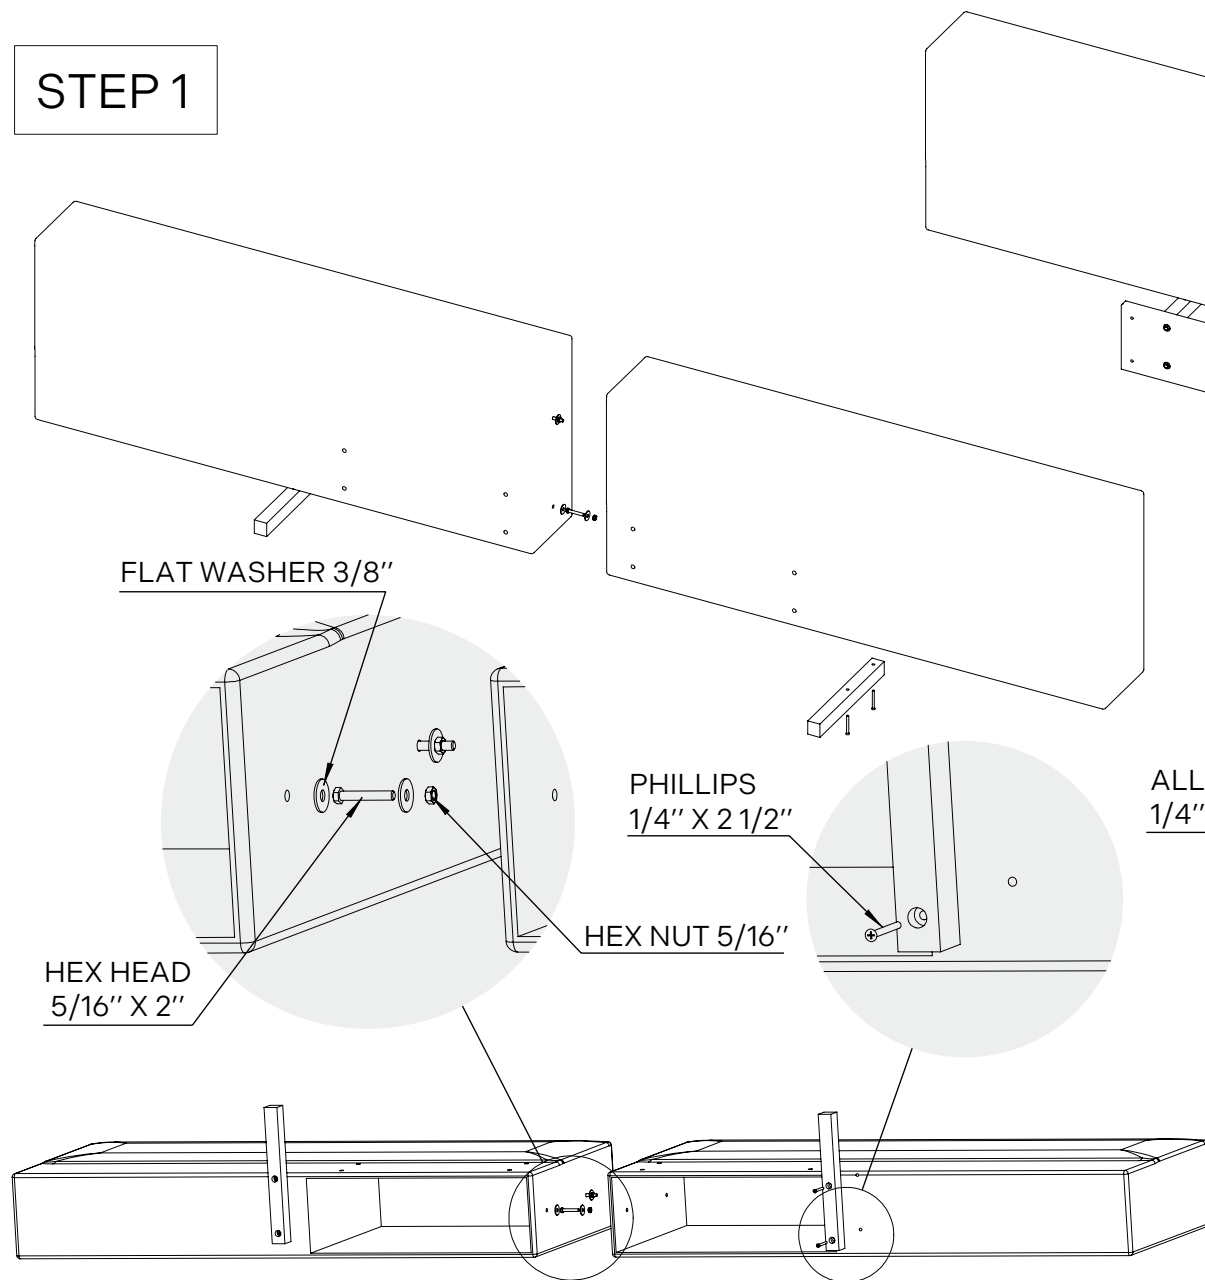

STEP 2

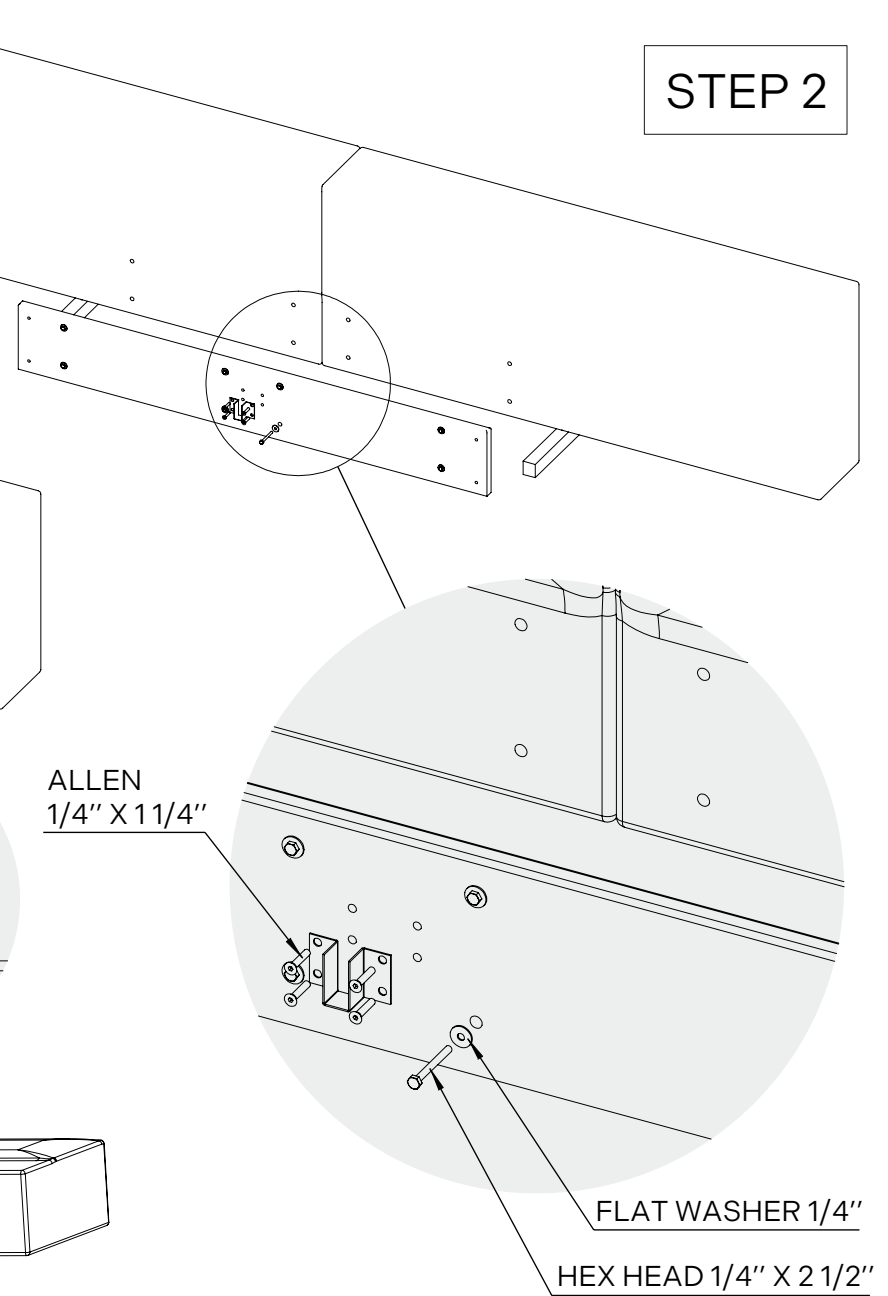

STEP 3

ALLEN 1/4" X 1 1/4"

STEP 4


STEP 5

ALLEN 1/4" X 1 1/4"


SPRUCE BED

CONTACT US AT

SUPPORT@MODLOFT.COM

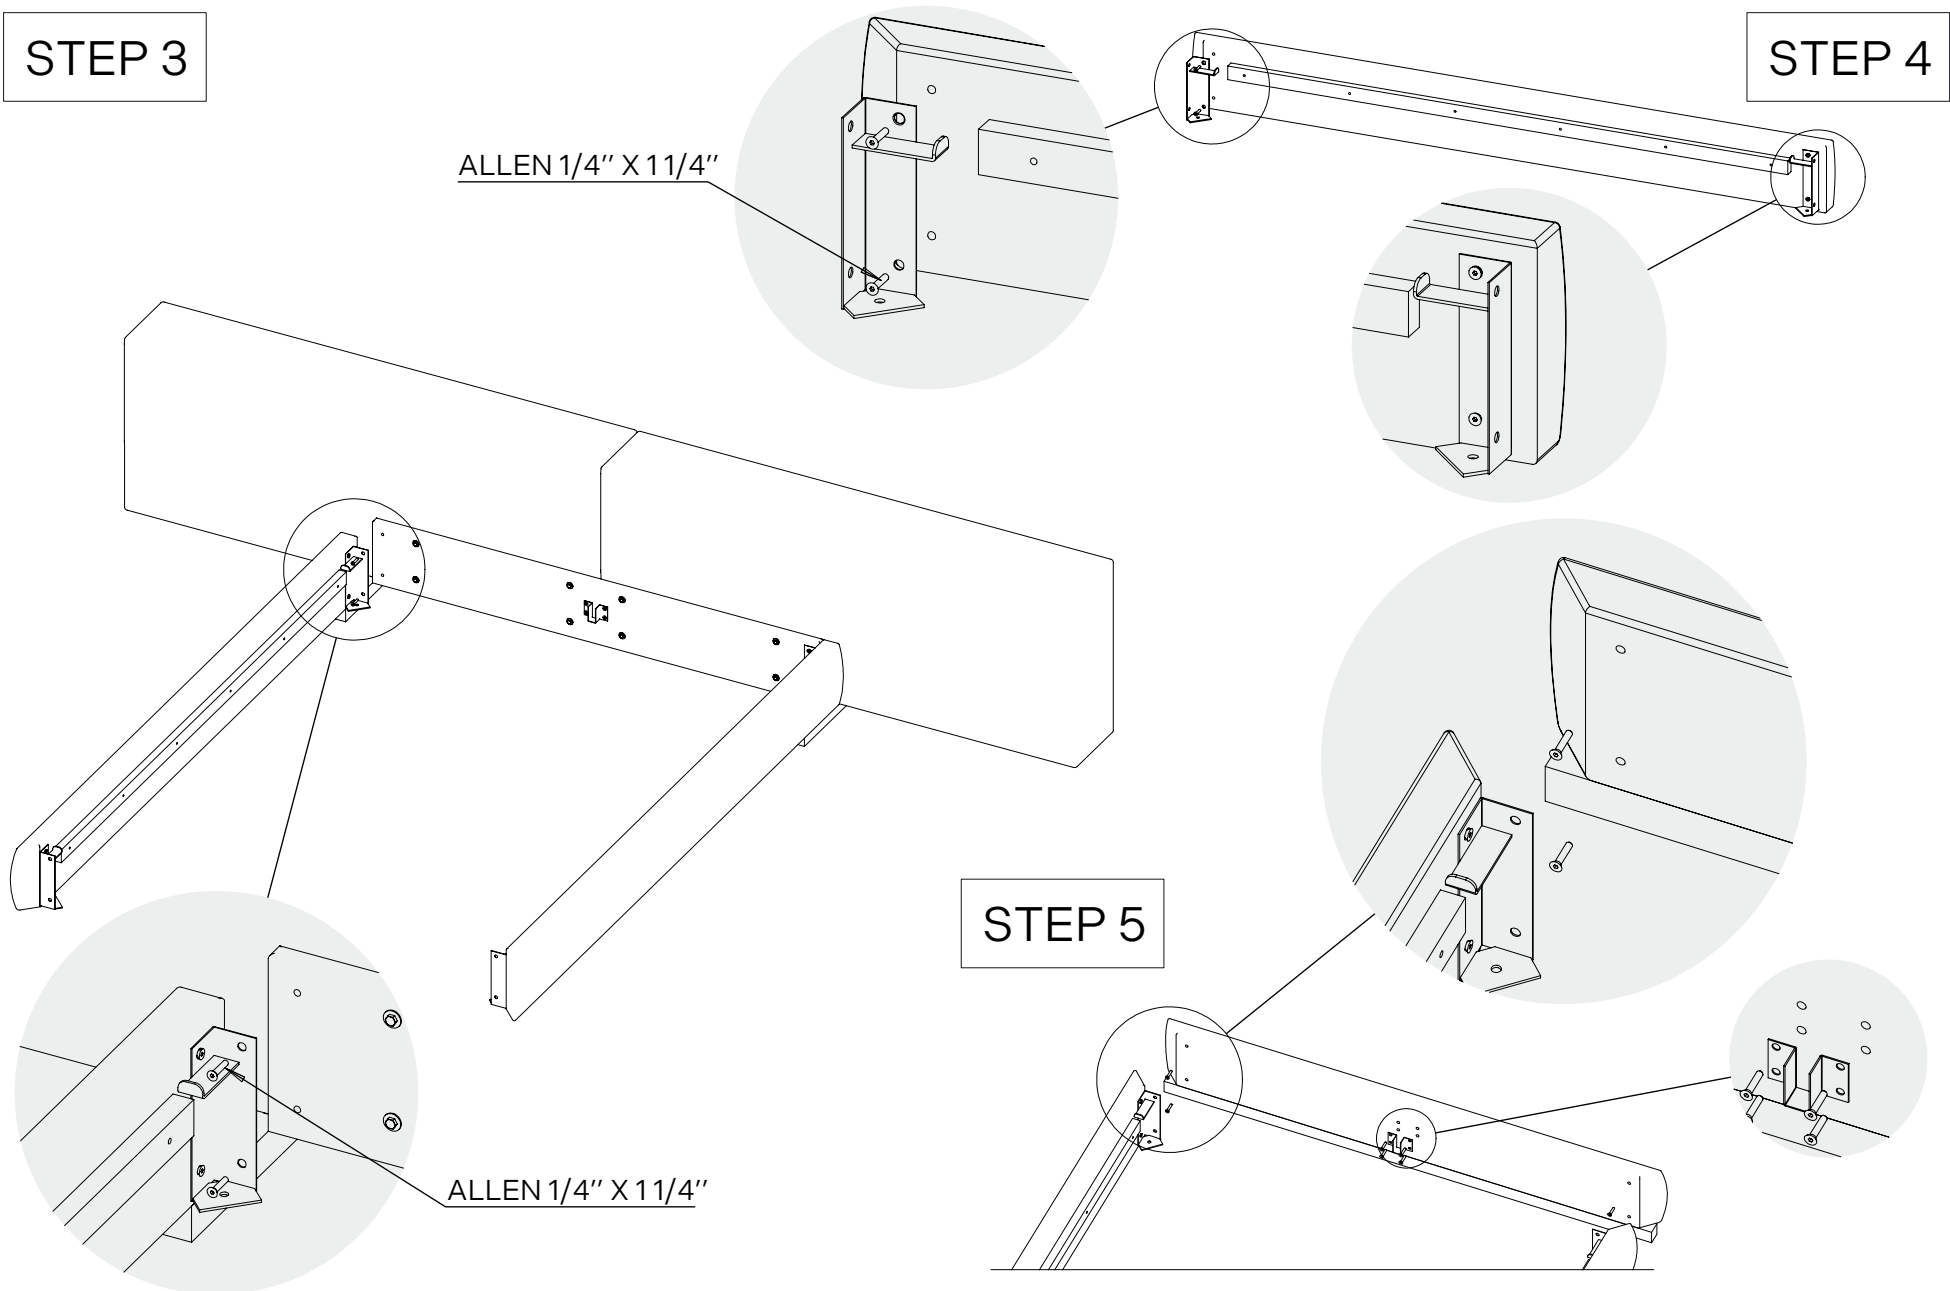

STEP 6

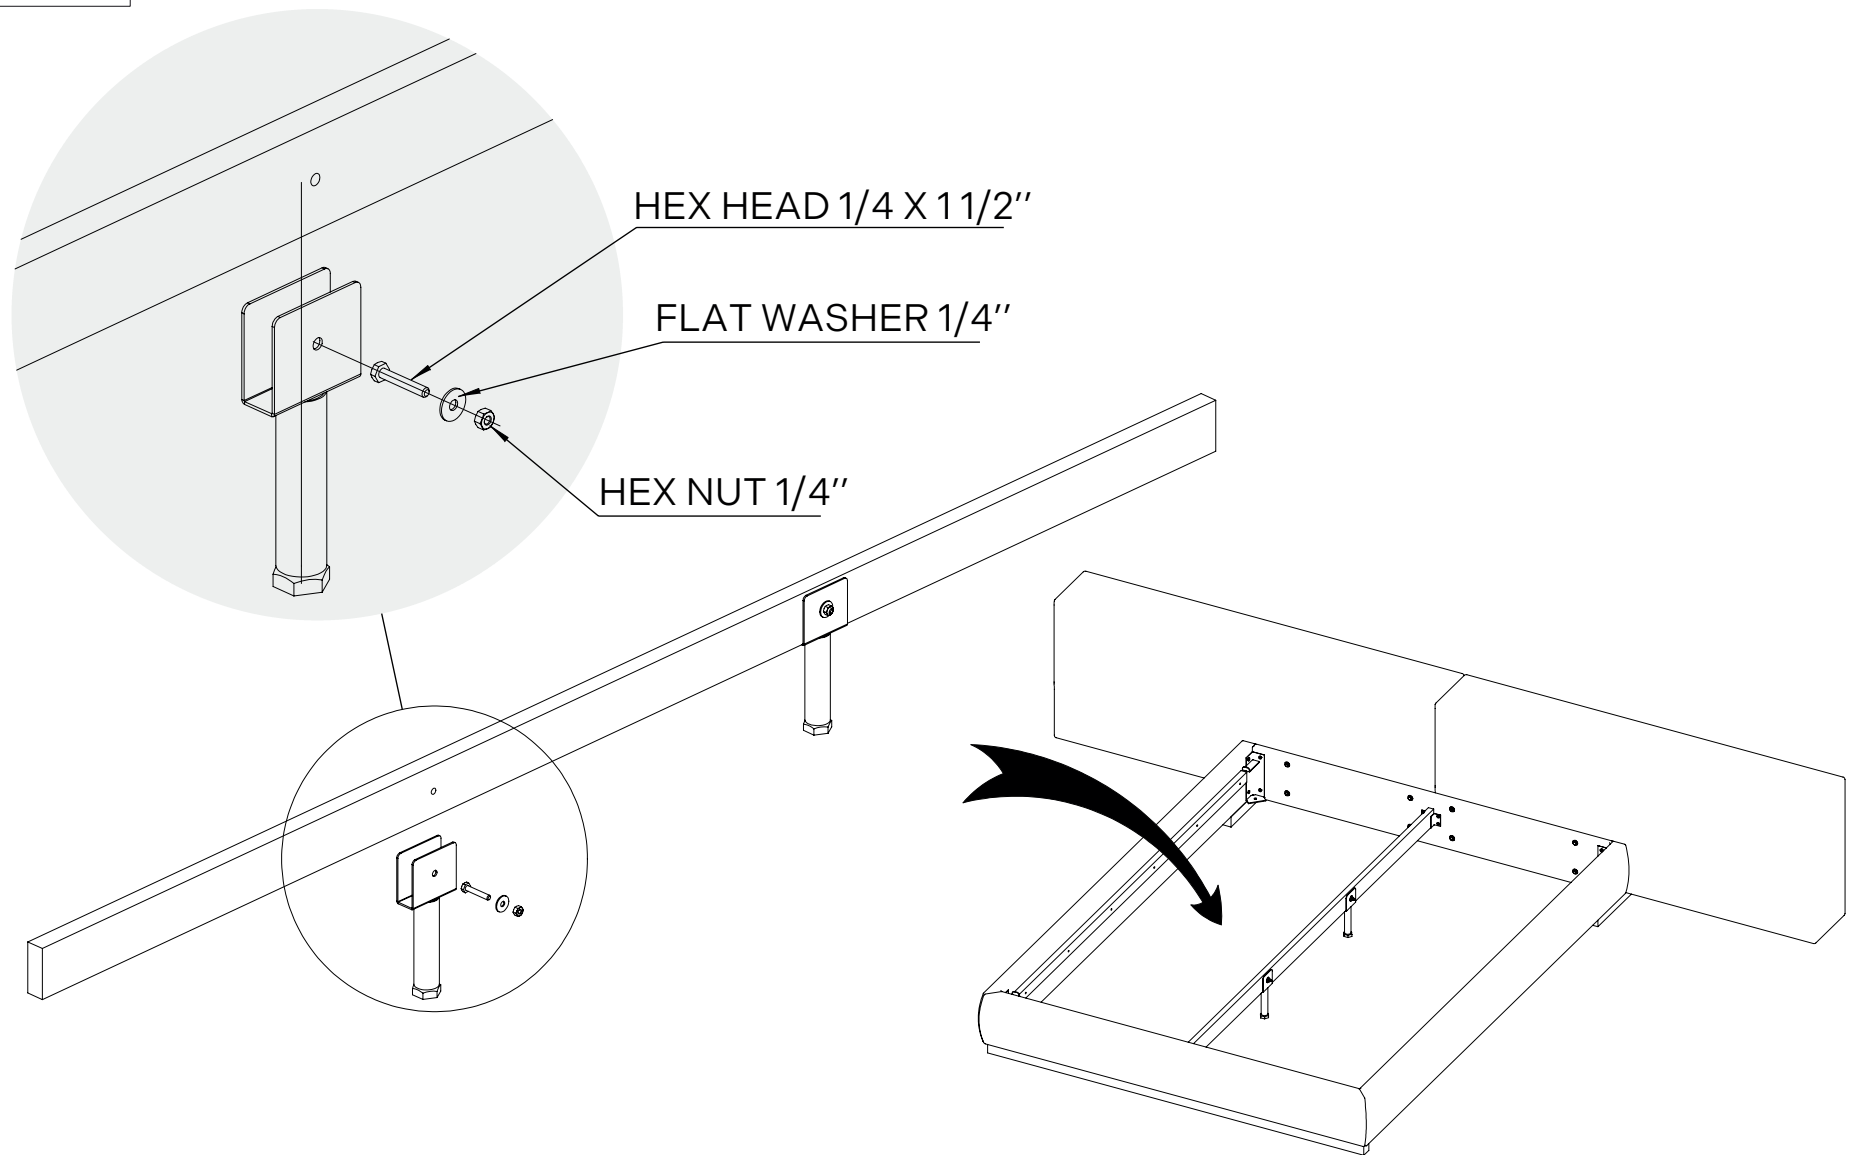

MODLOFT

SPRUCE BED

ASSEMBLY INSTRUCTIONS