



MODLOFT

# SURABAYA BED

ASSEMBLY INSTRUCTIONS

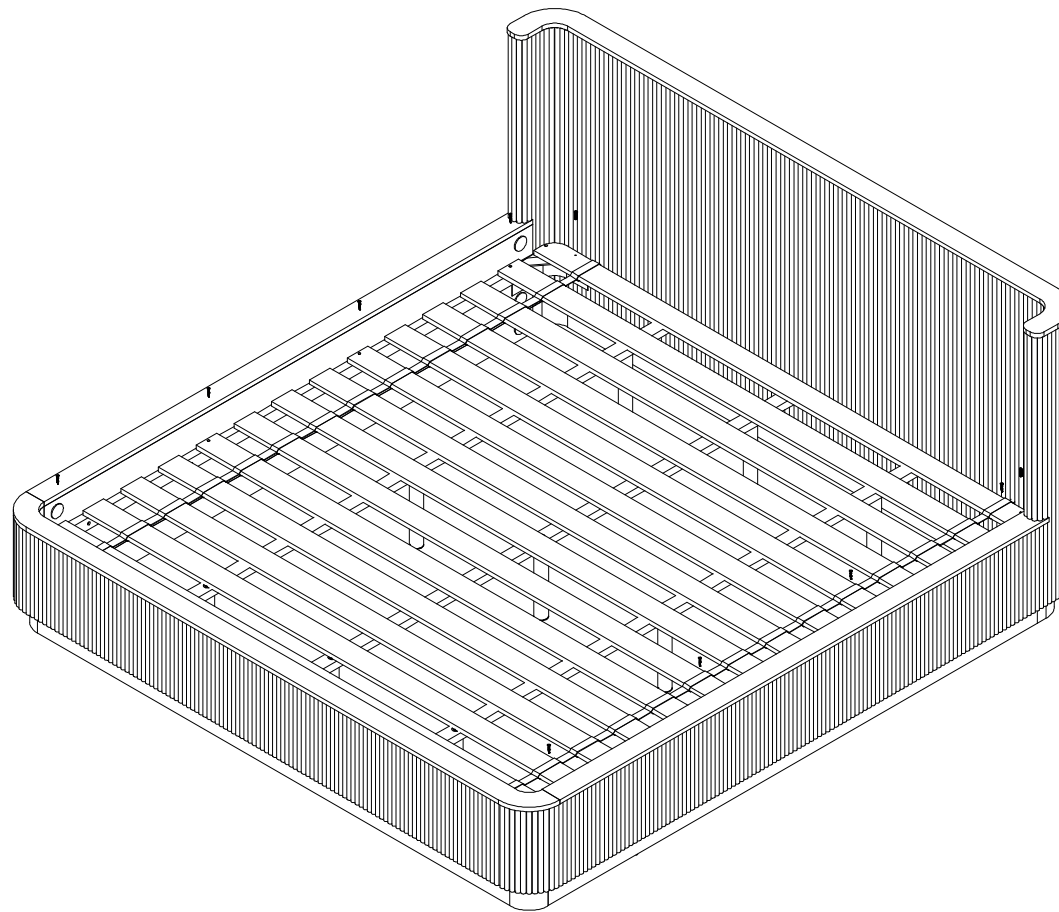


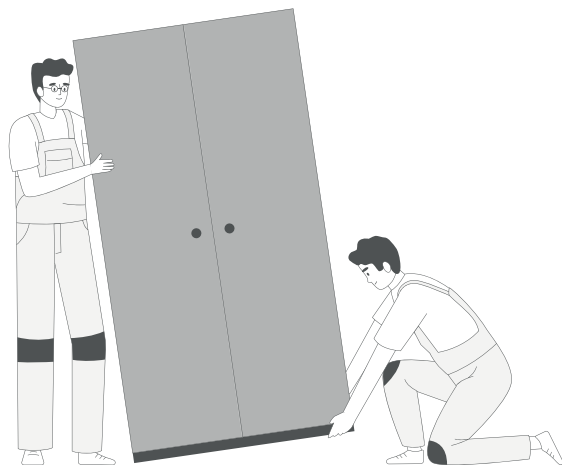

IF POSSIBLE, USE THE HELP  
OF SOMEONE ELSE




REST THE PIECES ON SOFT SURFACES  
TO AVOID DAMAGING THE ITEM

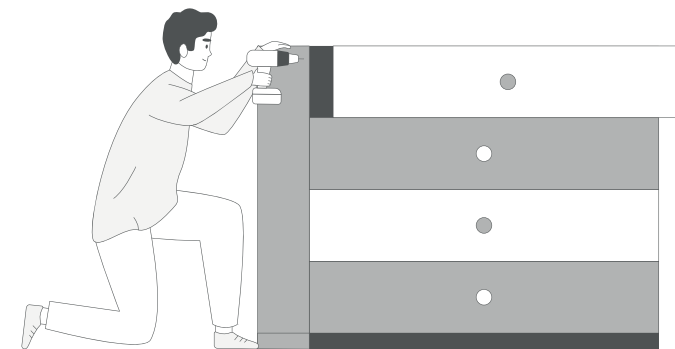

USE THE TOOLS INCLUDED

CONVENTIONS

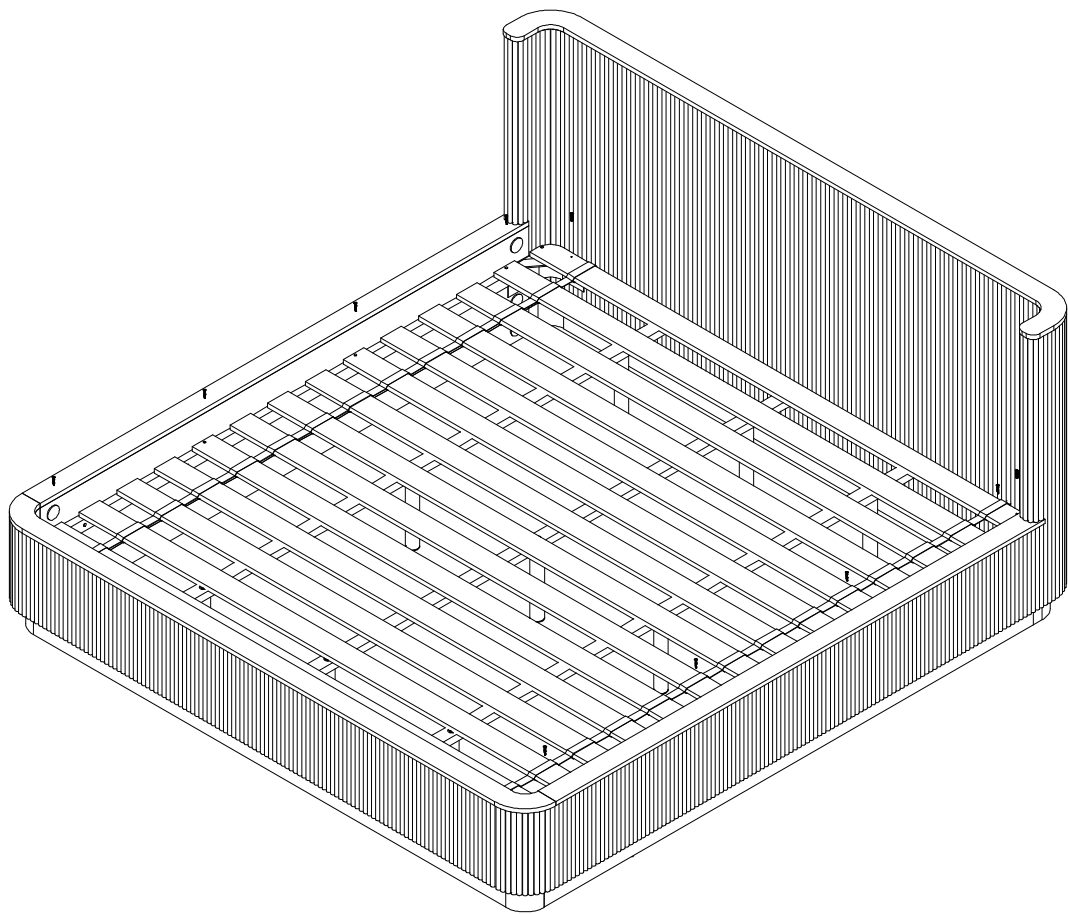

HARDWARE

(H)



M8X25  
Q = 12X  
K = 12X

(A)



BRACKET  
Q = 2X  
K = 2X

(I)



M8X22  
Q = 12X  
K = 12X

(B)



DOUBLE ENDED LACE  
M8X80  
Q = 18X  
K = 18X

(J)




SCREW D4X25  
Q = 6X  
K = 6X

(C)



NUT M8  
Q = 12X  
K = 12X

(K)




LID  
Q = 4X  
K = 4X

(D)



SEMICIRCLE  
Q = 12X  
K = 12X

(L)



LID  
Q = 8X  
K = 8X

(E)




M4X26  
Q = 2X  
K = 2X

TOOL


(F)



(G)




*\*Please note that the quantities for piece number 5 change for both Queen and King.*

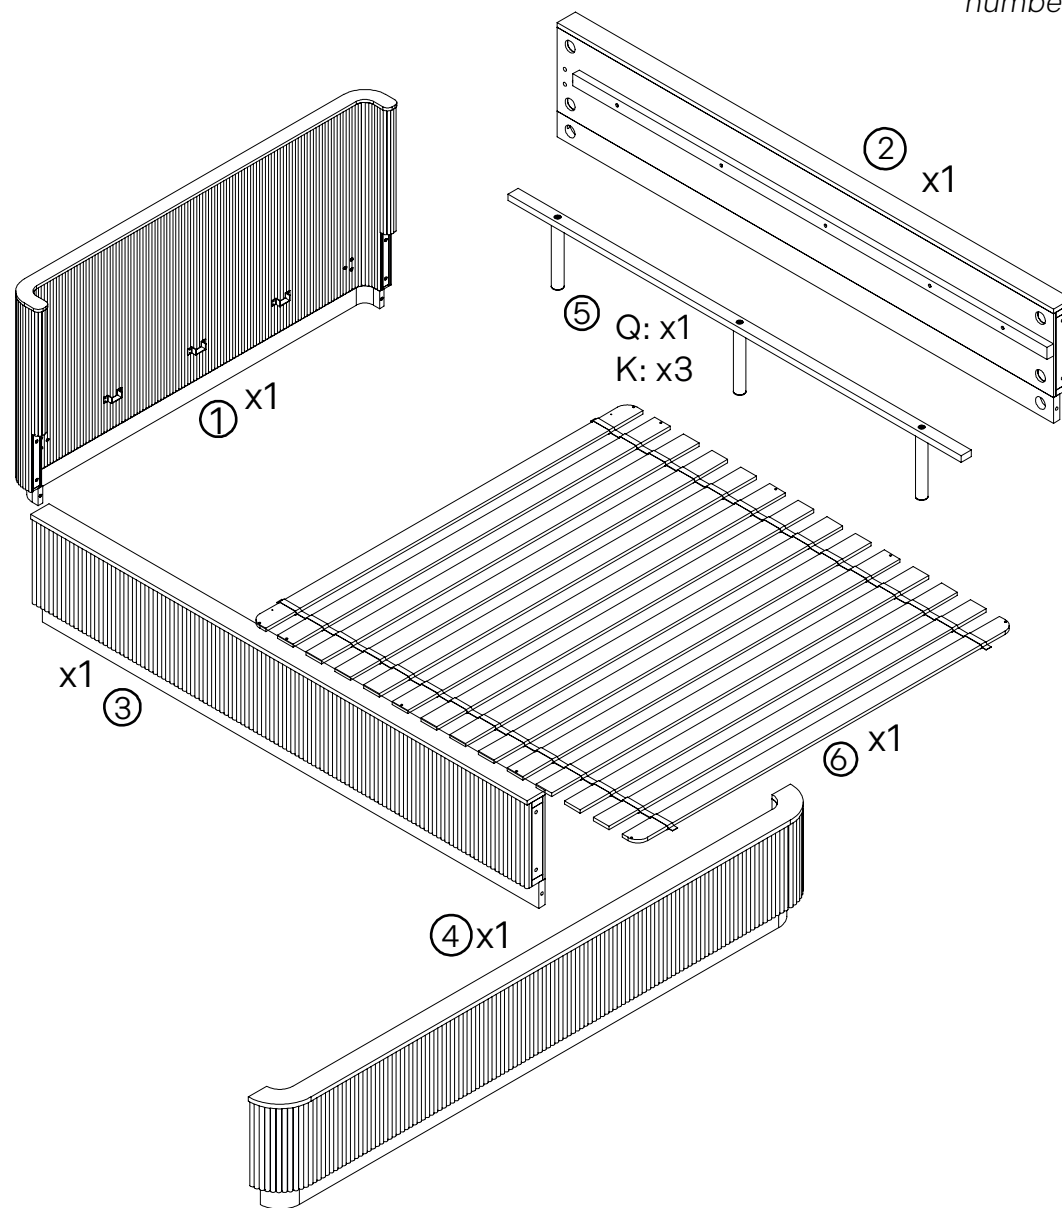


## STEP 1

*\*Please note that the quantities for piece number 5 change for both Queen and King.*

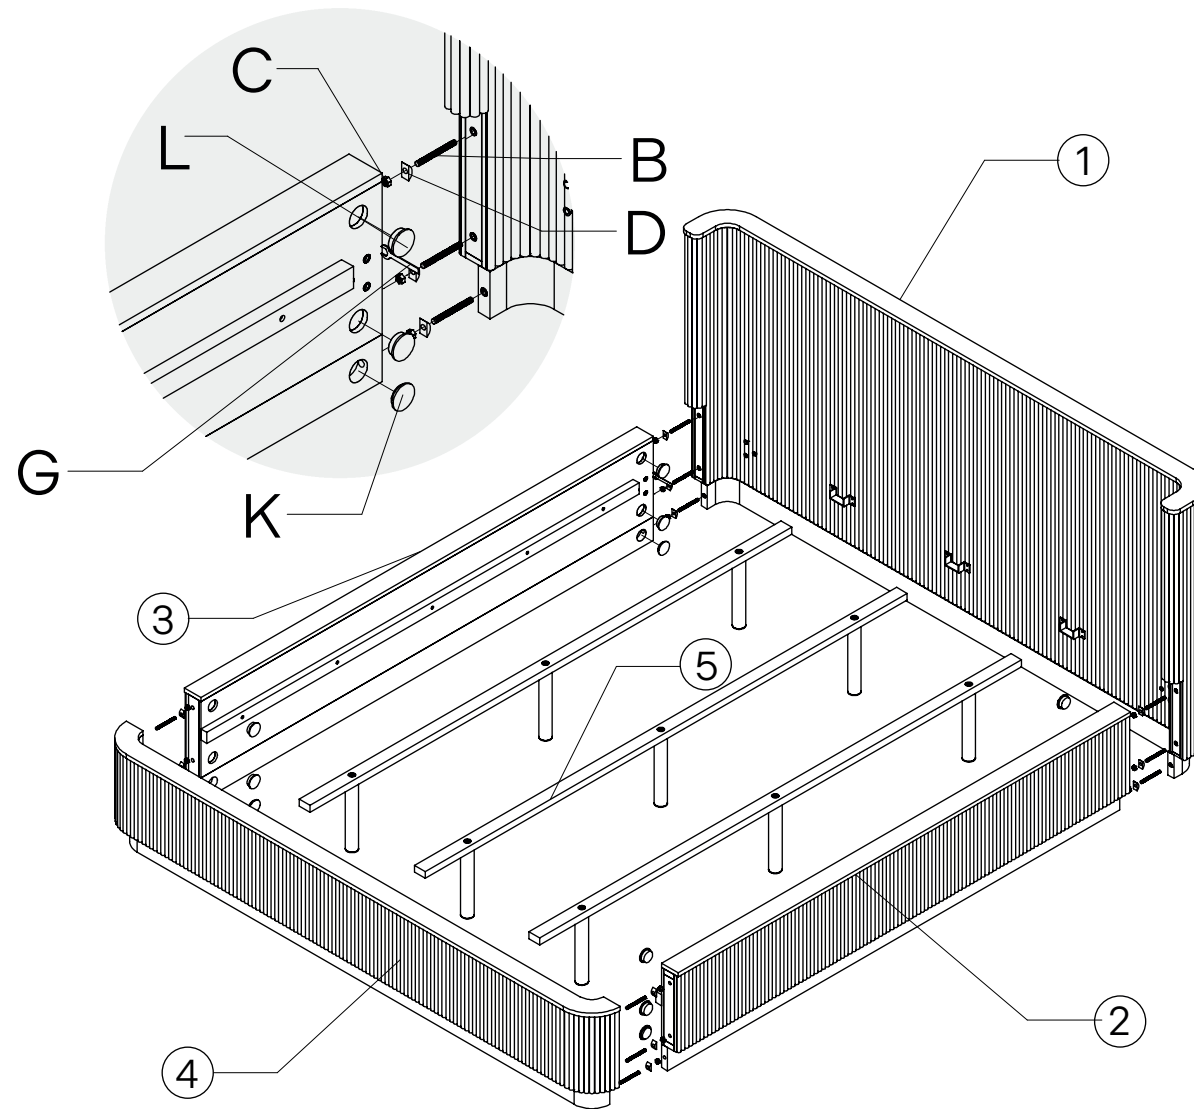


## STEP 2

*\*Please note that the quantities for piece number 5 change for both Queen and King.*

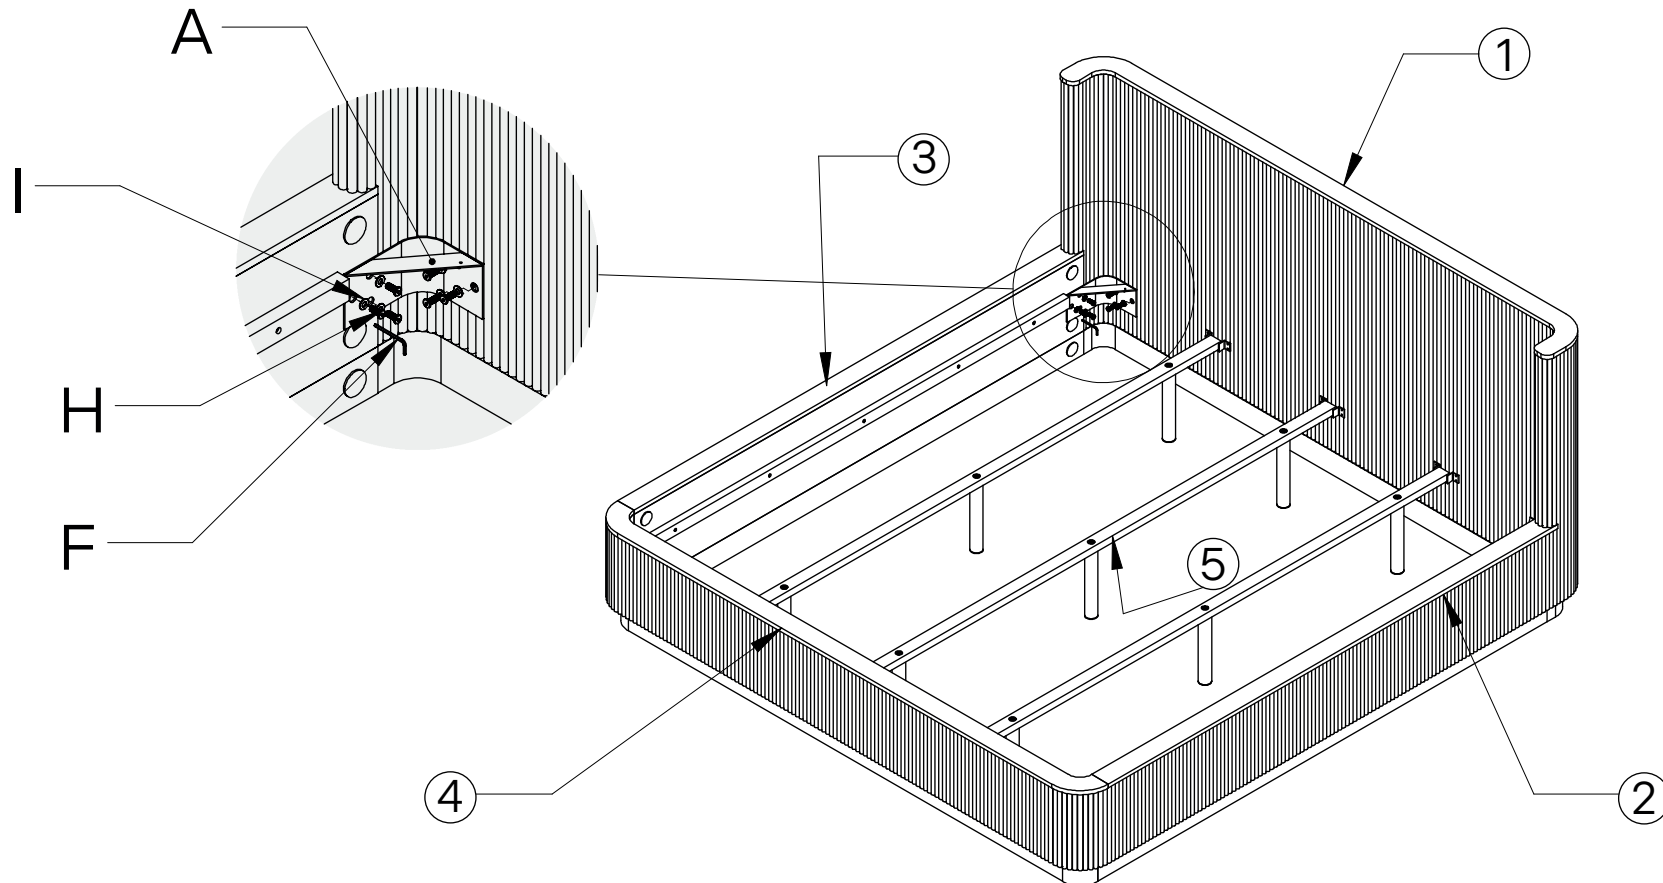

## STEP 3

*\*Please note that the quantities for piece number 5 change for both Queen and King.*

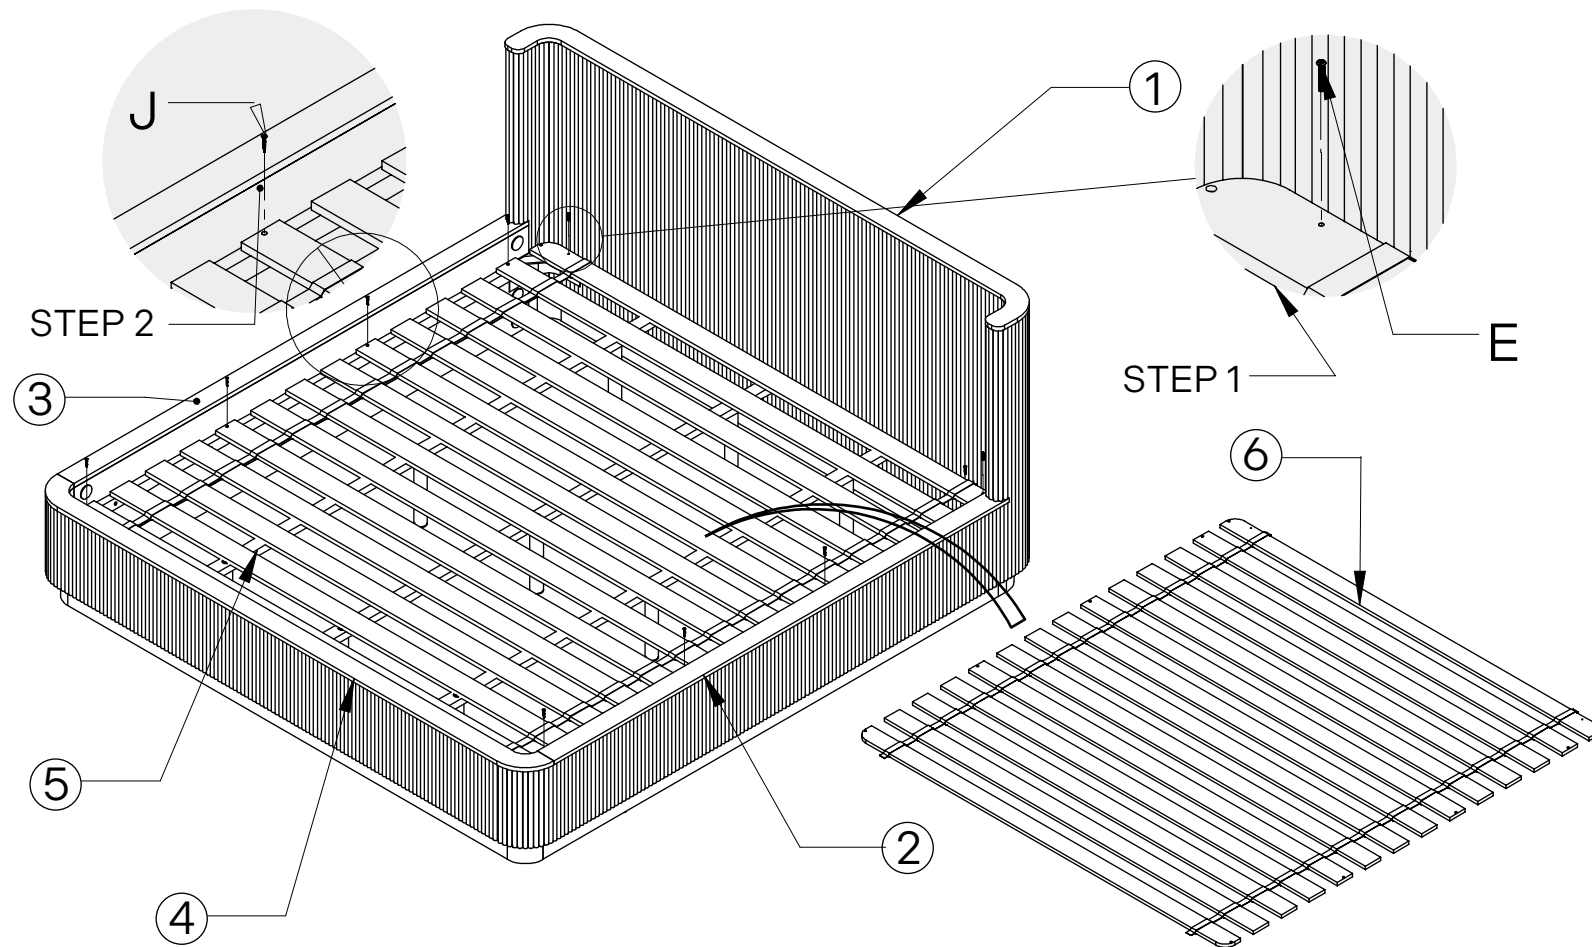

MODLOFT

# SURABAYA BED

ASSEMBLY INSTRUCTIONS