

MODLOFT


SURABAYA EXTENDED BED

ASSEMBLY INSTRUCTIONS

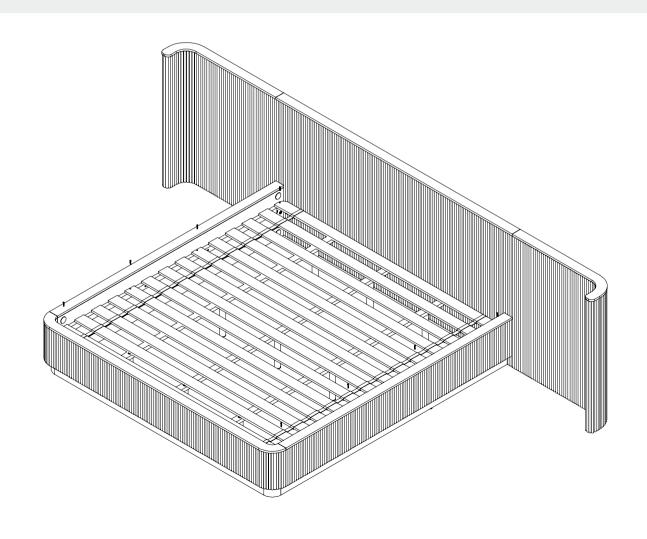

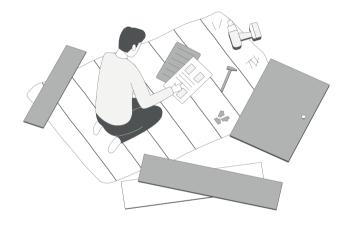



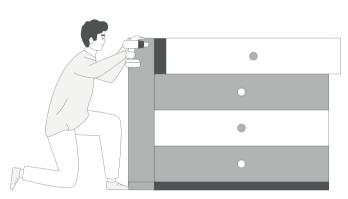


OF SOMEONE ELSE

REST THE PIECES ON SOFT SURFACES
TO AVOID DAMAGING THE ITEM

USE THE TOOLS INCLUDED

CONVENTIONS

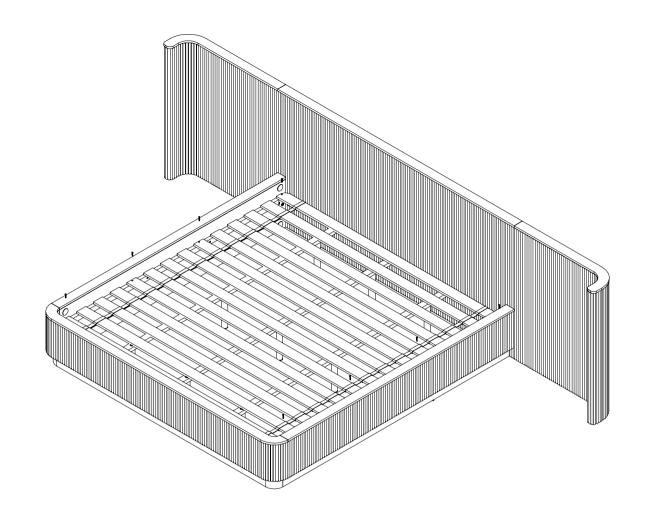







M8X25 Q = 12X K = 12X





BRACKET Q = 2X K = 2X





M8X22

Q =12X


K =12X





 \bigcirc











NUT M8

Q = 18X

K = 18X





LID

Q = 4X

K = 4X












 \bigcirc

M4X26

Q = 2X


K = 2X











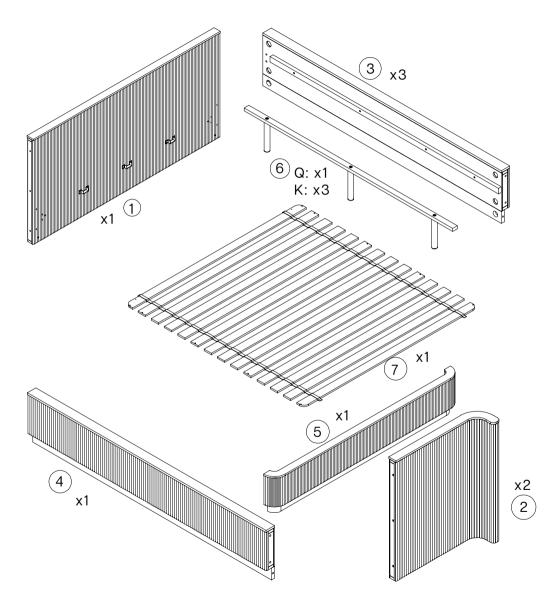



D STEP1 В

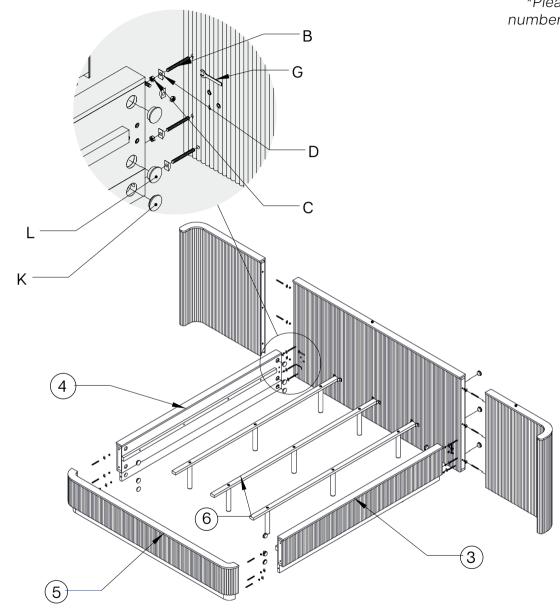


*Please note that the quantities for piece number 6 change for both Queen and King.

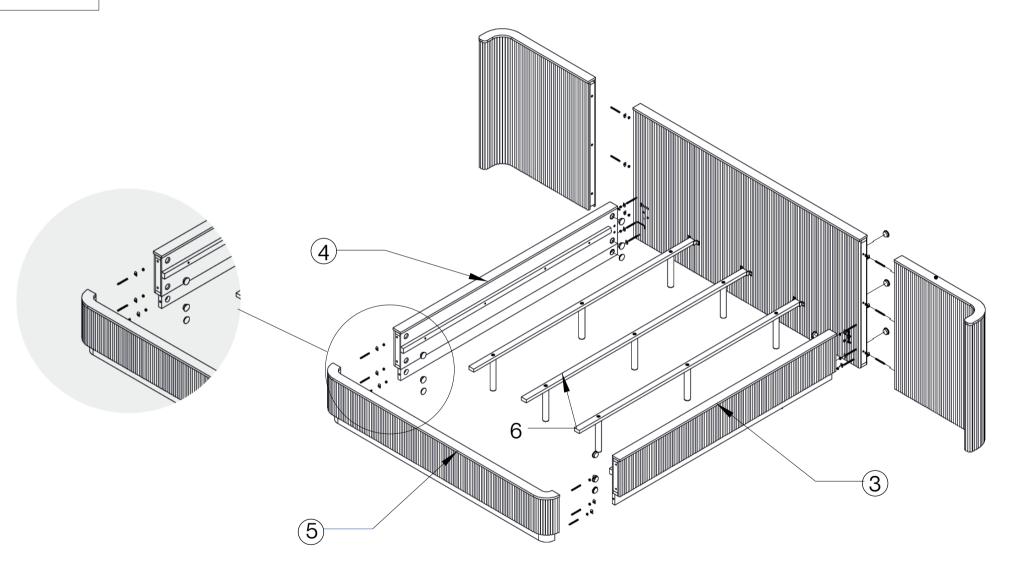

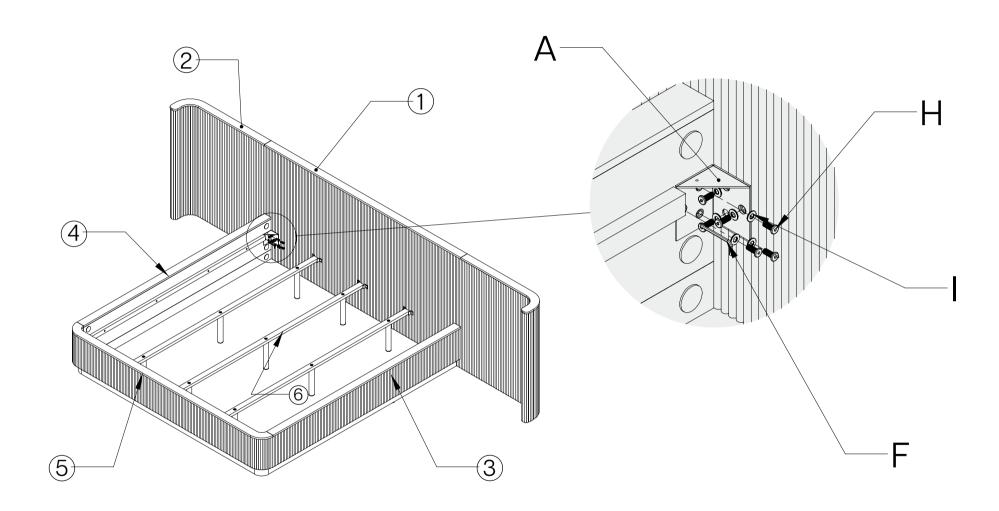

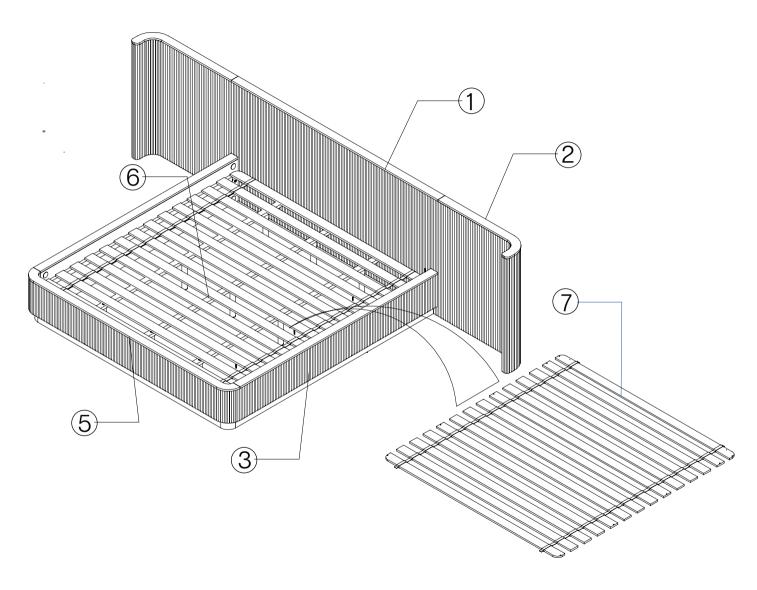

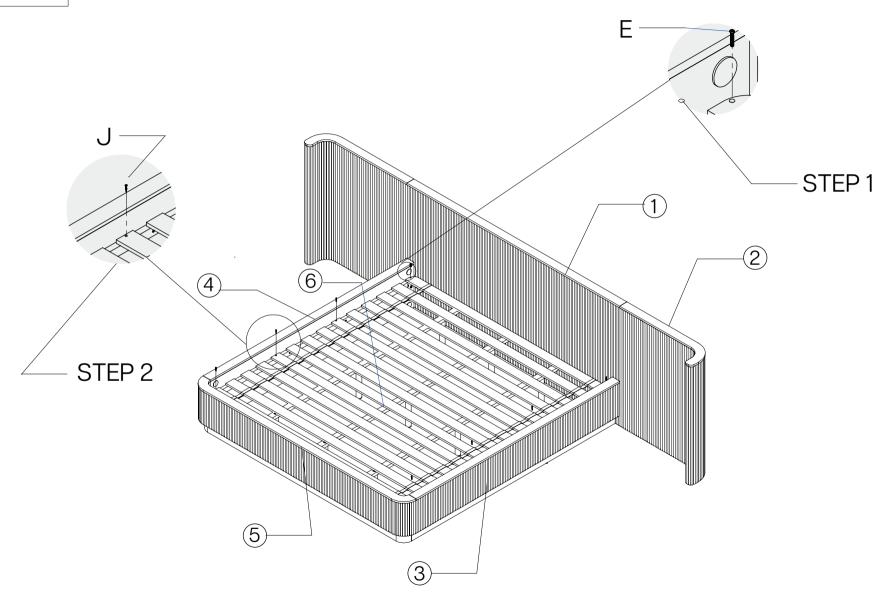

MODLOFT

SURABAYA EXTENDED BED

ASSEMBLY INSTRUCTIONS