



MODLOFT

WORTH BED

ASSEMBLY INSTRUCTIONS

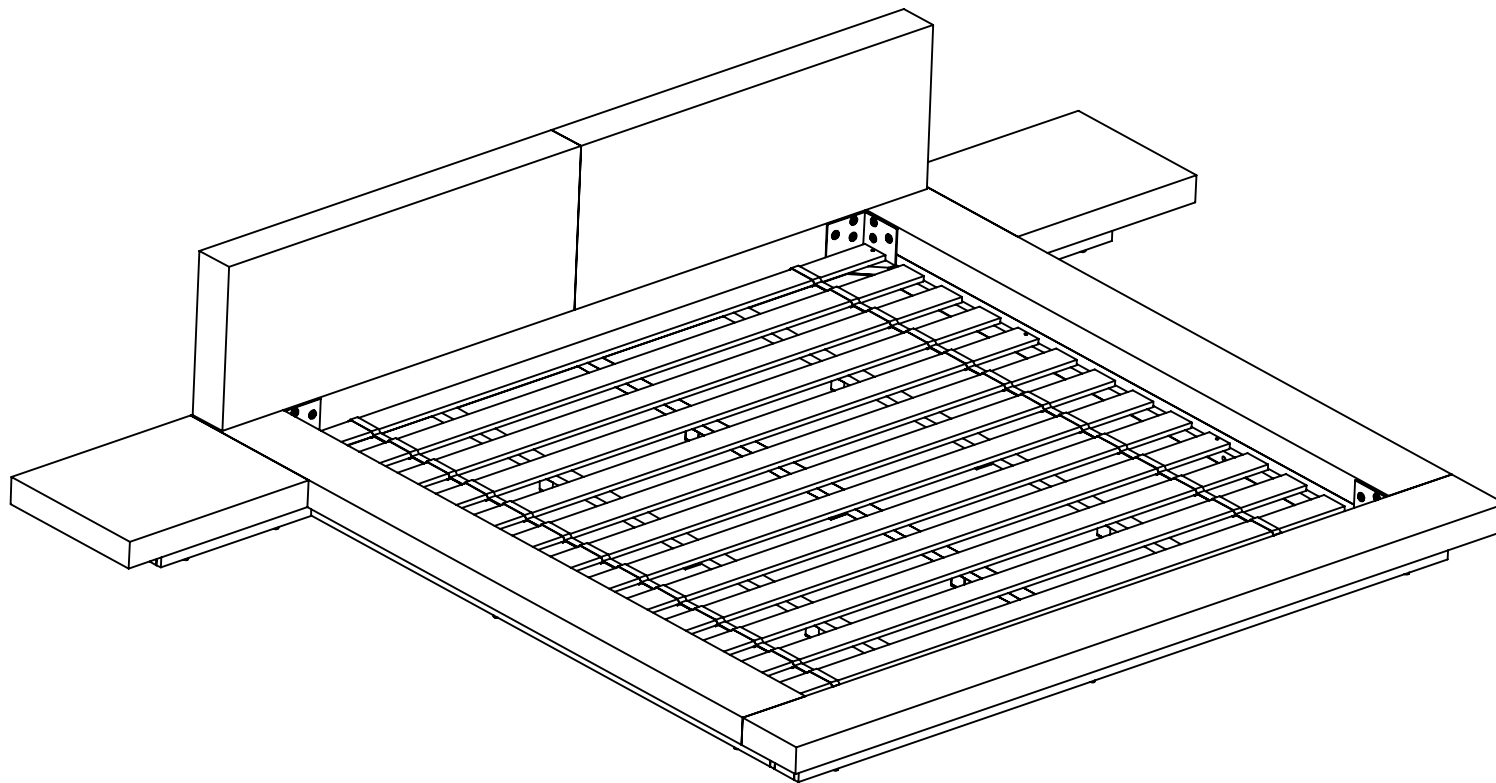


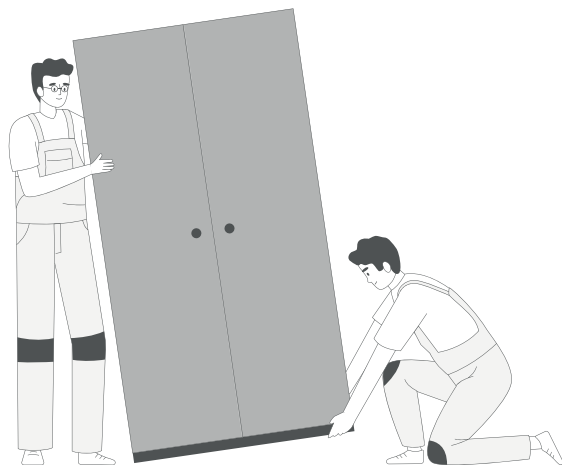

IF POSSIBLE, USE THE HELP
OF SOMEONE ELSE




REST THE PIECES ON SOFT SURFACES
TO AVOID DAMAGING THE ITEM

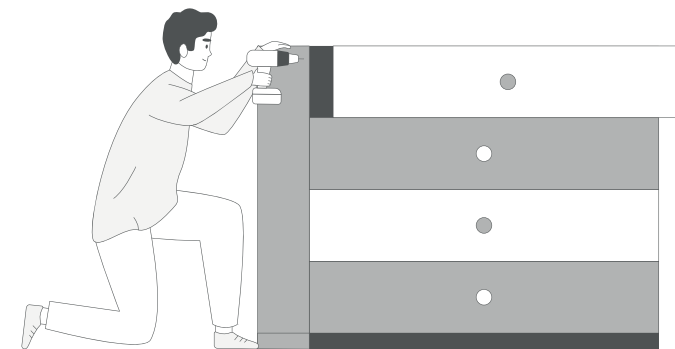





USE THE TOOLS INCLUDED


CONVENTIONS

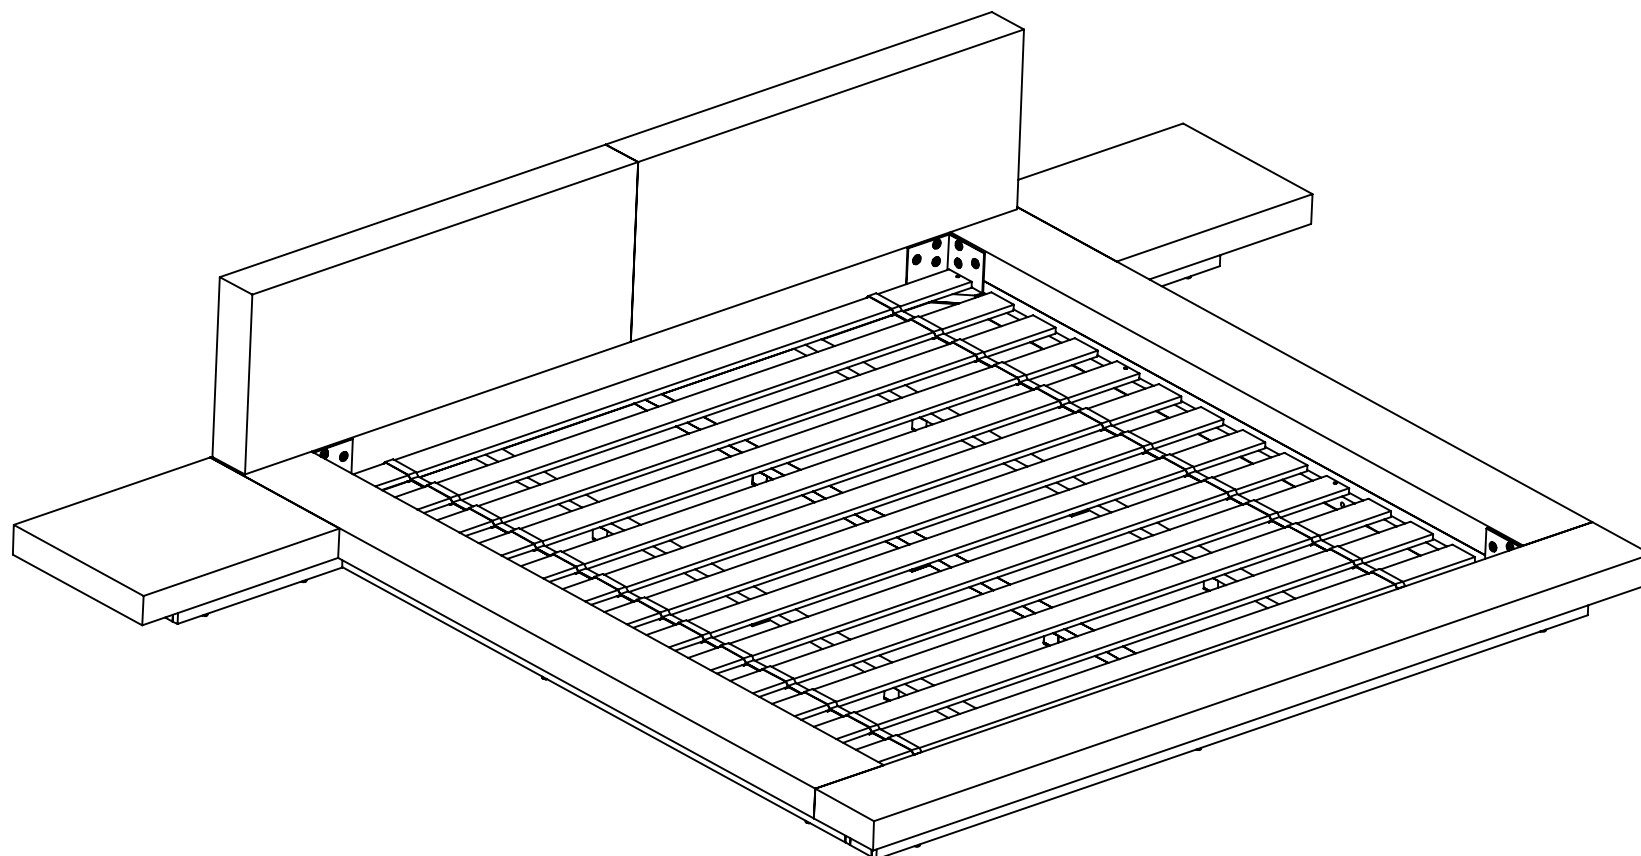

HARDWARE


- | | | | |
|---|---|---|---|
| ⑨ | ⑩ | ⑪ | ⑫ |
|  |  |  |  |
| BRACKET Q = 2X K = 4X | M8X25 Q = 24X K = 24X | M8 Ø 22X2 Q = 24X K = 24X | SCRREW D4X25 Q = 8X K = 8X |

TOOL

- | |
|--|
| ⑬ |
|  |
| M5 1X |


PARTS

**Please note that the quantities for piece number 7 change for both Queen and King.*

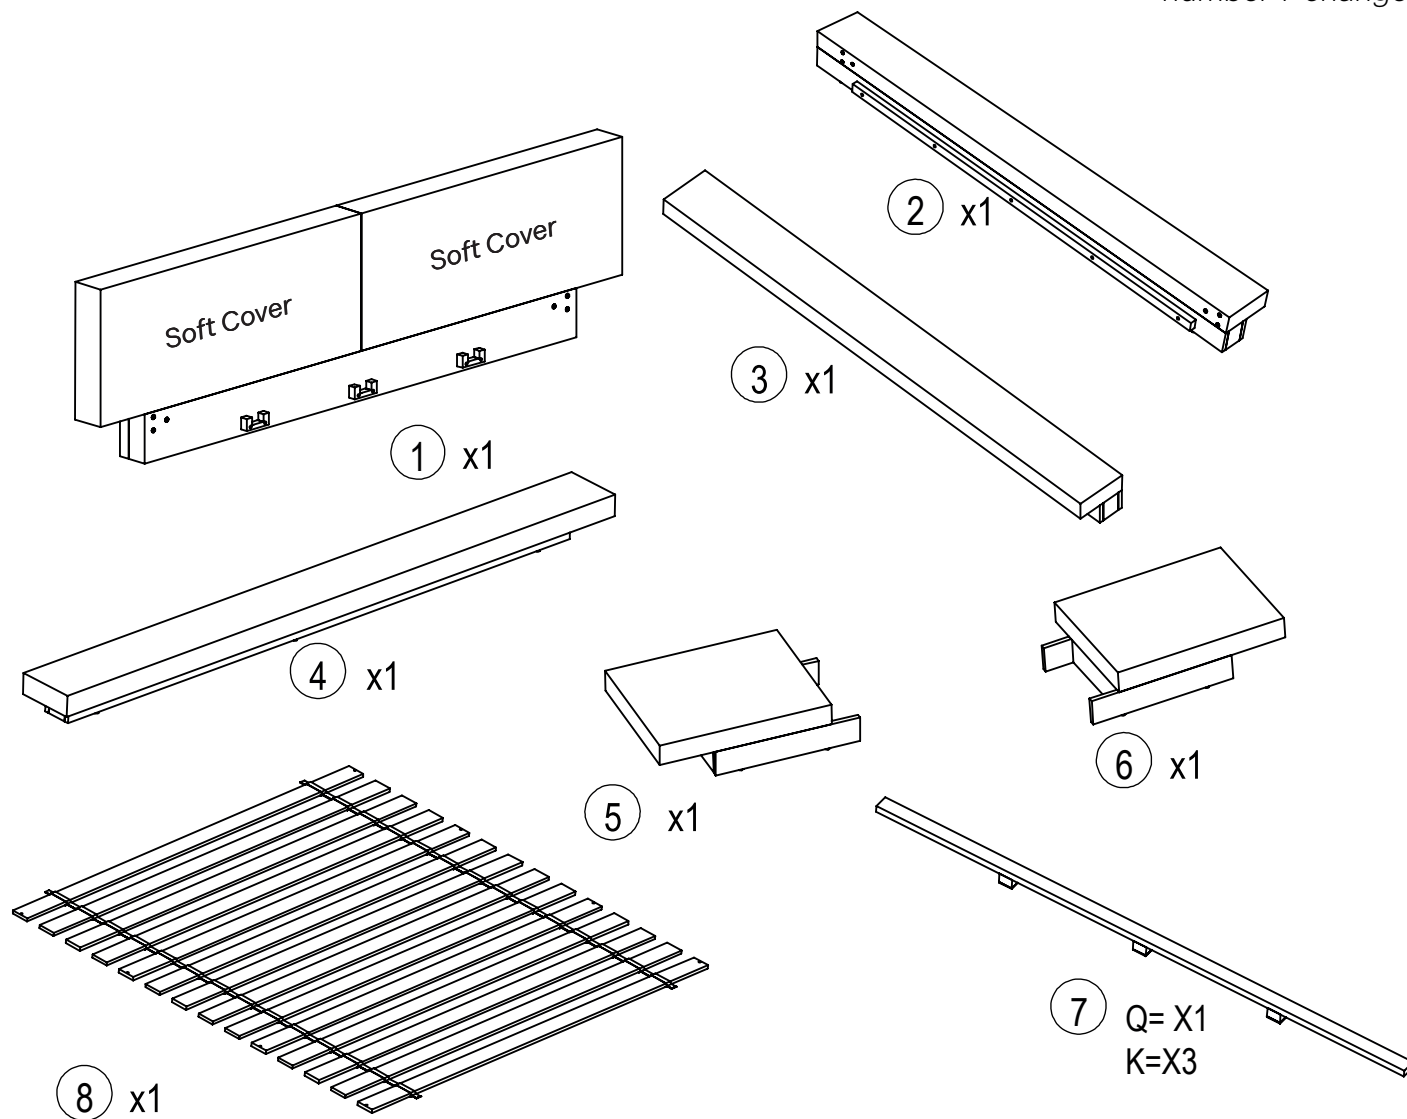


STEP 1

**Please note that the quantities for piece number 7 change for both Queen and King.*

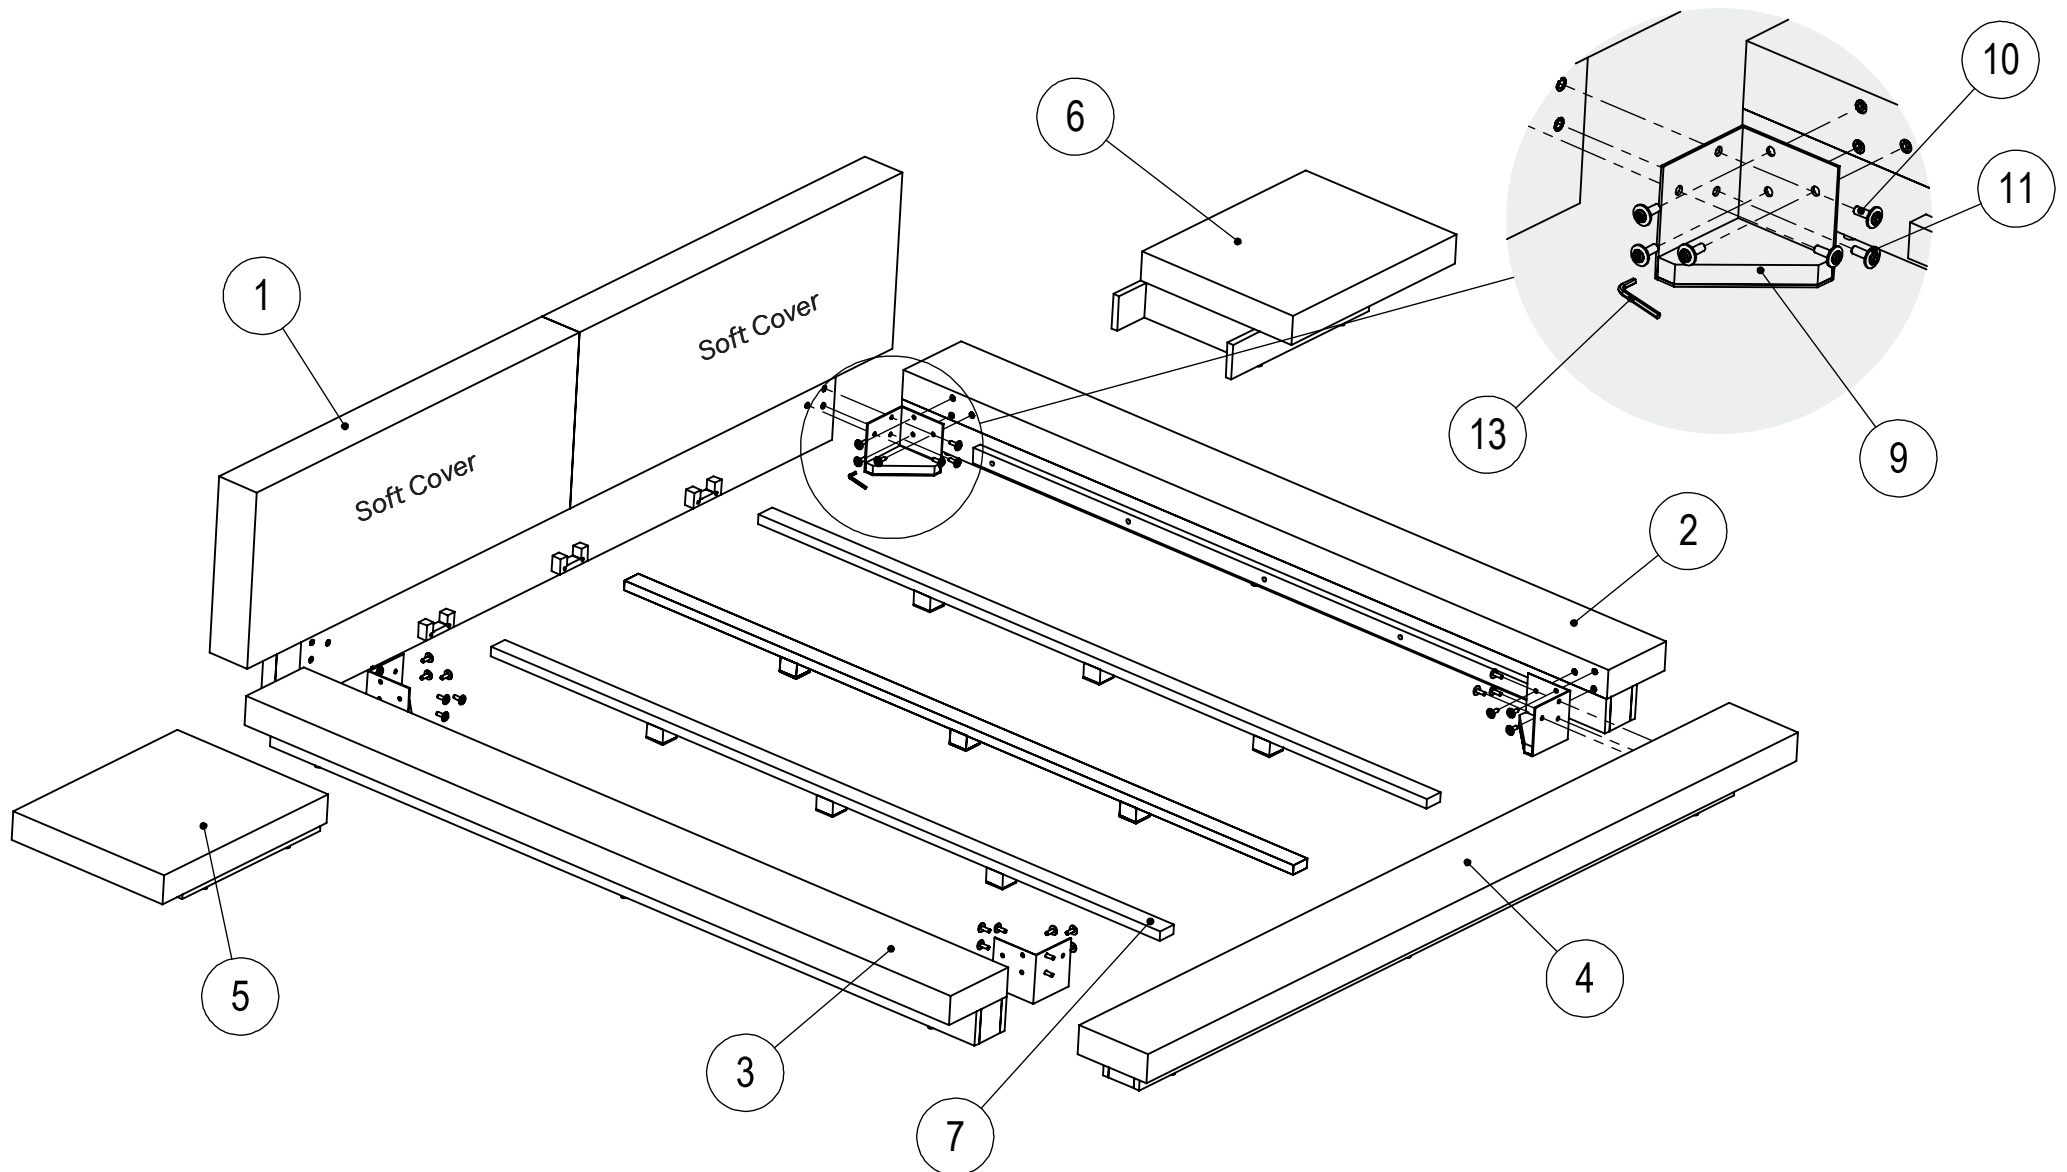


STEP 2

**Please note that the quantities for piece number 7 change for both Queen and King.*

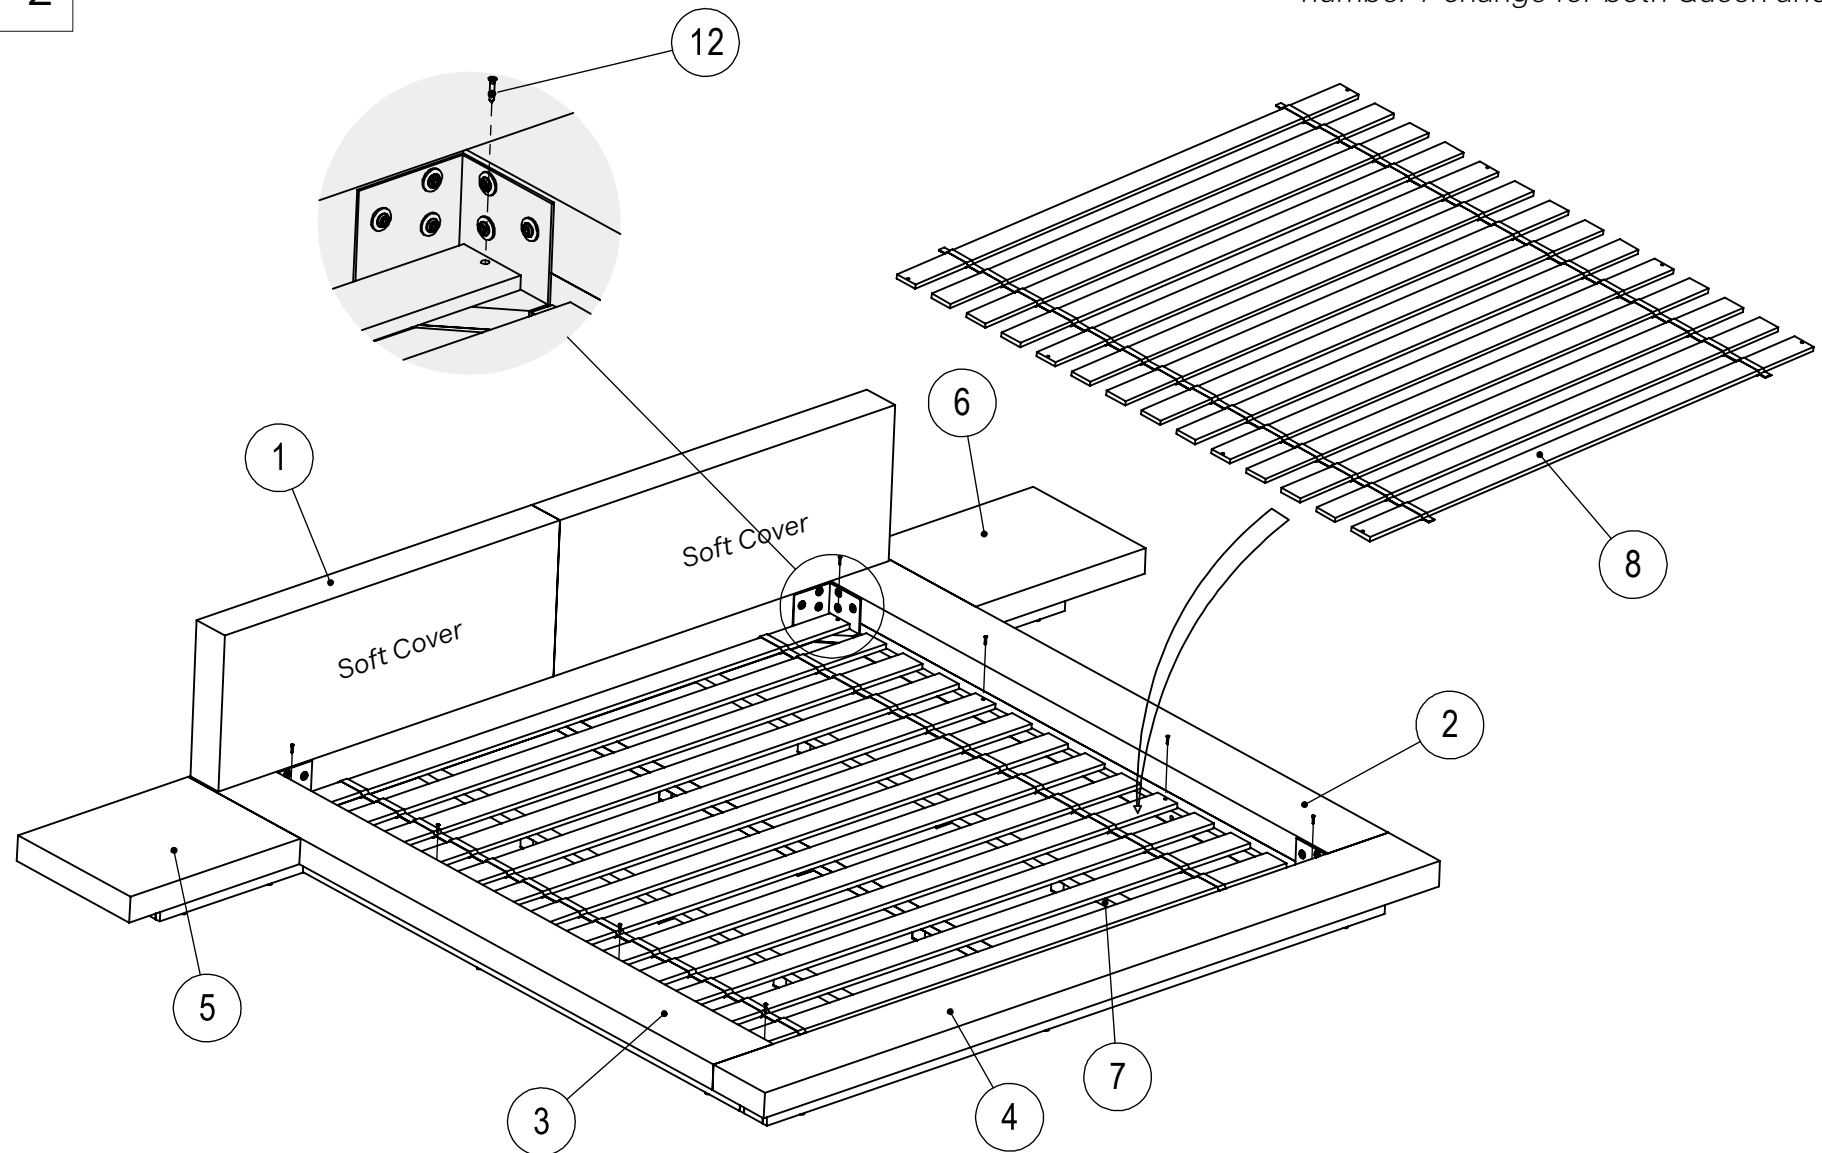

STEP 3

**Please note that the quantities for piece number 7 change for both Queen and King.*

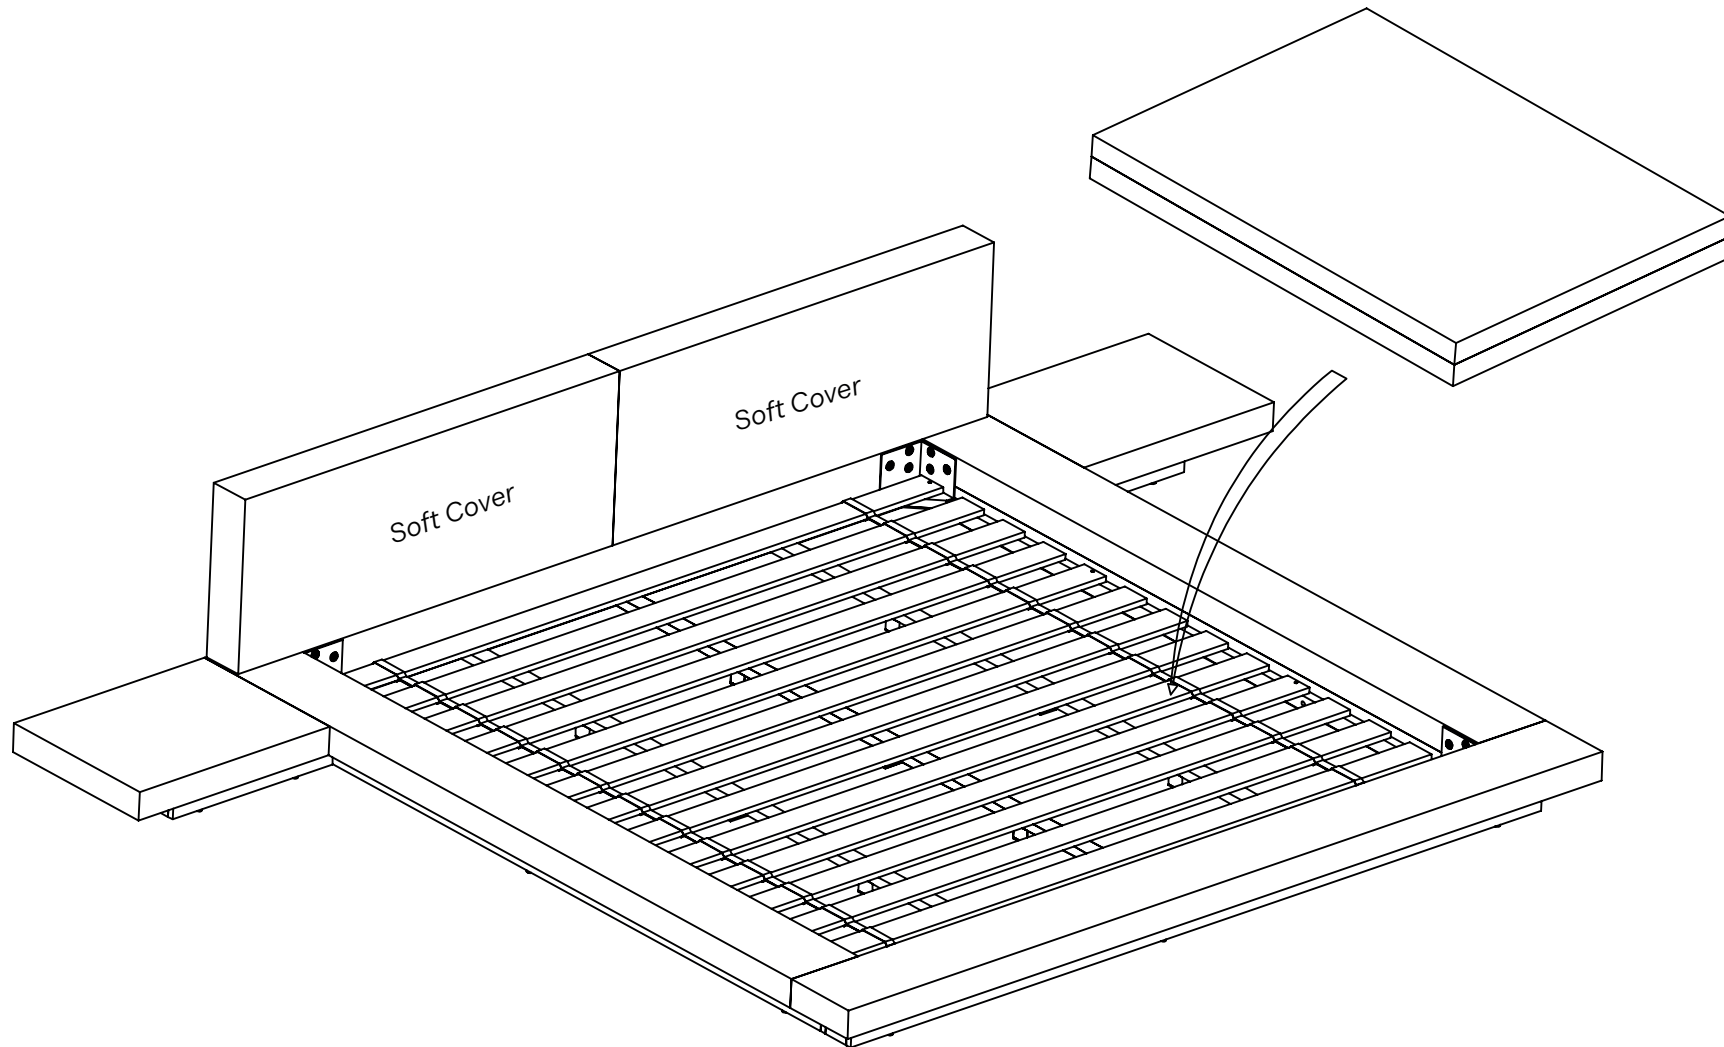

MODLOFT

WORTH BED

ASSEMBLY INSTRUCTIONS