


KIT ASSEMBLY INSTRUCTIONS

Double DIN Mount Applications


NOTE: Remove shaded pocket support Tabs on left and right bracket.

1. Cut and remove center rib from main frame and file edges smooth.
2. Attach the left and right side brackets to the main frame. (See figure C below).
3. Attach climate control module bracket and secure using the factory screws.
4. Attach (1) ISO Spacer to the inside of upper section on both Left & Right mounting brackets as shown in Fig. A. (See note #2 below).
5. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or hardware included with kit.
6. Slide radio component forward or backward for desired look and tighten screws (optional).
7. Attach a rear support bracket to the rear of the radio components and adjust as needed to allow rear support bracket to rest in the sub-dash (optional).

NOTE: #1 - ISO trim ring (DITR980) must be used in place of after-market radio's trim rings. For ISO mount applications, mount after-market radio components to side brackets using screws provided with radio when possible or hardware included with kit.
#2 - Spacers must read upright (This side up for DBL ISO install).

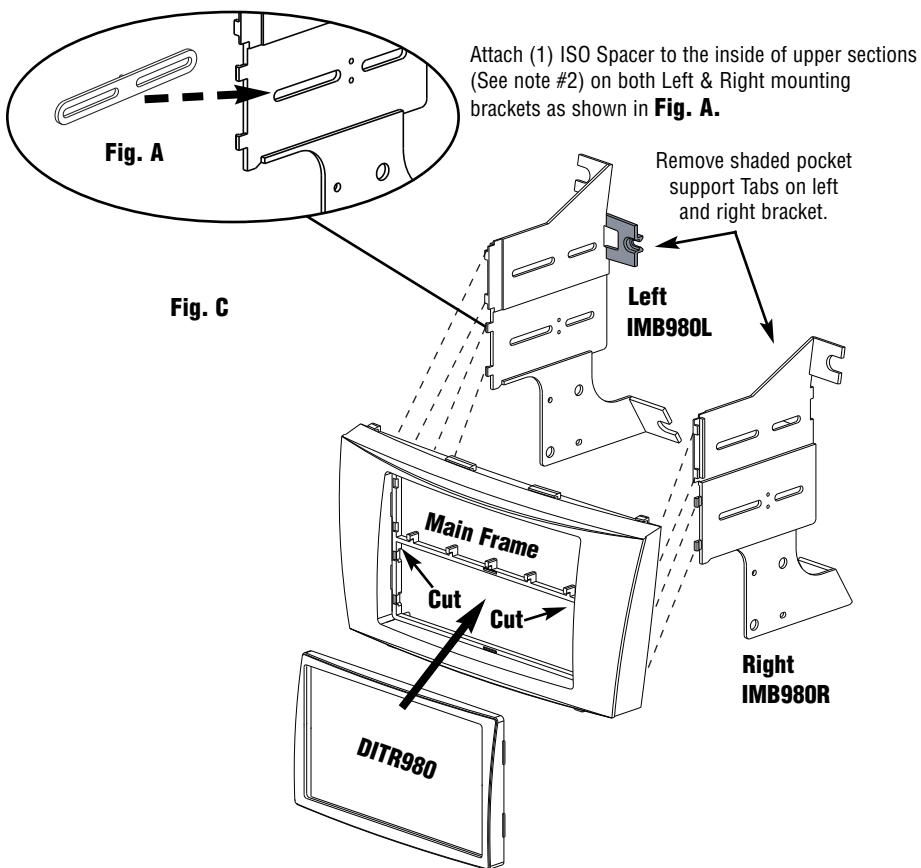

**American
International**
Car Stereo Installation Kits & Accessories

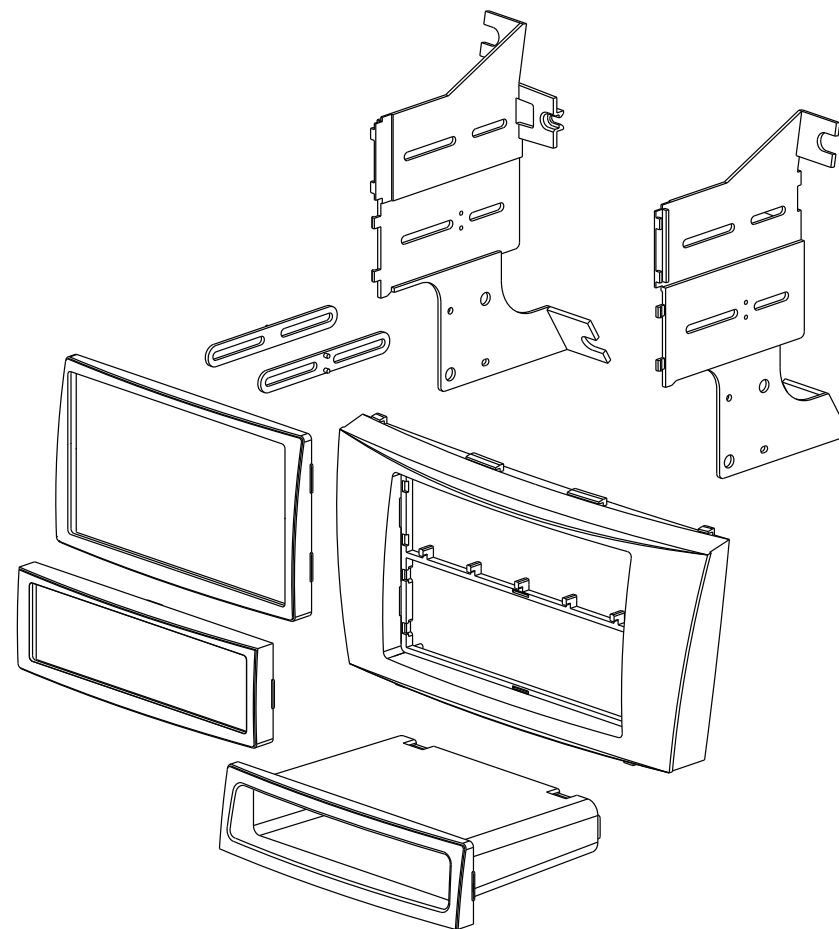

TOYK980 Mounting Kit

VEHICLE APPLICATIONS

Toyota
2007-11 CAMRY

CUSTOMER HELP LINE
USA 800-323-4329 • Canada 800-245-8777

iTOYK980

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS


1. Carefully pry the vent assembly above the radio forward to release, disconnect the attached harness and remove vent assembly.
2. Remove the (2) 10mm bolts securing the top radio mounting brackets to the sub-dash.
3. Unclip and remove the individual side trims from each side of the center stack pocket.
4. Unscrew and remove the shifter knob.
5. Lift upward on the shifter knob trim and remove.
6. Open the center console arm rest.
7. Lift upward and remove the top section of the center console.
8. Remove the (2) Phillips screws securing the center stack pocket, pull pocket forward and disconnect all attached harnesses and remove pocket.
9. Remove the (2) 10mm bolts securing the bottom Radio/Climate control mounting brackets.
10. Carefully pull Radio/Climate control assembly forward, disconnect the wire harnesses and antenna lead and remove assembly.

** Remove the (2) phillips screws securing the Climate control module to the factory mounting brackets, and remove the module.

KIT ASSEMBLY INSTRUCTIONS

1. Remove the factory radio (upper side) mounting brackets, as shown in Fig. D below, and attach to the rear side of the TOYK980 main bezel using the screws from the factory radio.


Fig. D

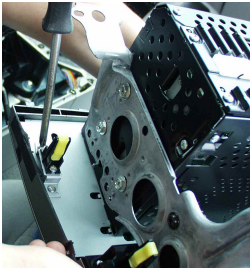

Single DIN Mount Applications

1. Attach the left and right side brackets to the main bracket. See Figure B opposite page.
2. Insert pocket (part # POC980) into upper section of the main frame.
3. Attach left and right side brackets to the rear of the pocket using screws supplied.
4. Attach climate control module bracket and secure using the factory screws.
5. Insert DIN sleeve from your new radio into the lower section of the installation kit.
6. Depress the tabs from inside the sleeves opening upward, outward, and downward to secure sleeve to the installation kit.
7. Install radio into sleeve and lock into place.
8. Attach a rear support bracket to the rear of the new radio and adjust as necessary to attach to the rear support stud located on the back of the pocket using the small phillips screw supplied with kit (optional).

NOTE: ISO trim ring (ITR980) may be used in place of after-market radio's removable trim ring.

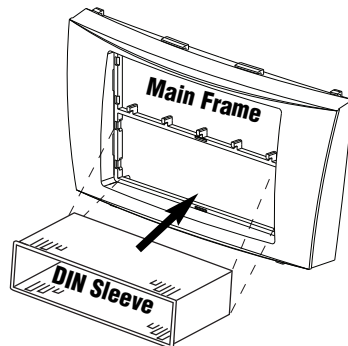

KIT ASSEMBLY INSTRUCTIONS

Single ISO Mount Applications

1. Attach the left and right side brackets to the main bracket. See Figure B.
2. Insert pocket (part # POC980) into upper section of the main frame.
3. Attach left and right side brackets to the rear of the pocket using screws supplied.
4. Attach climate control module bracket and secure using the factory screws.
5. Attach (1) ISO Spacer to the inside of lower section on both Left & Right mounting brackets as shown in Fig. A. (See note #2 below)
6. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or hardware included with kit.
7. Slide radio component forward or backward for desired look and tighten screws.
8. Attach a rear support bracket to the rear of the new radio and adjust as necessary to attach to the rear support stud located on the back of the pocket using the small phillips screw supplied with kit (optional).

NOTE: #1 - ISO trim ring (ITR980) may be used in place of after-market radio's removable trim ring.
#2 - Spacers must read upright (This side up for single ISO install).

