



For information about other American International automotive accessories visit our website at:

<http://www.americaninternational.net>

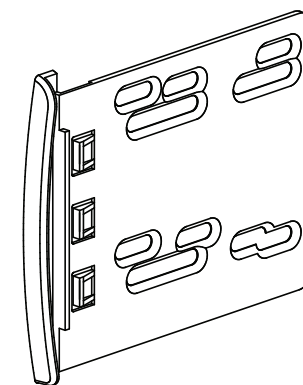

**American
International**
Car Stereo Installation Kits & Accessories

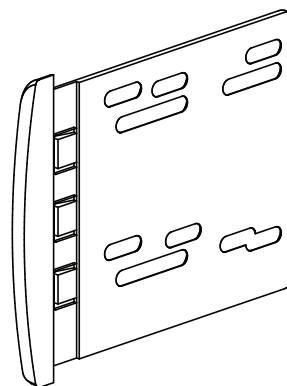

FMK566 Mounting Kit



American International

Automotive Products Division

1040 Avenida Acaso • Camarillo, CA 93012, U.S.A.

USA Sales (800) 336-6500

Canada Sales (888) 922-3006 • USA Fax (805) 388-7950

VEHICLE APPLICATIONS

Ford

2000-04 FOCUS

Mercury

1998-00 COUGAR

2001-02 COUGAR (w/curved face radio)

CUSTOMER HELP LINE

USA 800-323-4329 • Canada 800-245-8777

iFMK566

RADIO REMOVAL INSTRUCTIONS


1. (To remove the factory brackets, you will need 1 pair of FORD/BLAUPUNKT Radio Removal Keys. Part# URT460).
2. Disconnect all harnesses and remove radio antenna lead.

RADIO MOUNTING INSTRUCTIONS

1. Attach the FMK566 L bracket to the left side of the double DIN radio.
2. Attach the FMK566 R bracket to the right side of the double DIN radio.
3. Slide radio forward or backward for desired look and tighten screws..
4. We recommend back bracing your new radio with a back strap.


WARNING NOTE: You must completely wire and test the radio and all features and functions prior to installing the assembled kit and radio into the dash panel opening.

The kit is designed to lock into the modified radio opening of these vehicle's, it is extremely tight and may require some force to lock the assembled kit with radio into the dash opening after the dash modification is completed. Once the kit and radio are assembled and installed into the dash opening, removal will not be very easy.

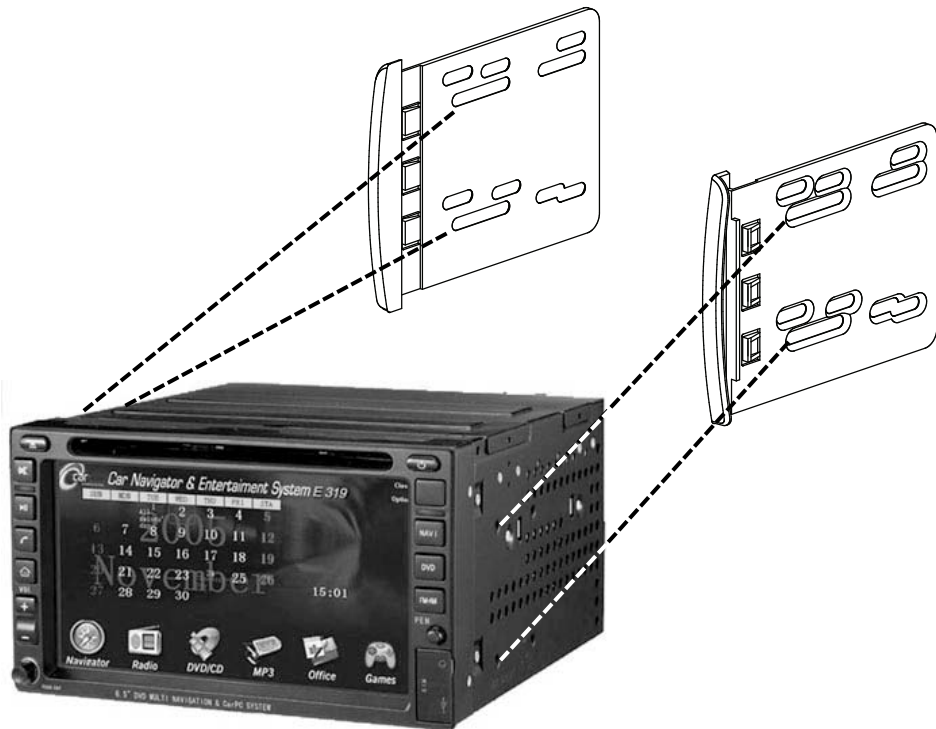

DASH MODIFICATIONS


Step 1.

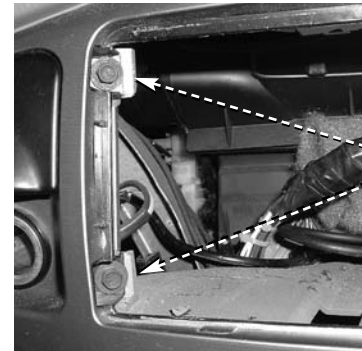

File these 2 subdash parts FLUSH against the screw head.

Step 2.

BEFORE being filed down

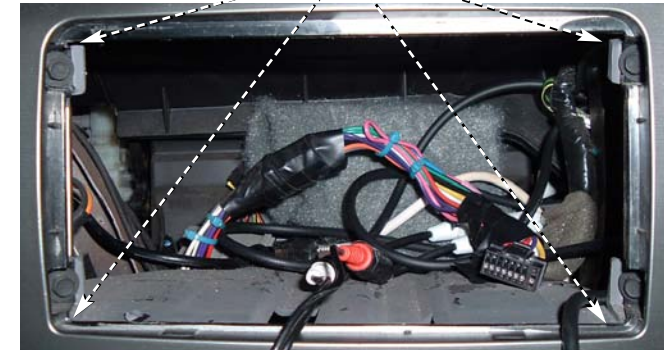

File the dash panels upper & lower edge from the radio opening just enough to allow the chassis of the new double DIN radio to slide thru the opening. Leave approx. 1/4" in each of the 4 corners (See Image Below).

AFTER finished look

Step 3.

