


KIT ASSEMBLY INSTRUCTIONS

Double DIN Mount Applications

1. Attach the left and right side brackets to the main frame. See figure C below.
2. Cut and remove center rib from main frame and file edges smooth.
3. Follow steps 4-7 from single ISO instructions on page 3. (See note #2 below)
4. Remove factory pocket from factory radio mounting brackets & re-attach to lower mounting brackets of HONK836 kit using factory screws.
5. Attach a rear support bracket to the rear of the radio components and adjust as needed to allow rear support bracket to rest in the sub-dash.

NOTE: 1) ISO trim ring (DITR836) must be used in place of after-market radio's trim rings. For ISO mount applications, mount after-market radio components to side brackets using screws provided with radio when possible or hardware included with kit.
2) Spacers must read upright (This side up for DBL ISO install).

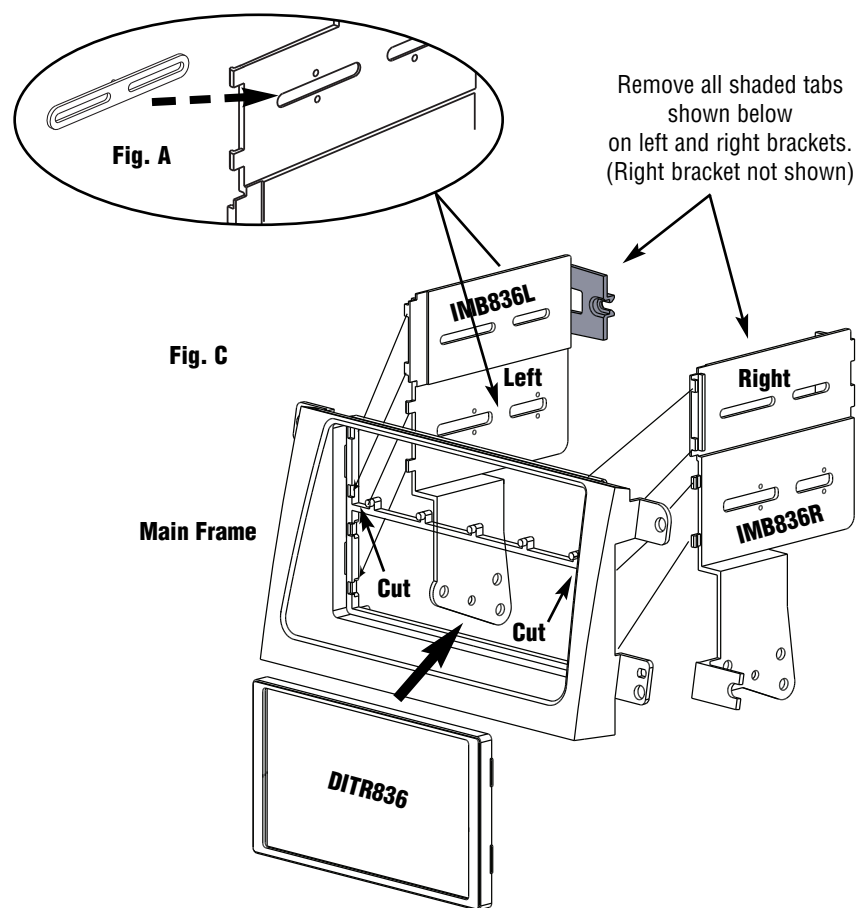

**American
International**
Car Stereo Installation Kits & Accessories



HONK836 Mounting Kit

VEHICLE APPLICATIONS

Honda
2006-14 RIDGELINE

CUSTOMER HELP LINE

USA 800-323-4329 • Canada 800-245-8777

iHONK836

©2014 AMERICAN INTERNATIONAL INDUSTRIES, INC.

TECH Ver. 01/15 PRINT Ver. 01/15


DASH DISASSEMBLY INSTRUCTIONS

1. Engage the parking brake.
2. Lower the steering column all the way down.
3. Carefully unfasten and pull outward the entire Radio/Dash trim bezel, disconnect all harnesses attached to the rear of the dash trim bezel and remove bezel.
4. Remove the (5) Phillips screws securing the radio/pocket assembly to the sub-dash.
5. Carefully pull radio assembly forward, disconnect all harnesses and the antenna lead from the rear of the radio and remove radio assembly.

KIT ASSEMBLY INSTRUCTIONS

Single DIN Mount Applications

1. Attach the left and right side brackets to the main bracket. See Figure B opposite page.
2. Insert pocket (part # POC836) into upper section of the main frame.
3. Attach left and right side brackets to the rear of the pocket using screws supplied.
4. Insert DIN sleeve from your new radio into the lower section of the installation kit.
5. Depress the tabs from inside the sleeves opening upward, outward, and downward to secure sleeve to the installation kit.
6. Install radio into sleeve and lock into place.
7. Attach a rear support bracket to the rear of the new radio and adjust as necessary to attach to the rear support stud located on the back of the pocket using the small phillips screw supplied with kit.
8. Remove factory pocket from factory radio mounting brackets & re-attach to lower mounting brackets of HONK836 kit using factory screws.

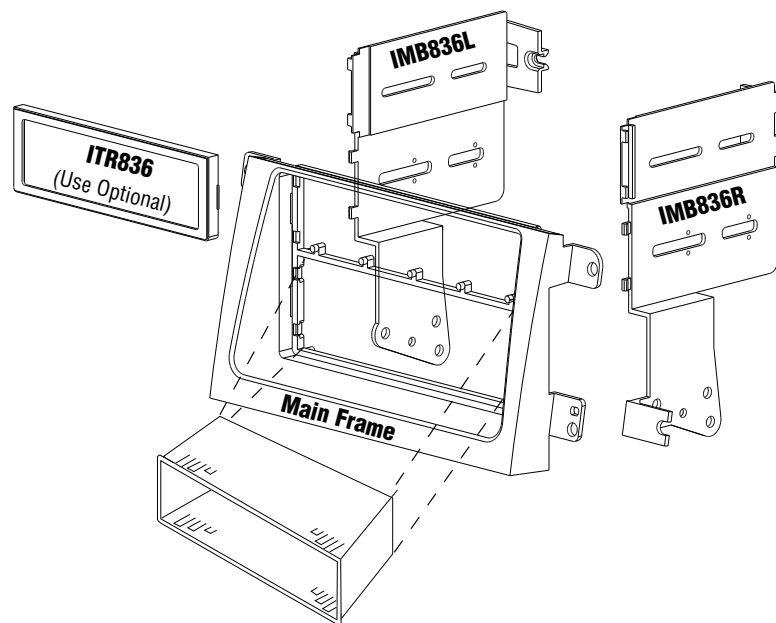

KIT ASSEMBLY INSTRUCTIONS

Single ISO Mount Applications

1. Attach the left and right side brackets to the main bracket. See Figure B below.
2. Insert pocket (part # POC836) into upper section of the main frame.
3. Attach left and right side brackets to the rear of the pocket using screws supplied.
4. Attach (1) ISO Spacer to the inside of lower section on both Left & Right mounting brackets as shown in Fig. A below. (See note #2 below)
5. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or hardware included with kit.
Note: Use larger screws for lower ISO mount location only.
6. Slide radio component forward or backward for desired look and tighten screws.
7. Attach a rear support bracket to the rear of the new radio and adjust as necessary to attach to the rear support stud located on the back of the pocket using the small phillips screw supplied with kit.

NOTE: 1) ISO trim ring (ITR836) may be used in place of after-market radio's removable trim ring.
2) Spacers must read upright (This side up for single ISO install).

