




SBK927 Mounting Kit

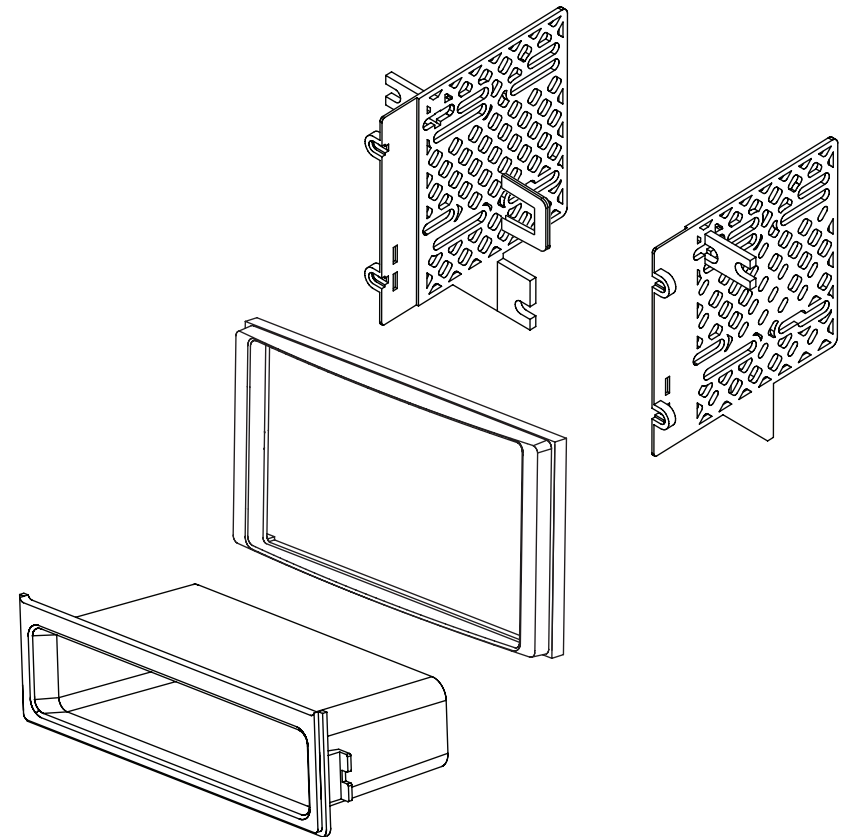

www.aampglobal.com www.aius.net
2500 East Francis Street Ontario, CA 91761, U.S.A.
Sales: (800) 477-2267
Intl: (727) 572-9255
Support: 888-228-5560

VEHICLE APPLICATION

Subaru	
2014-15	FORESTER
2012-14	IMPREZA
2015	WRX
2013-14	XV CROSSTREK

DASH DISASSEMBLY


1. Lower and remove glove box.
2. On the passenger and drivers side disconnect the HVAC cables, located in the lower console, behind removable panel(s).
3. Carefully using a soft tool pry radio dash panel loose.
4. Disconnect the (2) HVAC harnesses and the (1) hazard button harness.
5. Remove panel including the HVAC controls.
6. Remove (4) Phillips screws from radio mounting brackets.
7. Remove Radio, unplug harness(s) and antenna cables.

INSTALLATION INSTRUCTIONS

Single ISO Mount Applications

1. Insert left and right mounting brackets to rear of kit as shown in Figure A and secure to rear of kit fascia using (4) small phillips screws included in kit.
2. Insert pocket into lower section of kit from rear & lock into slots of mounting brackets.
3. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
4. Slide radio forward or backward for desired look and tighten screws.
5. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (Optional)

Fig. A

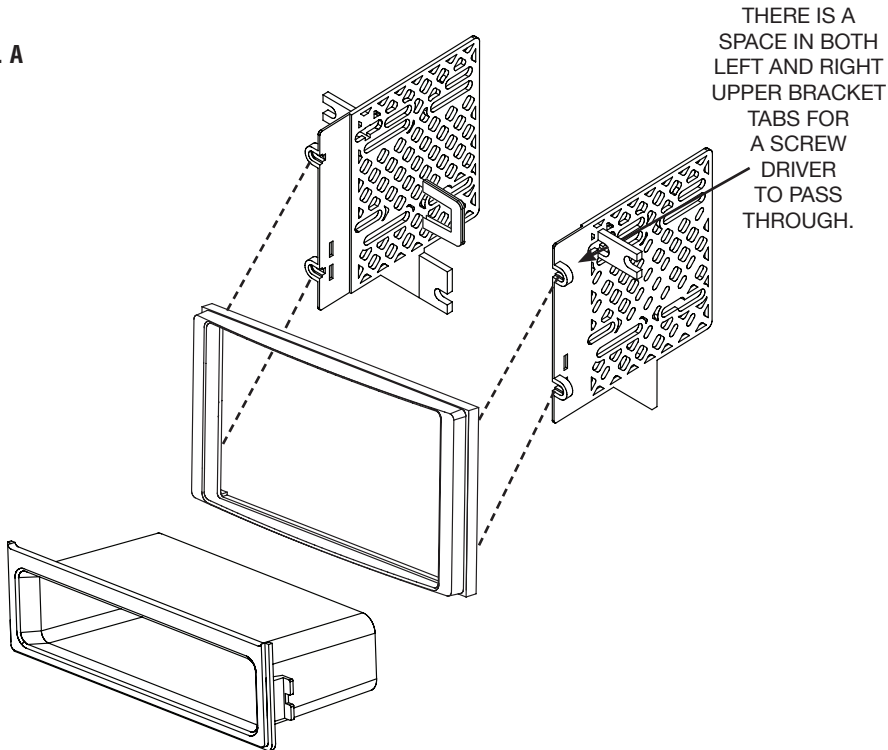

Double ISO Mount Applications

1. Insert IMB927 L&R into rear of kit & attach using 4 screws supplied w/kit.
2. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or hardware included with kit.
3. Slide radio component forward or backward for desired look and tighten screws.
4. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (optional).

**Remove shaded tabs
on left and right sides
of the brackets**

Fig. B

