

Mecca


Hob Basin Mixer Set

Arc Spout

Nero




Lead Free

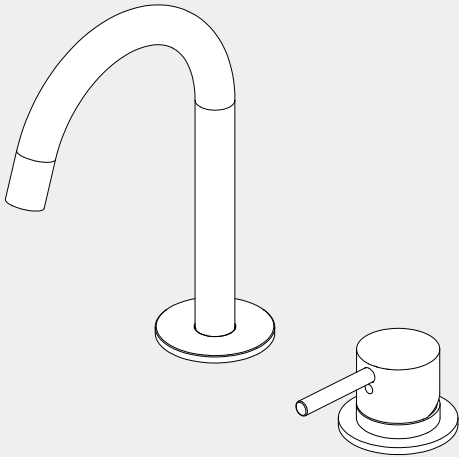

Version:202606

Drawing

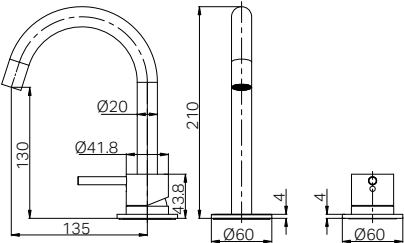

Specifications

Watermark License

WM-060073

Temperature Rating

Min 1 °C - Max 75 °C

Pressure Rating

Min 150 kpa - Max 500 kpa

Finish & SKU

 **Chrome**
NR221901gCH

 **Brushed Nickel**
NR221901gBN

 **Matte White**
NR221901gMW

 **Gun Metal**
NR221901gGM

 **Matte Black**
NR221901gMB

 **Rome Bronze**
NR221901gRB

 **Brushed Bronze**
NR221901gBZ

 **Brushed Gold**
NR221901gBG

 **Tumbled Antique Brass**
NR221901gTA

Packaging Includes

- 1x Spout
- 1x Handle
- (including 3 flexible hoses)
- 1x Installation Kits

*Dimensions are nominal measurements only.


INSTALLATION INSTRUCTIONS


GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian / New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.


MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.

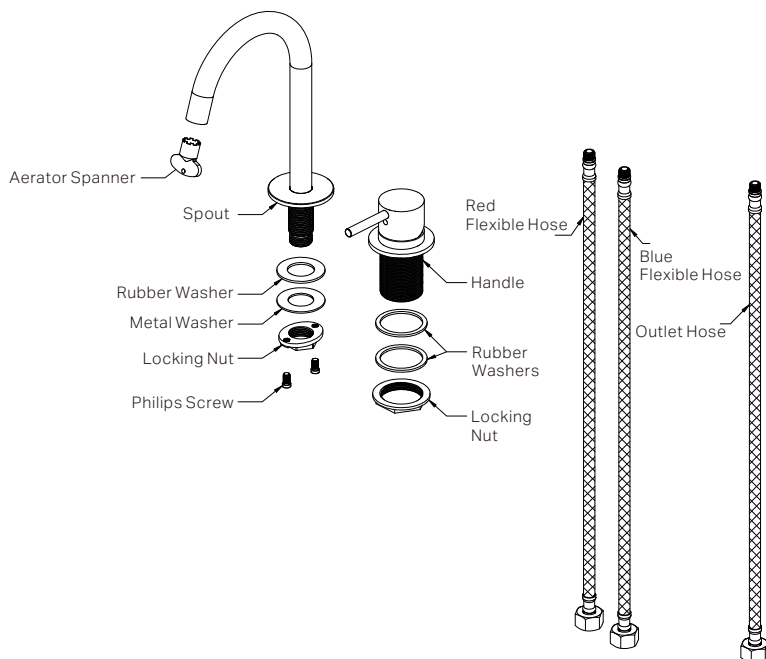


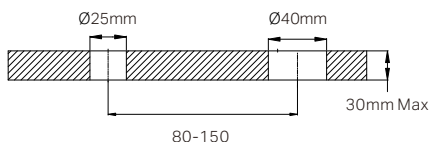


1. Drill two holes in the benchtop ($\varnothing 25\text{ mm}$ and $\varnothing 40\text{ mm}$) with spacing of 80–150 mm. Ensure bench thickness $\leq 30\text{ mm}$.

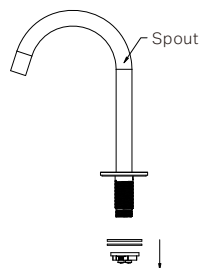


2. Remove the locking nut, metal washer, and rubber washer from the spout.

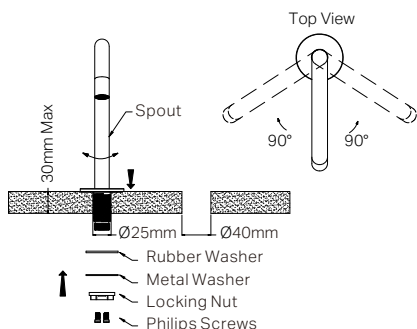


3. Rotate the spout to the midpoint of its 180° swivel range. Insert the spout into the $\varnothing 25\text{ mm}$ mounting hole and align it towards the basin. Secure the spout from underneath as shown in the diagram above.

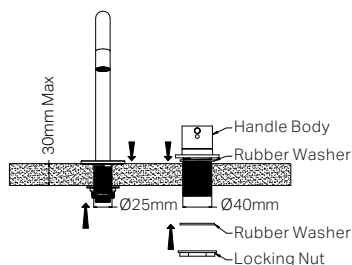

4. Insert the handle body through the $\varnothing 40\text{ mm}$ hole (ensure the rubber washer is positioned between the handle and benchtop). Fit the rubber washer and locking nut underneath the benchtop, then tighten securely to hold the handle in place.

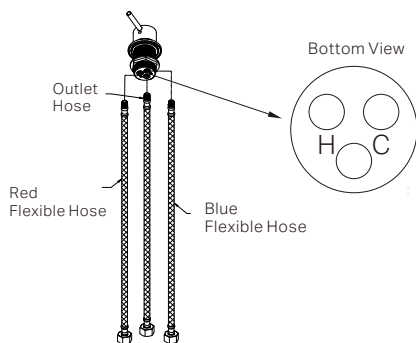

5. Install the three different flexible hoses into the corresponding holes on the handle body as shown in the diagram. Red-H, Blue-C.

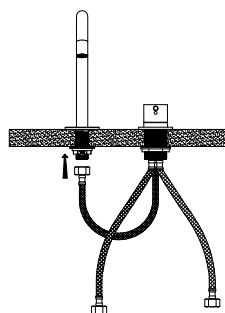

6. Connect the outlet hose to the spout. Ensure the red and blue flexible hoses are attached to the hot and cold angle valves.

Nero



Warranty Policy